

FLIR®

JCU-4

Installation & Operation Instructions

Document number: 71007 (Rev 3) | English (en-US) | Date: 03-2026 | Applicable software version: v2.0.12

Legal notices (FLIR)

Trademark and patents notice

FLIR, **Instalert**, **Infrared Everywhere**, **The World's Sixth Sense** and **ClearCruise** are registered or claimed trademarks of Teledyne FLIR LLC.
All other trademarks, trade names, or company names referenced herein are used for identification only and are the property of their respective owners.
This product is protected by patents, design patents, patents pending, or design patents pending.

Fair Use Statement

You may print no more than three copies of this manual for your own use. You may not make any further copies or distribute or use the manual in any other way including without limitation exploiting the manual commercially or giving or selling copies to third parties.

Content notice

Please ensure that you have obtained this document only from FLIR, and that it is the **latest** available version.
There are numerous third-party Internet websites (such as *www.manualslib.com*) hosting FLIR product manuals. These websites are not authorized by FLIR to do so, and are often hosting illegitimate or older versions of FLIR product manuals, which may contain inaccurate or misleading information.
To obtain the latest official documentation for a FLIR product, please visit the official FLIR website: www.marine.flir.com

Artificial Intelligence (AI) content notice

There are numerous third-party **Artificial Intelligence** (AI) services available to the public, which are capable of providing a summary or transcription of the information provided by official FLIR publications or websites, either in written or audio/video formats. These services may alter, supplement, or convey the original information provided by FLIR in inaccurate or misleading ways.
Please ensure that you have obtained this document only from FLIR, and that it is the **latest** available version.

English (en-US)
Document number: 71007 (Rev 3)
AC;80041;2026-03-02T16:02:48

CONTENTS

CHAPTER 1 IMPORTANT INFORMATION 10
- Safety warnings 10
- Product warnings 10
- Regulatory notices 11
  - Water ingress 11
  - Disclaimer 11
  - EMC installation guidelines 12
  - Suppression ferrites 12
  - Connections to other equipment 12
  - Declaration of Conformity 12
  - PSTI Compliance 13
  - Product disposal 13
  - Warranty policy and registration 13
  - IMO and SOLAS 13
  - Technical accuracy 13
  - Publication copyright 13

CHAPTER 2 DOCUMENT INFORMATION 14
- 2.1 Applicable products 15
- 2.2 Product documentation 15
  - Printed (hardcopy) product manuals 15
- 2.3 Document illustrations 15
- 2.4 Applicable software version 16

CHAPTER 3 SOFTWARE RELEASE SUMMARY 17
- 3.1 Introduction 18
- 3.2 JCU-4 v2.0.12 Release Notes (December 2025) 18

CHAPTER 4 PRODUCT AND SYSTEM OVERVIEW 20
- 4.1 Product overview 21
- 4.2 Required additional components 21
- 4.3 Compatible FLIR maritime cameras 22
- 4.4 System overview (example only) 22

CHAPTER 5 PARTS SUPPLIED 24
- 5.1 Parts supplied 25
- 5.2 Parts supplied (Joystick only) 25
- 5.3 Inline fuse requirement 25

CHAPTER 6 PRODUCT DIMENSIONS 27
- 6.1 Product dimensions 28

CHAPTER 7 LOCATION REQUIREMENTS 29
- 7.1 Warnings and cautions 30
- 7.2 General location requirements 30
- 7.3 Location requirements 30
- 7.4 EMC installation guidelines 30
- 7.5 Suppression ferrites 31
- 7.6 Connections to other equipment 31
- 7.7 Compass safe distance 31

CHAPTER 8 MOUNTING 32
- 8.1 Tools required 33
- 8.2 Mounting options 33
- 8.3 Removing the front cover 33
- 8.4 Retrofit mounting the unit 34
- 8.5 Surface mounting the unit 34
- 8.6 Fitting the front cover 35

CHAPTER 9 CABLES AND CONNECTIONS — GENERAL INFORMATION 36
9.1 General cabling guidance 37
Cable types and length 37
Cable routing and bend radius 37
Strain relief 37
Circuit isolation 37
Cable shielding 38
Bare-ended wire connections 38
Connecting cables 38
CHAPTER 10 NETWORK CONNECTIONS 39
10.1 Power options 40
Multiple power sources 40
10.2 Connections overview 40
10.3 System overview (example only) 41
Network cable extensions 41
CHAPTER 11 POE POWER CONNECTIONS 42
11.1 Power options 43
Multiple power sources 43
11.2 Power over Ethernet (PoE) 43
11.3 PSE (Power Sourcing Equipment) power connection 43
PoE network switch power connection 43
PoE injector power connection 44
11.4 Network cable extensions 44
CHAPTER 12 NON-POE POWER CONNECTIONS 45
12.1 Power options 46
Multiple power sources 46
12.2 Direct power connection 46
12.3 Inline fuse requirement 46
12.4 Inline fuse and thermal breaker ratings 47
12.5 Power distribution 47
12.6 Power cable extension (12 / 24 V systems) 49
12.7 Power cable drain wire connection 50
CHAPTER 13 OPERATION (M460-SERIES / M560-SERIES) 51
13.1 Controls overview 52
13.2 Powering on the unit 53
13.3 Startup wizard 53
System selection 53
Assigning a static IP address 54
Assigning a netmask 54
13.4 Camera detection 55
13.5 Controlled camera 55
Status icons 55
13.6 Main menu 56
Select camera 56
Power down 56
Brightness 57
Camera focus 57
13.7 JCU settings 58
Shortcut keys 58
Joystick mode 61
Controllable cameras 61
Installation 62

About this device 62
Settings reset 62
Factory reset 63

CHAPTER 14 OPERATION (M400-SERIES / M500-SERIES) 64
14.1 Controls overview 65
14.2 Powering on the unit 66
14.3 Startup wizard 66
System selection 66
Assigning a static IP address 67
Assigning a netmask 67
14.4 Camera detection 68
14.5 Controlled camera 68
Status icons 68
14.6 Main menu 69
Select camera 69
Power down 70
Brightness 70
Camera focus 71
14.7 JCU settings 71
Shortcut keys 72
Joystick mode 72
Controllable cameras 72
Installation 72
About this device 73
Settings reset 73
Factory reset 74
14.8 Ready to track 74
14.9 Spotlight on 74
14.10 User programmable buttons (UPBs) 75
Programming UPBs via the Web interface 75
Programming UPBs via the On-Screen Display (OSD) menu 75

CHAPTER 15 OPERATION (M300-SERIES) 77
15.1 Controls overview 78
15.2 Powering on the unit 79
15.3 Startup wizard 79
System selection 79
Assigning a static IP address 80
Assigning a netmask 80
15.4 Camera detection 81
15.5 Controlled camera 81
Status icons 81
15.6 Main menu 82
Select camera 82
Power down 82
Brightness 83
Camera focus 83
15.7 JCU settings 83
Shortcut keys 84
Joystick mode 84
Controllable cameras 85
Installation 85
About this device 85
Settings reset 86
Factory reset 86
15.8 User programmable buttons (UPBs) 87

Programming UPBs via the Web interface 87
Programming UPBs via the On-Screen Display (OSD) menu 87

CHAPTER 16 OPERATION (M100-SERIES / M200-SERIES) 88
16.1 Controls overview 89
16.2 Powering on the unit 90
16.3 Startup wizard 91
System selection 91
Assigning a static IP address 91
Assigning a netmask 92
16.4 Camera detection 92
16.5 Controlled camera 92
16.6 Main menu 92
Select camera 93
Power down 93
Brightness 94
Camera focus 94
16.7 JCU settings 94
Shortcut keys 95
Joystick mode 95
Controllable cameras 95
Installation 96
About this device 96
Settings reset 96
Factory reset 97
16.8 User programmable buttons (UPBs) 97
Programming UPBs via the Web interface 97

CHAPTER 17 OPERATION (MD-SERIES) 99
17.1 Controls overview 100
17.2 Powering on the unit 101
17.3 Startup wizard 101
System selection 101
Assigning a static IP address 102
Assigning a netmask 102
17.4 Camera detection 103
17.5 Controlled camera 103
17.6 Main menu 103
Select camera 104
Power down 104
Brightness 104
Camera focus 105
17.7 JCU settings 105
Shortcut keys 106
Joystick mode 106
Controllable cameras 106
Installation 107
About this device 107
Settings reset 107
Factory reset 108
17.8 User programmable buttons (UPBs) 108
Programming UPBs via the On-Screen Display (OSD) menu 108

CHAPTER 18 CONFIGURATION VIA WEB INTERFACE 110

18.1 Web browser user interface overview 111
18.2 Logging in to the Web browser user interface 111
IP address discovery 112
18.3 Web browser user interface 112
Product information page 112
Setup page 113
Diagnostics page 116

CHAPTER 19 MAINTENANCE 117
19.1 Service and maintenance 118
19.2 Routine equipment checks 118
19.3 Cleaning the unit 118

CHAPTER 20 SYSTEM CHECKS AND TROUBLESHOOTING 119
20.1 Troubleshooting 120
20.2 PoE power connection troubleshooting 120
20.3 Non-PoE power connection troubleshooting 121
20.4 System data troubleshooting 122
20.5 Miscellaneous troubleshooting 122

CHAPTER 21 SUPPORT AND SERVICING 123
21.1 FLIR Maritime technical support and servicing 124

CHAPTER 22 TECHNICAL SPECIFICATION 125
22.1 Physical specification 126
22.2 Power specification 126
22.3 Network specification 126
22.4 Display specification 126
22.5 Environmental specification 126
22.6 Conformance specification 126

CHAPTER 23 SPARES AND ACCESSORIES 127
23.1 Spares and accessories 128
23.2 FLIR networking accessories 129
23.3 RayNet to RayNet cables and connectors 131
23.4 RayNet to RJ45, and RJ45 (SeaTalk HS) adapter cables 133

APPENDIX A SOFTWARE RELEASE HISTORY 135

CHAPTER 1: IMPORTANT INFORMATION

Safety warnings



Warning: Product installation and operation

• This product must be installed and operated in accordance with the instructions provided. Failure to do so could result in personal injury, damage to your vessel and/or poor product performance.

• Certified installation by an approved installer is recommended. A certified installation qualifies for enhanced product warranty benefits. Contact your dealer for further details.



Warning: Potential ignition source

This product is NOT approved for use in hazardous/flammable atmospheres. Do NOT install in a hazardous/flammable atmosphere (such as in an engine room or near fuel tanks).



Warning: Switch off power supply

Ensure that the vessel's power supply is switched OFF before starting to install this product. Do NOT connect or disconnect equipment with the power switched on, unless instructed to do so in this document.



Warning: High voltage

This product contains high voltage. Do NOT remove covers or attempt to access internal components, unless specifically instructed in the documentation provided.



Warning: Ensure safe navigation

This product is intended only as an aid to navigation and must never be used in preference to sound navigational judgment. Only official government charts and notices to mariners contain all the current information needed for safe navigation, and the captain is responsible for their prudent use. It is the user's responsibility to use official government charts, notices to mariners, caution and proper navigational skill when operating this or any other product.



Warning: Maintain a permanent watch

Always maintain a permanent watch, this will allow you to respond to situations as they develop. Failure to maintain a permanent watch puts yourself, your vessel and others at serious risk of harm.

Product warnings



Warning: Product grounding

Before applying power to this product, it MUST be correctly grounded, in accordance with the instructions provided.



Warning: Positive ground systems

Do NOT connect this unit to a system which has positive grounding.



Warning: Power supply voltage

Connecting this product to a voltage supply greater than the specified maximum rating may cause permanent damage to the unit. For the correct voltage, refer to the information label affixed to the product.

Warning: Ensure all equipment has isolated power supply

This product has an isolated power supply. To prevent potential damage to equipment, it is recommended that any external equipment connected to this product also has an isolated power supply.

Caution: Power supply protection

When installing this product, ensure that the power source is adequately protected by means of a suitably-rated fuse or thermal circuit breaker.

Caution: Sun covers

- Sun covers are used to protect the display screen against the damaging effects of ultraviolet (UV) light. If your product is supplied with a sun cover always ensure it is fitted when the product is not in use.
- To avoid potential loss of the sun cover, ensure that the sun cover is removed when travelling at high speed, whether in the water or when the vessel is being towed.
- To avoid potential screen damage, ensure that the rear surface of the sun cover and the display screen are clean and free from debris before placing the sun cover on the screen.

Caution: Do not open the unit

The unit is factory sealed to protect against atmospheric humidity, suspended particulates and other contaminates. It is important that you do not open the unit or remove the casing for any reason. Opening the unit will:

- compromise the seal with possible damage to the unit, and
- void the manufacturer's warranty.

Caution: Service and maintenance

This product contains no user serviceable components. Please refer all maintenance and repair to authorized FLIR dealers. Unauthorized repair may affect your warranty.

Regulatory notices

Water ingress

Water ingress disclaimer

Although the waterproof rating capacity of this product meets the stated standard (refer to the product's *Technical Specification*), water intrusion and subsequent equipment failure may occur if the product is not installed correctly or subjected to commercial high-pressure washing. FLIR will not warrant products subjected to high-pressure washing.

Disclaimer

FLIR does not warrant that this product is error-free or that it is compatible with products manufactured by any person or entity other than FLIR.

FLIR is not responsible for damages or injuries caused by your use or inability to use the product, by the interaction of the product with products manufactured by others, or by errors in information utilized by the product supplied by third parties.

Third-party hardware, such as converters, adapters, routers, switches, Access Points etc., provided by third parties, may be made available directly to you by other companies or individuals under separate terms and conditions, including separate fees and charges. Teledyne FLIR LLC or its affiliates have not tested or screened the third-party hardware.

FLIR has no control over, and is not responsible for:

- (a) the content and operation of such third-party hardware; or:
- (b) the privacy or other practices of such third-party hardware.

The fact that FLIR's documentation may make reference to such third-party hardware does not indicate any approval or endorsement of any such third-party hardware. FLIR may reference such third-party hardware only as a convenience.

THIS INFORMATION IS MADE AVAILABLE BY FLIR ON THE BASIS THAT YOU EXCLUDE TO THE FULLEST EXTENT LAWFULLY PERMITTED ALL LIABILITY WHATSOEVER FOR ANY LOSS OR DAMAGE HOWSOEVER ARISING OUT OF THE USE OF THIS INFORMATION OR RELIANCE UPON THIS INFORMATION.

FLIR does not exclude **FLIR**'s liability (if any) to you for personal injury or death resulting from **Teledyne FLIR LLC** negligence, for fraud or for any matter which it would be illegal to exclude or to attempt to exclude.

EMC installation guidelines

FLIR equipment and accessories conform to the appropriate Electromagnetic Compatibility (EMC) regulations, to minimize electromagnetic interference between equipment and minimize the effect such interference could have on the performance of your system.

Correct installation is required to ensure that EMC performance is not compromised.

Note:
In areas of extreme EMC interference, some slight interference may be noticed on the product. Where this occurs the product and the source of the interference should be separated by a greater distance.

For **optimum** EMC performance we recommend that wherever possible:

- FLIR equipment and cables connected to it are:
  - At least 1 m (3.3 ft) from any equipment transmitting or cables carrying radio signals e.g. VHF radios, cables and antennas. In the case of SSB radios, the distance should be increased to 2 m (6.6 ft).
  - More than 2 m (6.6 ft) from the path of a radar beam. A radar beam can normally be assumed to spread 20 degrees above and below the radiating element.
- The product is supplied from a separate battery from that used for engine start. This is important to prevent erratic behavior and data loss which can occur if the engine start does not have a separate battery.
- FLIR specified cables are used.
- Cables are not cut or extended, unless doing so is detailed in the installation manual.

Note:
Where constraints on the installation prevent any of the above recommendations, always ensure the maximum possible separation between different items of electrical equipment, to provide the best conditions for EMC performance throughout the installation.

Suppression ferrites

- Cables may be pre-fitted or supplied with suppression ferrites. These are important for correct EMC performance. If ferrites are supplied separately to the cables (i.e. not pre-fitted), you must fit the supplied ferrites, using the supplied instructions.
- If a ferrite has to be removed for any purpose (e.g. installation or maintenance), it must be replaced in the original position before the product is used.
- Use only ferrites of the correct type, supplied by the manufacturer or its authorized dealers.
- Where an installation requires multiple ferrites to be added to a cable, additional cable clips should be used to prevent stress on the connectors due to the extra weight of the cable.
- If your installation requires long cable runs, you may need to fit additional ferrites to maintain acceptable EMC performance.

Connections to other equipment

Requirement for ferrites on non-FLIR cables:

If your FLIR equipment is to be connected to other equipment using a cable not supplied by FLIR, a suppression ferrite MUST always be attached to the cable near the FLIR unit.

For more information, refer to your third-party cable manufacturer.

Declaration of Conformity

Raymarine UK Ltd (FLIR) declares that the products listed below are in conformity with the relevant sections of the listed designated standards and / or other normative documents:

- JCU-4 *Joystick Control Unit* (with cables), part number: E70695
- JCU-4 *Joystick Control Unit* (Joystick only), part number: E70697

Region	Standard	Mark
UK	EMC Regulations 2016	UKCA
EU	EMC Directive 2014/30/EU	CE

The original Declaration of Conformity certificate may be viewed on the relevant product page at www.bit.ly/JCU-4-docs

PSTI Compliance

For products sold into the United Kingdom (UK), use the following link to obtain the product's Statement of Compliance with the *Product Security and Telecommunications Infrastructure* (PSTI) Regulations:


Visit the following web address and enter the product's model name or number (SKU) into the provided search field:

- www.bit.ly/rym-sec-com

Product disposal

Dispose of this product in accordance with the WEEE Directive.

The Waste Electrical and Electronic Equipment (WEEE) Directive requires the recycling of waste electrical and electronic equipment which contains materials, components and substances that may be hazardous and present a risk to human health and the environment when WEEE is not handled correctly.

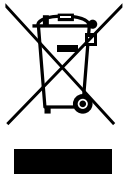

Equipment marked with the crossed-out wheeled bin symbol indicates that the equipment should not be disposed of in unsorted household waste.
Local authorities in many regions have established collection schemes under which residents can dispose of waste electrical and electronic equipment at a recycling center or other collection point.
For more information about suitable collection points for waste electrical and electronic equipment in your region, refer to the Raymarine website:
https://bit.ly/rym-recycling

Warranty policy and registration

Visit the Raymarine / FLIR Maritime website to **read the latest warranty policy**, and **register** your product's warranty online:
www.bit.ly/rym-warranty

It is important that you register your product to receive full warranty benefits. Your product package includes a barcode label indicating the serial number of the unit. This serial number is also provided on a label affixed to the product itself. You will need this serial number when registering your product online.

IMO and SOLAS

The equipment described within this document is intended for use on leisure marine boats and workboats NOT covered by International Maritime Organization (IMO) and Safety of Life at Sea (SOLAS) Carriage Regulations.

Technical accuracy

To the best of our knowledge, the information in this document was correct at the time it was produced. However, FLIR cannot accept liability for any inaccuracies or omissions it may contain. In addition, our policy of continuous product improvement may change specifications without notice. As a result, FLIR cannot accept liability for any differences between the product and this document. Please check the FLIR website (www.flir.com/marine/support) to ensure you have the most up-to-date version(s) of the documentation for your product.

Publication copyright

Copyright © 2026 Teledyne FLIR LLC. All rights reserved. No parts of this material may be copied, translated, or transmitted (in any medium) without the prior written permission of Teledyne FLIR LLC.

CHAPTER 2: DOCUMENT INFORMATION

CHAPTER CONTENTS

- 2.1 Applicable products — page 15
- 2.2 Product documentation — page 15
- 2.3 Document illustrations — page 15
- 2.4 Applicable software version — page 16

2.1 Applicable products

This document is applicable to the following products:

- JCU-4, part number: E70695
- JCU-4 (Joystick only), part number: E70697

2.2 Product documentation

The following documentation is applicable to your product:

Applicable documents:

Part number	Description
71007	JCU-4 Installation and Operation Instructions (this document)
77011	JCU-4 Mounting Template

Related documents:

Part number	Description
432–0010–00–10	MD-Series Camera Operation Instructions
71001	M100-Series / M200-Series Installation and Operation Instructions
71004	M300-Series Thermal Camera Installation and Operation Instructions
432–0012–02–10	M400-Series Camera Operation Instructions
432–0012–01–10	M500-Series Camera Operation Instructions
71006	M460-Series / M560-Series Installation and Operation Instructions

Printed (hardcopy) product manuals

All applicable user documentation for your product is available on our website to view or download free-of-charge. If you would prefer a **printed** (hardcopy) product manual, a Print Shop service is available, enabling you to purchase a high-quality, professionally-printed manual for your product, delivered directly to your door.

Printed manuals are ideal for keeping onboard your vessel, as a useful source of reference whenever you need assistance with your product.

Printed manuals are provided by a third-party (**Lulu Press**).

To order a printed manual, use the Lulu Press website link provided below. The manual will then be printed and delivered to the address you specify. Once an order is placed, it typically takes Lulu Press approximately 5 to 10 working days to print and deliver a printed manual.

Supplier	How to purchase
lulu	1. Click the following link. 2. In the displayed search field, enter the required document number, e.g. *81406* www.bit.ly/rym-printshop

Note:

- Accepted methods of payment for printed manuals are credit cards and PayPal.
- Printed manuals can be shipped worldwide.

2.3 Document illustrations

While every effort is made to ensure that the illustrations provided in this publication accurately reflect the final released product, due to editorial and production lead times, your product — and if applicable — its user interface, may differ slightly from the illustrations provided in this document, depending on product variant and date of manufacture.

All images are provided for illustration purposes only.

2.4 Applicable software version

Product software is updated regularly to add new features and improve existing functionality.

This document has been updated to reflect the following software version:

Product	Software version
JCU-4	v2.0.12

Check the website for the latest software:

JCU-4 software download link
www.bit.ly/jcu4-download

CHAPTER 3: SOFTWARE RELEASE SUMMARY

CHAPTER CONTENTS

- 3.1 Introduction — page 18
- 3.2 JCU-4 v2.0.12 Release Notes (December 2025) — page 18

3.1 Introduction

Details of new features and improvements that have been included in the latest JCU-4 software release are detailed here.

These details also appear inline in the relevant chapters of the *JCU-4 Installation & Operation Instructions* (Document number: 71007). You may need to refer to these chapters to understand the full context of the feature.

For more information on the new features and improvements which have been introduced, refer to the following section that is applicable to your FLIR maritime camera variant:

- **p.51 — Operation (M460-Series / M560-Series)**
- **p.64 — Operation (M400-Series / M500-Series)**
- **p.77 — Operation (M300-Series)**
- **p.88 — Operation (M100-Series / M200-Series)**
- **p.99 — Operation (MD-Series)**

3.2 JCU-4 v2.0.12 Release Notes (December 2025)

The following changes have been implemented in release v2.0.12 of the JCU-4's software: The changes may include New features, Improvements and Bug fixes.

To download the latest software release visit:

JCU-4 software download link
www.bit.ly/jcu4-download

New features:

New features
A startup wizard has been added which enables you to configure the type of system the JCU-4 is connected to, as well as the JCU-4's IP address type, IP address and netmask.
Support for M460-Series / M560-Series cameras has been added.
Camera status icons have been added to the *[Controlled camera]* screen (viewable when controlling an M300-Series / M400-Series / M460-Series / M500-Series / M560-Series camera).

New features
A *[Main menu]* navigation page has been added which enables you to access the existing *[Select camera]*, *[Power down]*, *[Brightness]* and *[Camera focus]* screens, as well as a new *[JCU settings]* screen.
A *[Night]* mode color palette option has been added to the *[Brightness]* screen.
A *[JCU settings]* navigation page has been added which enables you to access the new *[Shortcut keys]*, *[Joystick mode]*, *[Cameras]*, *[Installation]*, *[About]*, *[Settings reset]* and *[Factory reset]* screens.
The ability to assign shortcut actions to the JCU-4's softkey buttons (when an M460-Series / M560-Series camera is being controlled) has been added. These actions can be assigned via either the new *[Shortcut keys]* screen, or, the new Web browser user interface *[Softkey]* menu.
The ability to configure which direction your camera tilts when the JCU-4's joystick is moved up and down has been added. This can be configured via either the new *[Joystick mode]* screen, or, the new Web browser user interface *[Joystick]* menu.
The ability to configure which compatible FLIR maritime cameras on your network can be controlled by the JCU-4 has been added. This can be configured via the new *[Cameras]* screen.
An alternate method of reconfiguring the JCU-4's IP network parameters has been added. These parameters can now also be changed via the new *[Installation]* screen.
The ability to view additional information related to the JCU-4 has been added. This information can be viewed via the new *[About]* screen.
An alternate method of resetting the JCU-4's settings (excluding any configured IP network parameters) has been added. These settings can now also be reset via the new *[Settings reset]* screen.
An alternate method of resetting the JCU-4's settings (including any configured IP network parameters) has been added. These settings can now also be reset via the new *[Factory reset]* screen.
A *[Spotlight on]* notification screen has been added which appears when the spotlight of a controlled M400-Series / M460-Series / M500-Series / M560-Series camera is enabled.

New features
The ability to initiate a controlled M460-Series / M560-Series camera's object tracking system has been added. This can be initiated via either the *[Video tracking]* joystick button, or, the new *[Ready to track]* screen.
The ability to trigger a controlled M460-LRF (30 Hz) / M560-LRF (30 Hz) camera's laser range finder (LRF) has been added. This can be triggered via the new *[Ready to range]* screen.
The ability has been added to view event log information that can be used by FLIR technical support to help diagnose and troubleshoot issues experienced with your unit. This information can be viewed via the new Web browser user interface *[Diagnostics]* page.

General improvements:

Improvements
Responsiveness improved of the manual focus options available via the *[Camera focus]* screen.
Control improved of the brightness options available via the *[Brightness]* screen.


CHAPTER 4: PRODUCT AND SYSTEM OVERVIEW

CHAPTER CONTENTS

- 4.1 Product overview — page 21
- 4.2 Required additional components — page 21
- 4.3 Compatible FLIR maritime cameras — page 22
- 4.4 System overview (example only) — page 22

4.1 Product overview

The JCU-4 joystick control unit is an ultra-compact wired remote keypad designed to control single or multiple FLIR maritime cameras without the use of an additional control interface, such as a multifunction display / chartplotter. With two power options (Direct power and Power over Ethernet (PoE)) and the ability to be retrofitted to an existing FLIR JCU-1 or JCU-2 cut-out, the JCU-4 is ideal for providing control of your camera(s) from the required location(s) onboard your vessel.

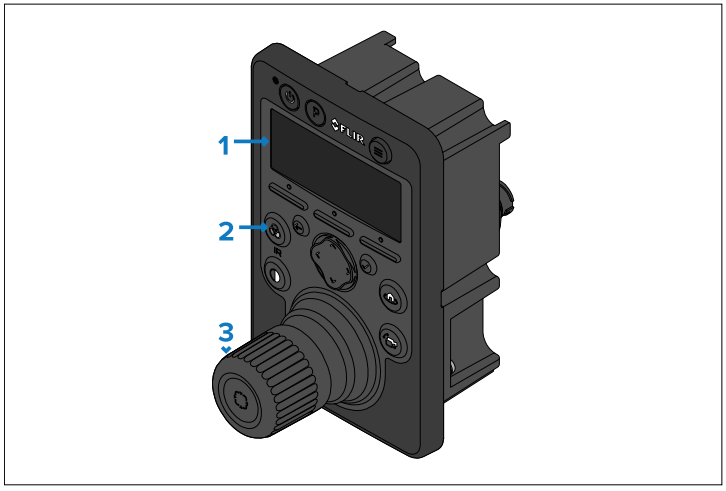

1. LCD screen.
2. Keypad buttons.
3. Joystick.

The JCU-4 has the following key functions and features:

- IP connectivity to simplify installation and system integration.
- 2.9" backlit LCD screen for displaying camera information and menu options.
- 12 interactive buttons — includes 3 user-programmable buttons, which can be re-assigned via either:
  - The camera's Web interface (applies when controlling an MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M500-Series camera).
  - The JCU-4's *[Shortcut keys]* screen (applies when controlling an M460-Series / M560-Series camera).
- An 8-way navigational pad which is used to navigate the JCU-4's menus, the camera's *[On-screen Display]* menus, and can optionally be used to pan and tilt the selected camera.
- Dedicated 3-axis joystick control which can be used to pan, tilt, and zoom (PTZ) the selected camera, and enter an M400XR / M460-Series / M500-Series / M560-Series into *[Ready to track]* mode.
- Can be retrofitted to the mounting cutout of an existing FLIR JCU-1 or JCU-2.
- Supports direct power connection @ 12 / 24 V dc nominal supply voltage, or Class 2 Power over Ethernet (PoE) @ 48 V nominal supply voltage.
- Low power consumption — 5 W maximum at full illumination.
- Dedicated secondary RayNet (Ethernet) connector for configuration and diagnostic purposes.
- Waterproof to IPx6 (suitable for above or below decks installation).

4.2 Required additional components

This product forms part of a system of electronics and requires some or all of the following additional system components in order to fully function.

Component	Examples	Refer to:
Power Sourcing Equipment (PSE) (Only if powering JCU-4 via PoE).	• PoE Injector • PoE network switch	**p.127 — Spares and accessories**
Compatible FLIR maritime camera	• M100-Series • M200-Series • M300-Series	For a full list of all compatible cameras, refer to: **p.22 — Compatible FLIR maritime cameras**

Component	Examples	Refer to:
Ethernet network switch (Required in larger systems featuring multiple IP devices)	• 10/100/1000 Mbits/s network switches featuring RayNet connectors. • 10/100/1000 Mbits/s network switches featuring RJ45 connectors.	**p.127 — Spares and accessories**
Cable extensions	Network extension cables featuring RayNet or RJ45 connectors, as appropriate.	**p.41 — Network cable extensions**

4.3 Compatible FLIR maritime cameras

Your product can be used in conjunction with the following FLIR maritime cameras:


Camera series	Camera models
M560-Series:	M560 (30 Hz), M560-LRF (30 Hz)
M500-Series:	M500
M460-Series:	M460 (30 Hz), M460-LRF (30 Hz)
M400-Series:	M400, M400XR
M300-Series:	M300, M332, M364, M364 C, M364 LR
M200-Series:	M232
M100-Series:	M132
MD-Series:	MD324, MD625

4.4 System overview (example only)

The JCU-4 has a flexible array of connection options which enable you to integrate it with your electronics system.

With the right combination of devices and connections, you can use the JCU-4 to control a connected FLIR maritime camera's image from the most convenient locations on your vessel.

The following illustration shows a typical installation scenario. For more system configuration examples, ranging from small to large systems, refer to your FLIR maritime camera *Installation and Operation Instructions* manual: www.bit.ly/FLIR-maritime-docs

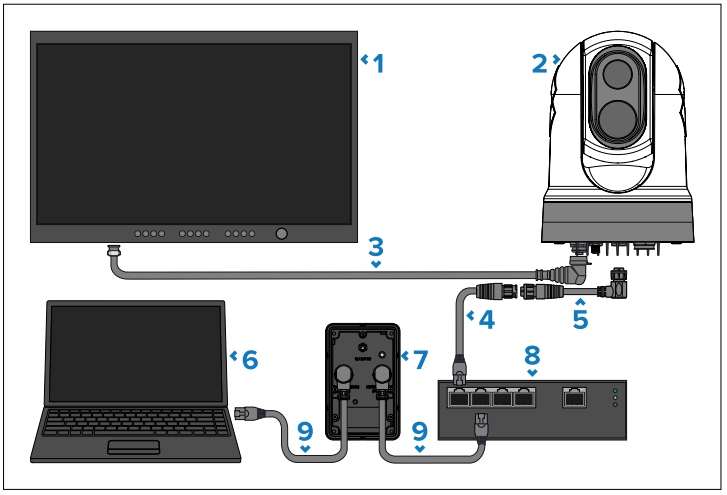

Note:
Power connections are not shown in this illustration. For power connection information, refer to the instructions which accompany each device.

	Description
1	Digital video (SDI) monitor, available separately from third-party retailers.
2	M300-Series camera, available separately.
3	SDI video cable (BNC connectors), available separately.
4	RayNet (Ethernet) to RJ45 adapter cable, available separately.
5	Right-angled RayNet (Ethernet) to RayNet (Ethernet) cable, available separately.
6	Laptop — primarily intended for configuration and diagnostic purposes, available separately from third-party retailers.

	Description
7	JCU-4.
8	Non-PoE network switch, available separately from third-party retailers.
9	3 m (9.84 ft) Right-angled RayNet (Ethernet) to RJ45 adapter cable (1x supplied with E70695).


CHAPTER 5: PARTS SUPPLIED

CHAPTER CONTENTS

- 5.1 Parts supplied — page 25
- 5.2 Parts supplied (Joystick only) — page 25
- 5.3 Inline fuse requirement — page 25

5.1 Parts supplied


The following parts are supplied when ordering the JCU-4, part number: E70695

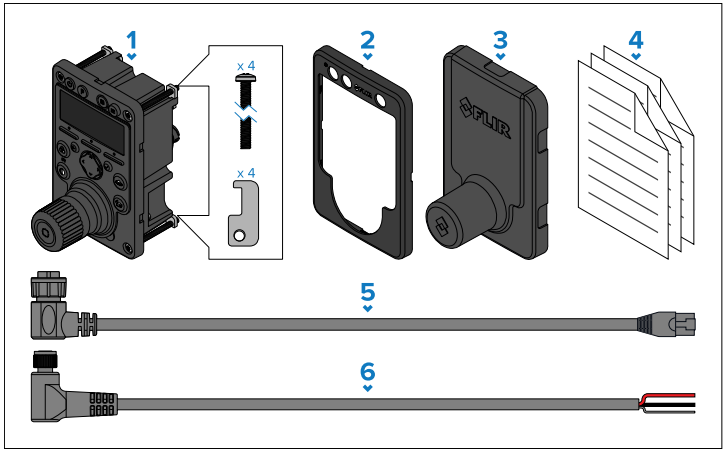

	Description
1	1x JCU-4 (includes 4x screws and 4x mounting plates pre-fitted).
2	1x Front cover.
3	1x Weather cover.
4	1x Documentation pack.
5	1x Right-angled RayNet (Ethernet) to RJ45 adapter cable, 3 m (9.84 ft).
6	1x Right-angled 3-pin power cable, 3 m (9.84 ft).

5.2 Parts supplied (Joystick only)

The following parts are supplied when ordering the JCU-4 (Joystick only), part number: E70697

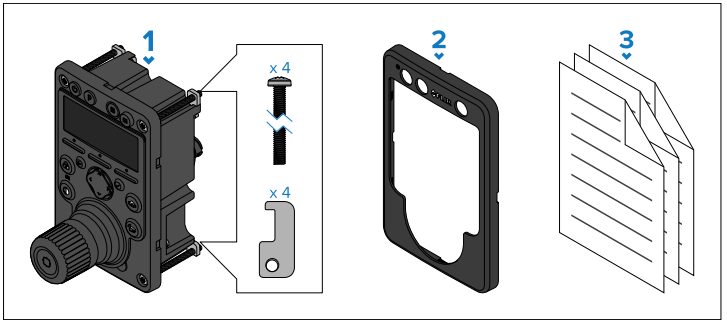


	Description
1	1x JCU-4 (includes 4x screws and 4x mounting plates pre-fitted).
2	1x Front cover.
3	1x Documentation pack.

5.3 Inline fuse requirement

If your product is NOT supplied with an inline fuse (whether separately or fitted to the power cable), you MUST fit a suitably-rated inline fuse to your product's red power wire, housed in a waterproof fuse holder.

The illustration below shows the two main types of inline fuse with waterproof holder, for use in marine electronics installations. Fuses in a variety of ratings are widely available at chandleries and marine electrical retailers.
Select one of the following fuse types to protect your product:

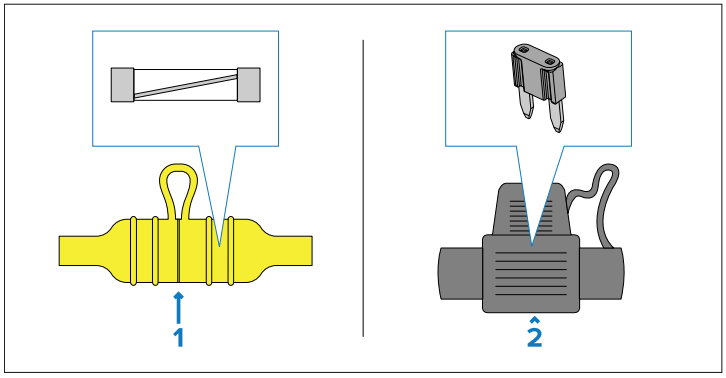

1. Waterproof fuse holder containing a “glass”-type inline fuse.
2. Waterproof fuse holder containing a “blade”-type inline fuse.

Fuse ratings:


- *Voltage rating* — must be equal to or greater than the voltage of your vessel’s power supply.
- *Current rating* — refer to the *Inline fuse and thermal breaker rating* section in this document.

CHAPTER 6: PRODUCT DIMENSIONS

CHAPTER CONTENTS

- 6.1 Product dimensions — page 28

6.1 Product dimensions

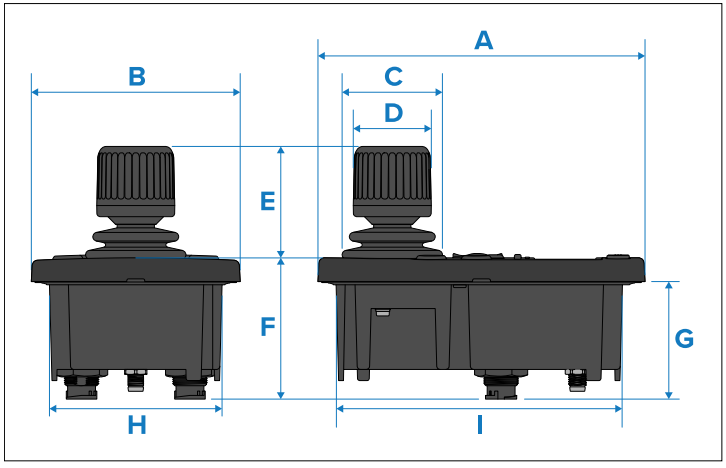

	Description
A	146.66 mm (5.77 in)
B	93.66 mm (3.69 in)
C	44.99 mm (1.77 in)
D	35.00 mm (1.38 in)
E	49.94 mm (1.97 in)
F	63.36 mm (2.49 in)
G	52.71 mm (2.08 in)
H	77.50 mm (3.05 in)
I	130.00 mm (5.12 in)

CHAPTER 7: LOCATION REQUIREMENTS

CHAPTER CONTENTS

- 7.1 Warnings and cautions — page 30
- 7.2 General location requirements — page 30
- 7.3 Location requirements — page 30
- 7.4 EMC installation guidelines — page 30
- 7.5 Suppression ferrites — page 31
- 7.6 Connections to other equipment — page 31
- 7.7 Compass safe distance — page 31

7.1 Warnings and cautions

Important:
Before proceeding, ensure that you have read and understood the warnings and cautions provided in the following section of this document:

• **p.10 — Important information**



Warning: Potential ignition source

This product is NOT approved for use in hazardous/flammable atmospheres. Do NOT install in a hazardous/flammable atmosphere (such as in an engine room or near fuel tanks).

7.2 General location requirements

When selecting a location for your product it is important to consider a number of factors.

Factors for consideration:

- **Ventilation** — To ensure adequate airflow:
  - Ensure that product is mounted in a compartment of suitable size.
  - Ensure that ventilation holes are not obstructed. Allow adequate separation of all equipment.

  Any specific requirements for each system component are provided later in this chapter.
- **Mounting surface** — Ensure product is adequately supported on a secure surface. Do not mount units or cut holes in places which may damage the structure of the vessel.
- **Cabling** — Ensure the product is mounted in a location which allows proper routing, support and connection of cables:
  - Minimum bend radius of 100 mm (3.94 in) unless otherwise stated.
  - Use cable clips to prevent stress on connectors.
  - If your installation requires multiple ferrites to be added to a cable then additional cable clips should be used to ensure the extra weight of the cable is supported.
- **Water ingress** — The product is suitable for mounting both above and below decks. Although the unit is waterproof, it is good practice to locate it in a protected area away from prolonged and direct exposure to rain and salt spray.
- **Electrical interference** — Select a location that is far enough away from devices that may cause interference, such as motors, generators and radio transmitters / receivers.
- **Power supply** — Select a location that is as close as possible to the vessel's DC power source. This will help to keep cable runs to a minimum.

7.3 Location requirements

When planning the installation location, consider the following points:

- Select a position on your vessel that is close to a display showing the camera video output.
- Before mounting the unit, consider the required minimum cable lengths and cable routing options available.
- Ensure the unit is mounted at least 200 mm (7.9 in.) away from any equipment fitted with a magnetic compass.
- The unit must be mounted in the vertical (portrait) orientation.
- The unit must NOT be mounted higher than 2 m (6.56 ft.) above the floor level at your selected mounting location.

7.4 EMC installation guidelines

FLIR equipment and accessories conform to the appropriate Electromagnetic Compatibility (EMC) regulations, to minimize electromagnetic interference between equipment and minimize the effect such interference could have on the performance of your system.

Correct installation is required to ensure that EMC performance is not compromised.

Note:
In areas of extreme EMC interference, some slight interference may be noticed on the product. Where this occurs the product and the source of the interference should be separated by a greater distance.

For **optimum** EMC performance we recommend that wherever possible:

- FLIR equipment and cables connected to it are:
  - At least 1 m (3.3 ft) from any equipment transmitting or cables carrying radio signals e.g. VHF radios, cables and antennas. In the case of SSB radios, the distance should be increased to 2 m (6.6 ft).
  - More than 2 m (6.6 ft) from the path of a radar beam. A radar beam can normally be assumed to spread 20 degrees above and below the radiating element.
- The product is supplied from a separate battery from that used for engine start. This is important to prevent erratic behavior and data loss which can occur if the engine start does not have a separate battery.
- FLIR specified cables are used.
- Cables are not cut or extended, unless doing so is detailed in the installation manual.

Note:
Where constraints on the installation prevent any of the above recommendations, always ensure the maximum possible separation between different items of electrical equipment, to provide the best conditions for EMC performance throughout the installation.

7.5 Suppression ferrites

- Cables may be pre-fitted or supplied with suppression ferrites. These are important for correct EMC performance. If ferrites are supplied separately to the cables (i.e. not pre-fitted), you must fit the supplied ferrites, using the supplied instructions.
- If a ferrite has to be removed for any purpose (e.g. installation or maintenance), it must be replaced in the original position before the product is used.
- Use only ferrites of the correct type, supplied by the manufacturer or its authorized dealers.
- Where an installation requires multiple ferrites to be added to a cable, additional cable clips should be used to prevent stress on the connectors due to the extra weight of the cable.
- If your installation requires long cable runs, you may need to fit additional ferrites to maintain acceptable EMC performance.

7.6 Connections to other equipment

Requirement for ferrites on non-FLIR cables:

If your FLIR equipment is to be connected to other equipment using a cable not supplied by FLIR, a suppression ferrite MUST always be attached to the cable near the FLIR unit.

For more information, refer to your third-party cable manufacturer.

7.7 Compass safe distance

To prevent potential interference with the vessel's magnetic compasses, ensure an adequate distance is maintained from the product.

When choosing a suitable location for the product, you must aim to maintain a distance of **at least** 200 mm (7.9 in.) in all directions from any compasses.

For some smaller vessels it may not be possible to locate the product this far away from a compass. In this situation, when choosing the installation location for your product, ensure that the compass is not affected by the product when it is in a powered on state.


CHAPTER 8: MOUNTING

CHAPTER CONTENTS

- 8.1 Tools required — page 33
- 8.2 Mounting options — page 33
- 8.3 Removing the front cover — page 33
- 8.4 Retrofit mounting the unit — page 34
- 8.5 Surface mounting the unit — page 34
- 8.6 Fitting the front cover — page 35

8.1 Tools required

The following tools are required for installation.

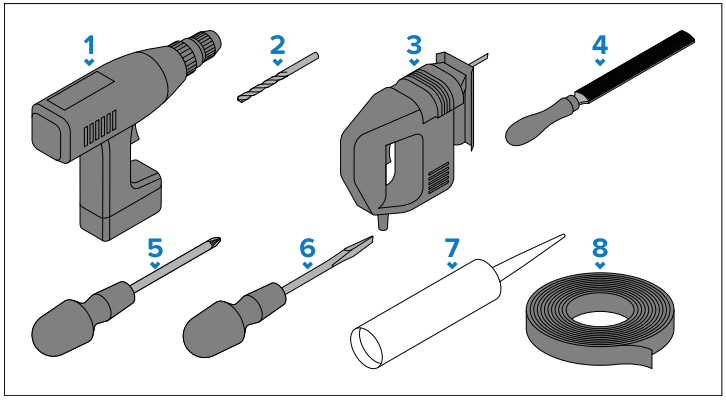

1. (1) Power drill.
2. (1) Drill bit (currently illustrated) or hole cutter of an appropriate size for the 6.0 mm (0.24 in) surface mount corner diameter cutout line (appropriate size dependent on thickness and material of mounting surface).
3. (1) Jigsaw.
4. (1) Half round file (or sandpaper).
5. Pozidrive screwdriver.
6. Flathead screwdriver.
7. Marine grade sealant.
8. Masking / self adhesive tape.

Note:
(1) Items are only required when surface mounting the display.

8.2 Mounting options


The unit can be mounted in 2 different ways, depending on your preferred installation method:

1. **Retrofit mounting** — this method should be used when the unit is being retrofitted to the mounting cutout of an existing FLIR JCU-1 or JCU-2.
2. **Surface mounting** — this method should be used when the unit is NOT being fitted to a pre-existing mounting cutout.

Note:
Both mounting methods provide an installation where the product protrudes by the thickness of the bezel from the mounting surface.

8.3 Removing the front cover

To gain access to the mounting hole locations, the front cover must first be removed.

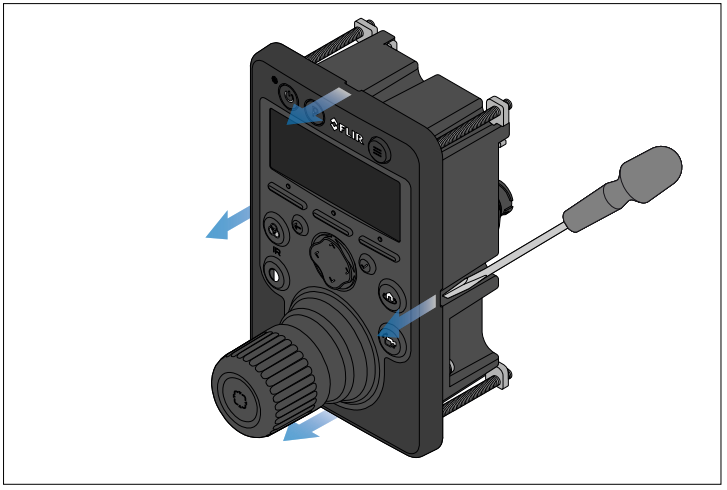

Note:
To help prevent scratching the product, cover the tip of your screwdriver blade with a small piece of insulation tape.


1. Using a thin flat-bladed screwdriver, insert the tip of the screwdriver into an available notch (as indicated above) between the edge of the front cover and the keypad mat.
2. Gently push the front cover away from the unit to release the cover.

   Take care not to bend the front cover during removal.

8.4 Retrofit mounting the unit

The unit can be retrofitted to the mounting cutout of an existing FLIR JCU-1 or JCU-2. Follow the steps listed below to retrofit the unit.

Note:
It may be necessary to use a marine-grade sealant if the mounting surface is not entirely flat and stiff, or if the surface has a rough finish.

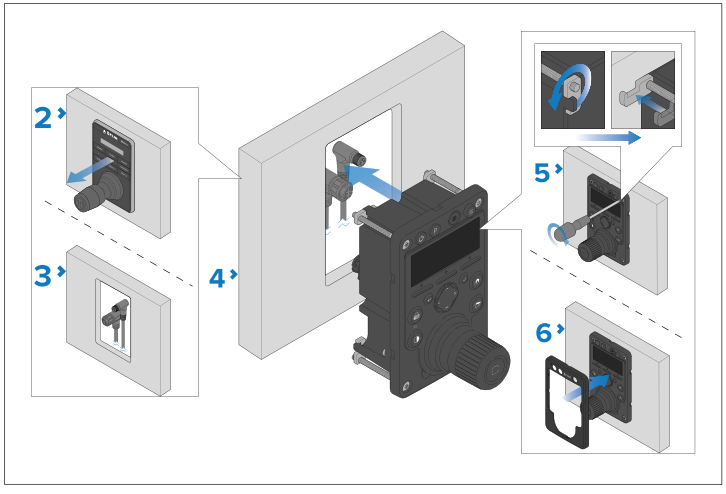

1. Check the selected location for the unit. A clear, flat area with suitable clearance behind the mounting surface is required. If this is not possible, consider creating a new cutout for the unit by following the steps found in the following section: **p.34 — Surface mounting the unit**
2. Remove the pre-existing JCU-1 / JCU-2 unit and fixings from the mounting surface cutout.
3. Depending on your cable routing plan, either:
   - Remove the existing JCU-1 / JCU-2's RJ45-to-RJ45 Ethernet cable, then route the appropriate supplied cables behind the mounting surface cutout; OR:
   - Connect the existing JCU-1 / JCU-2's RJ45-to-RJ45 Ethernet cable to a RayNet (female) to RJ45 (female) adapter cable (available separately).

   This may be difficult or not possible once the unit has been mounted.
4. With the front cover removed, connect the cables to your unit through the mounting surface cutout, then insert the unit into the cutout.
5. Using a suitable pozihead screwdriver, tighten the pre-fitted screws until the mounting plates attached to the screws are secure against the mounting surface.
6. Fit the front cover to the unit by following the instructions in the following section: **p.35 — Fitting the front cover**


Warning: Marine-grade sealant

Only use marine-grade neutral cure polyurethane sealants. Do NOT use sealants containing acetate or silicone, which can cause damage to plastic parts.

8.5 Surface mounting the unit

Follow the steps listed below to surface mount the unit.

Note:
It may be necessary to use a marine-grade sealant if the mounting surface is not entirely flat and stiff, or if the surface has a rough finish.

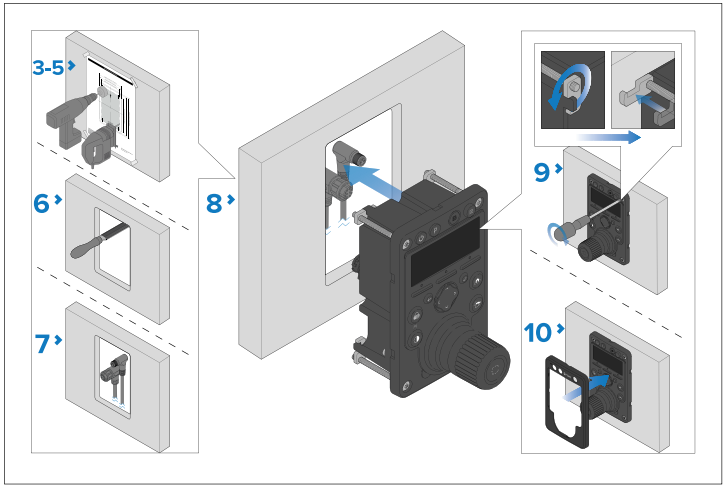


1. Check the selected location for the unit. A clear, flat area with suitable clearance behind the panel is required.
2. Before modifying the mounting surface, refer to the dimensions supplied in this document to ensure there is enough space for the unit and all cables.
3. Fix the supplied mounting template to the selected location, using masking or self adhesive tape.
4. Use a drill and an appropriate size drill bit or hole cutter to cut out the corners of the cutout line. The corner diameter for the unit is 6 mm (0.24 in).
5. Use a jigsaw or similar cutting tool to cut out the remainder of the cutout area.
6. Ensure that the unit fits into the removed area and then remove rough edges.
7. Route the appropriate supplied cables behind the mounting surface cutout.

   This may be difficult or not possible once the unit has been mounted.
8. With the front cover removed, connect the cables to your unit through the mounting surface cutout, then insert the unit into the cutout.
9. Using a suitable pozihead screwdriver, tighten the pre-fitted screws until the mounting plates attached to the screws are secure against the mounting surface.
10. Fit the front cover to the unit by following the instructions found in the following section: **p.35 — Fitting the front cover**

> **Warning: Marine-grade sealant**
>
> Only use marine-grade neutral cure polyurethane sealants. Do NOT use sealants containing acetate or silicone, which can cause damage to plastic parts.

8.6 Fitting the front cover

The keypad mat should be fitted once the unit has been secured to the mounting surface.

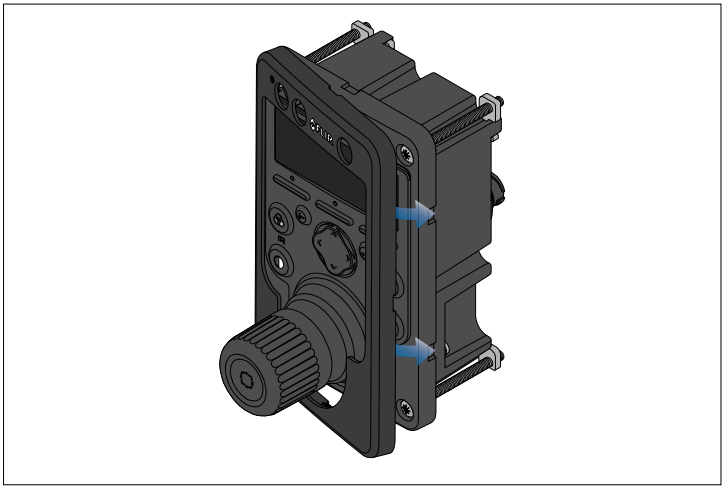

1. Ensure the front cover is correctly orientated.
2. Starting with one of the longer edges, place the front cover over the keypad mat and gently push down so that the long edge is in position.
3. Gently push the opposite long edge of the front cover down until it is in position.
4. Once the front cover is in position, firmly push along all edges of the front cover until it is secure.

CHAPTER 9: CABLES AND CONNECTIONS — GENERAL INFORMATION

CHAPTER CONTENTS

- 9.1 General cabling guidance — page 37

9.1 General cabling guidance

Cable types and length


It is important to use cables of the appropriate type and length.

- Unless otherwise stated use only standard cables of the correct type, supplied by FLIR.
- Ensure that any non-FLIR cables are of the correct quality and gauge. For example, longer power cable runs may require larger wire gauges to minimize voltage drop along the run.

Cable routing and bend radius

To maximize cable performance and lifespan, it's important to ensure that all cables are routed correctly and adequate space is provided to allow for each cable's minimum bend radius.

Minimum cable bend radius

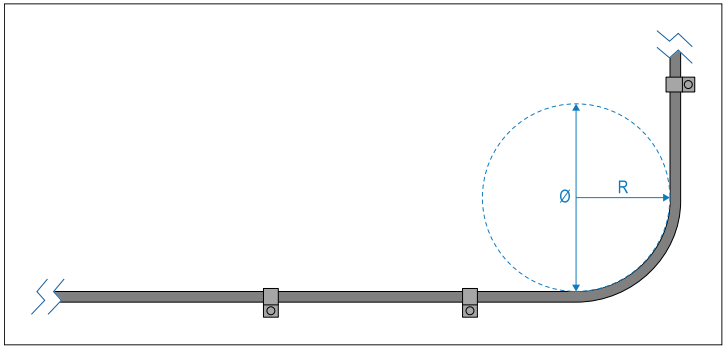

Do NOT bend cables excessively. Wherever possible, ensure that your chosen product installation location allows enough clearance for the minimum cable bend diameter specified in the following table:

	Description	Value
Ø	Cable minimum bend **diameter**.	200 mm (7.87 in.)
R	Cable minimum bend **radius**.	100 mm (3.94 in.)

Note:
For products where multiple different cable types are connected, each with a different minimum cable bend radius, the higher figure is provided in the table above (i.e. the cable with the greatest minimum bend radius is specified).

Cable routing — best practices

- Protect all cables from physical damage and exposure to heat. Use trunking or conduit where possible. Do NOT run cables through bilges or doorways, or close to moving or hot objects.
- Secure cables in place using cable clips or cable ties. Coil any excess cable and tie it out of the way.
- Where a cable passes through an exposed bulkhead or deckhead, use a suitable watertight feed-through (conduit).
- Do NOT run cables near to engines or fluorescent lights.
- Always route data cables as far away as possible from:
  - Other equipment and cables.
  - High current-carrying AC and DC power lines.
  - Antennas.

Strain relief

Use adequate strain relief for cabling to ensure that connectors are protected from strain and will not pull out under extreme sea conditions.

Circuit isolation

Appropriate circuit isolation is required for installations using both AC and DC current:

- Always use isolating transformers or a separate power-inverter to run PCs, processors, displays and other sensitive electronic instruments or devices.
- If using Weather FAX audio cables, always use an isolating transformer.
- If using a third-party audio amplifier, always use an isolated power supply.
- If using an RS232/NMEA converter, always ensure optical isolation on the signal lines.
- Always ensure that PCs or other sensitive electronic devices have a dedicated power circuit.

Cable shielding

Ensure that cable shielding is not damaged during installation and that all cables are properly shielded.

Important:
Be aware that some **third-party** cables and adapters (for example, certain Ethernet cables using RJ45 connectors) are not always shielded. To prevent breaks in cable shielding continuity and potential grounding issues, special attention is required to ensure that any cables, extension cables, adapters, or other signal-coupling devices used in cable runs **maintain all shield connections throughout the cable run**.

Bare-ended wire connections

You must ensure that any bare-ended wires are adequately protected from short circuit and water ingress.

Bare-ended wire connections

It is recommended that bare-ended wire connections are made by soldering or using crimp connectors, and then protected by wrapping the connection in electrical insulation tape.

Unused bare-ended wires

Any unused bare-ended wires should be folded back and wrapped in electrical insulation tape.

Connecting cables

Follow the steps below to connect the cable(s) to your product.

1. Ensure that the vessel's power supply is switched off.
2. Ensure that the device being connected has been installed in accordance with the installation instructions supplied with that device.
3. Ensuring correct orientation, push cable connectors fully onto the corresponding connectors.
4. Engage any locking mechanism to ensure a secure connection (e.g.: turn locking collars clockwise until tight, or in the locked position).
5. Ensure any bare ended wire connections are suitably insulated to prevent shorting and corrosion due to water ingress.

CHAPTER 10: NETWORK CONNECTIONS

CHAPTER CONTENTS

- 10.1 Power options — page 40
- 10.2 Connections overview — page 40
- 10.3 System overview (example only) — page 41

10.1 Power options

This product must be powered using **only one** of the following methods:

1. **PoE (Power over Ethernet)**
   - Direct connection to a PSE (*Power Sourcing Equipment*) device, e.g. a PoE Injector or a PoE network switch. Only one Ethernet cable is required to carry both data and power signals.
2. **Self-powered (*"direct / dedicated / alternate power connection"*)**
   - Direct connection to a vessel's power supply using the supplied power cable.


Multiple power sources

Product behavior when connected to more than one power supply.

Important:
If a direct power connection is made to **both** the vessel's power supply (via the JCU-4's 3-pin power connection) **and** a PSE device (via the JCU-4's PoE connection) **at the same time**, the JCU-4 will automatically default to the vessel's power supply as its sole power source.

10.2 Connections overview

The JCU-4 includes the following connections:

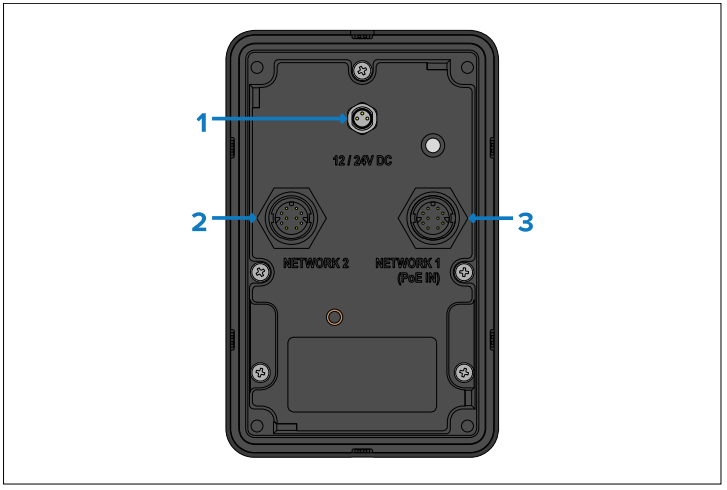


Connector	Suitable cables
1) Power (Only required if PoE is not used). Connects to: • 12 / 24 V dc power supply	• Right-angled power supply cable, 1x supplied.
2) 10/100/1000 Mbits/s RayNet (Ethernet) **This connection is intended for configuration and diagnostic purposes only.** Connects to: • RayNet (Ethernet) network device. • RJ45 network device.	• Right-angled RayNet (Ethernet) to RJ45 adapter cable, 1x supplied with E70695, or available separately. • Right-angled RayNet (Ethernet) to RayNet (Ethernet) cable, available separately.
3) 10/100/1000 Mbits/s PoE RayNet (Ethernet) • RayNet (Ethernet) network device. • RJ45 network device.	• Right-angled RayNet (Ethernet) to RJ45 adapter cable, 1x supplied with E70695, or available separately. • Right-angled RayNet (Ethernet) to RayNet (Ethernet) cable, available separately.

10.3 System overview (example only)

The JCU-4 has a flexible array of connection options which enable you to integrate it with your electronics system.

With the right combination of devices and connections, you can use the JCU-4 to control a connected FLIR maritime camera's image from the most convenient locations on your vessel.

The following illustration shows a typical installation scenario. For more system configuration examples, ranging from small to large systems, refer to your FLIR maritime camera *Installation and Operation Instructions* manual: www.bit.ly/FLIR-maritime-docs

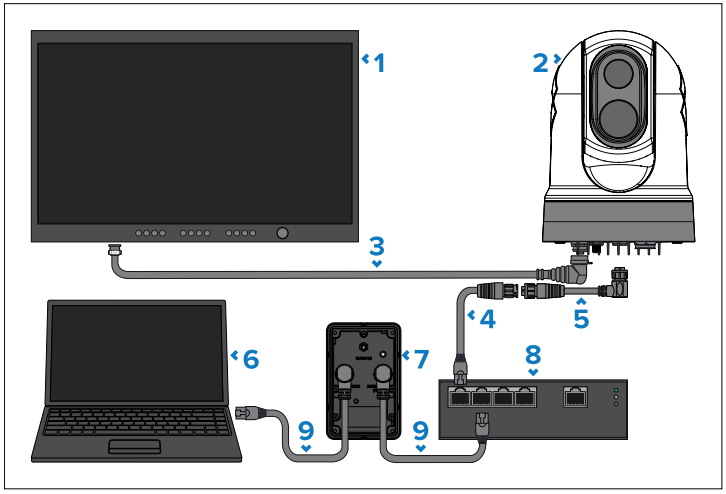

Note:
Power connections are not shown in this illustration. For power connection information, refer to the instructions which accompany each device.

	Description
1	Digital video (SDI) monitor, available separately from third-party retailers.
2	M300-Series camera, available separately.
3	SDI video cable (BNC connectors), available separately.
4	RayNet (Ethernet) to RJ45 adapter cable, available separately.
5	Right-angled RayNet (Ethernet) to RayNet (Ethernet) cable, available separately.
6	Laptop — primarily intended for configuration and diagnostic purposes, available separately from third-party retailers.
7	JCU-4.
8	Non-PoE network switch, available separately from third-party retailers.
9	3 m (9.84 ft) Right-angled RayNet (Ethernet) to RJ45 adapter cable (1x supplied with E70695).

Network cable extensions

If you wish to extend the length of a network cable connected to your product, refer to the following section for further information:
p.127 — Spares and accessories

CHAPTER 11: POE POWER CONNECTIONS

CHAPTER CONTENTS

- 11.1 Power options — page 43
- 11.2 Power over Ethernet (PoE) — page 43
- 11.3 PSE (Power Sourcing Equipment) power connection — page 43
- 11.4 Network cable extensions — page 44

11.1 Power options

This product must be powered using **only one** of the following methods:

1. **PoE (Power over Ethernet)**
   - Direct connection to a PSE (*Power Sourcing Equipment*) device, e.g. a PoE Injector or a PoE network switch. Only one Ethernet cable is required to carry both data and power signals.
2. **Self-powered (*"direct / dedicated / alternate power connection"*)**
   - Direct connection to a vessel's power supply using the supplied power cable.

Multiple power sources

Product behavior when connected to more than one power supply.

Important:
If a direct power connection is made to **both** the vessel's power supply (via the JCU-4's 3-pin power connection) **and** a PSE device (via the JCU-4's PoE connection) **at the same time**, the JCU-4 will automatically default to the vessel's power supply as its sole power source.

11.2 Power over Ethernet (PoE)

Power over Ethernet (PoE) is a system which allows both power and data to be passed along a single CAT 6 Ethernet cable.

There are 2 main types of PoE device:

- **Power Sourcing Equipment (PSE)** — this **PoE** system component provides electrical power over a CAT 6 **Ethernet** cable.
- **Powered Device (PD)** — this **PoE** system component is powered by the electrical power provided by the Power Sourcing Equipment (PSE).

The JCU-4 is a Class 2 Powered Device (PD) with a 48 V nominal supply voltage, which consumes 5 W maximum (at full illumination). Before connecting the JCU-4, ensure that your Power Sourcing Equipment (PSE)'s maximum power output will not be surpassed. For further information on your PSE's maximum power output, refer to the instructions that accompany the device.

11.3 PSE (Power Sourcing Equipment) power connection


The JCU-4 can be powered via a PSE's (Power Sourcing Equipment) Ethernet connection.

The following section will provide 2 different PSE (Power Sourcing Equipment) connection examples:

- **p.43 — PoE network switch power connection**
- **p.44 — PoE injector power connection**

PoE network switch power connection

In the following example, the PSE (*Power Sourcing Equipment*) providing power to the JCU-4 is the FLIR 8-port Gigabit Network Switch (part number: 4230175).

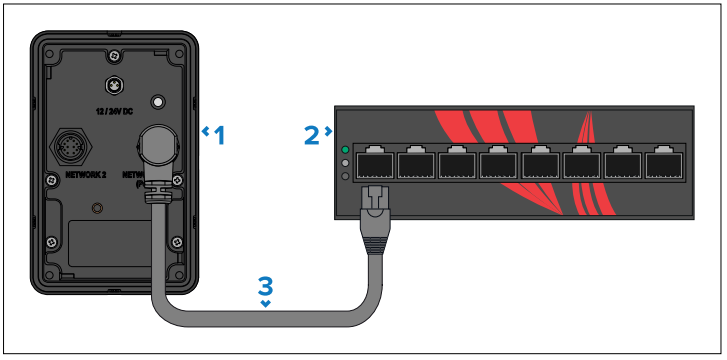


Important:
Any device supplying PoE (Power over Ethernet) to the JCU-4 must output a nominal supply voltage in the range of 44 to 57 V dc.

	Description
1	JCU-4.
2	PSE (*Power Sourcing Equipment*) providing PoE (Power over Ethernet) to the JCU-4 (e.g. PoE network switch is shown in the example above, available separately).
3	3 m (9.84 ft) Right-angled RayNet (Ethernet) to RJ45 adapter cable, 1x supplied with E70695, or available separately.

PoE injector power connection

In the following example, the PSE (*Power Sourcing Equipment*) providing power to the JCU-4 is the FLIR PoE Injector (2nd Generation; 5 Gbit) (part number: A80811).

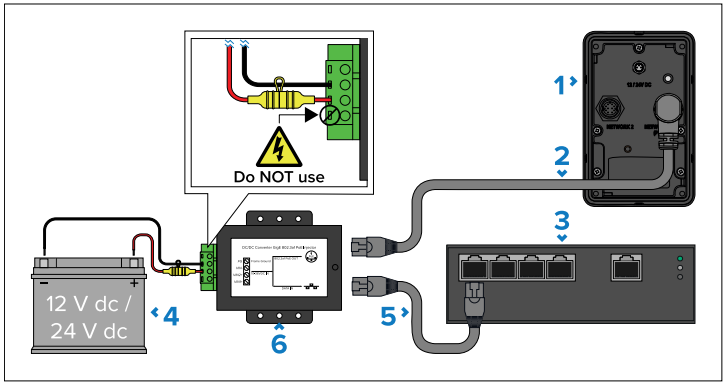

Important:
If powering the JCU-4 via the separately-available PoE Injector (2nd Generation; 5 Gbit) (A80811), do NOT connect the power input labelled "*VIN1+*" on the PoE Injector.

Important:
Any device supplying PoE (Power over Ethernet) to the JCU-4 must output a nominal supply voltage in the range of 44 to 57 V dc.

	Description
1	JCU-4.
2	3 m (9.84 ft) Right-angled RayNet (Ethernet) to RJ45 adapter cable, 1x supplied with E70695, or available separately.
3	Non-PoE network switch, available separately from third-party retailers.
4	12 / 24 V dc power supply — providing power to the PoE Injector.
5	RJ45 to RJ45 cable, available separately.
6	PSE (*Power Sourcing Equipment*) providing PoE (Power over Ethernet) to the JCU-4 (e.g. PoE Injector (A80811) is shown in the example above, available separately).

11.4 Network cable extensions

If you wish to extend the length of a network cable connected to your product, refer to the following section for further information:
p.127 — Spares and accessories

CHAPTER 12: NON-POE POWER CONNECTIONS

CHAPTER CONTENTS

- 12.1 Power options — page 46
- 12.2 Direct power connection — page 46
- 12.3 Inline fuse requirement — page 46
- 12.4 Inline fuse and thermal breaker ratings — page 47
- 12.5 Power distribution — page 47
- 12.6 Power cable extension (12 / 24 V systems) — page 49
- 12.7 Power cable drain wire connection — page 50

12.1 Power options

This product must be powered using **only one** of the following methods:

1. **PoE (Power over Ethernet)**
   - Direct connection to a PSE (*Power Sourcing Equipment*) device, e.g. a PoE Injector or a PoE network switch. Only one Ethernet cable is required to carry both data and power signals.
2. **Self-powered (*"direct / dedicated / alternate power connection"*)**
   - Direct connection to a vessel's power supply using the supplied power cable.

Multiple power sources


Product behavior when connected to more than one power supply.

Important:
If a direct power connection is made to **both** the vessel's power supply (via the JCU-4's 3-pin power connection) **and** a PSE device (via the JCU-4's PoE connection) **at the same time**, the JCU-4 will automatically default to the vessel's power supply as its sole power source.

12.2 Direct power connection

The JCU-4 can be powered directly from a 12 V or 24 V power source, using the 3 m (9.8 ft) right-angled 3-pin power cable (supplied with E70695, or available separately). **The direct power connection is only required if PoE is not used to power the JCU-4)**.

The right-angled 3-pin power cable includes bare stripped wires, which are suitable for direct connection to a 12 V or 24 V power supply:

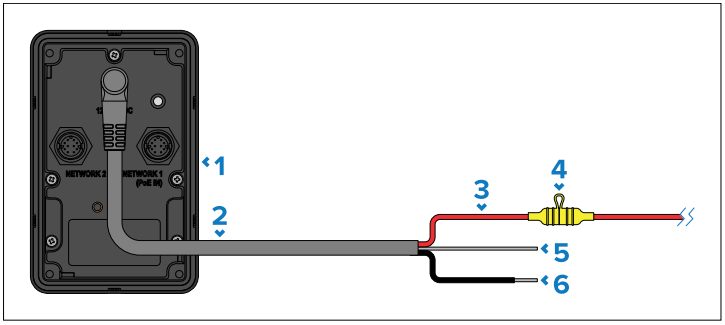


	Description
1	JCU-4.
2	3 m (9.8 ft) Right-angled 3-pin power cable, 1x supplied with E70695, or available separately.
3	Red wire (positive) — connects to the power supply's positive terminal.
4	Waterproof fuse holder containing a suitably-rated inline fuse (**not supplied**), which must be fitted to the red positive wire — refer to the following fuse ratings: **p.47 — Inline fuse and thermal breaker ratings**
5	Gray wire (drain) — connects to the vessel RF ground (if available), or the negative battery terminal.
6	Black wire (negative) — connects to the power supply's negative terminal.

12.3 Inline fuse requirement

If your product is NOT supplied with an inline fuse (whether separately or fitted to the power cable), you MUST fit a suitably-rated inline fuse to your product's red power wire, housed in a waterproof fuse holder.

The illustration below shows the two main types of inline fuse with waterproof holder, for use in marine electronics installations. Fuses in a variety of ratings are widely available at chandleries and marine electrical retailers.
Select one of the following fuse types to protect your product:

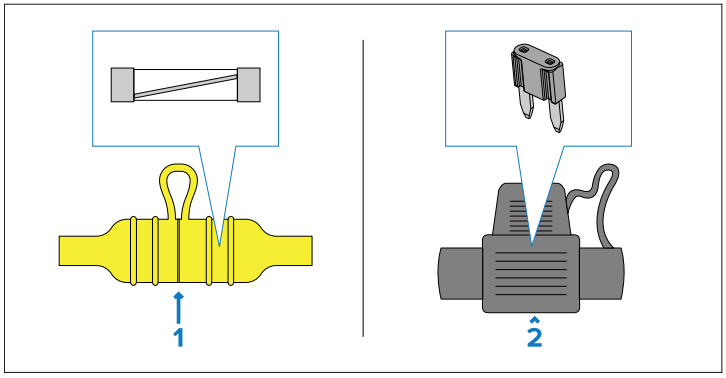

1. Waterproof fuse holder containing a “glass”-type inline fuse.
2. Waterproof fuse holder containing a “blade”-type inline fuse.

Fuse ratings:

- *Voltage rating* — must be equal to or greater than the voltage of your vessel’s power supply.
- *Current rating* — refer to the *Inline fuse and thermal breaker rating* section in this document.

12.4 Inline fuse and thermal breaker ratings

The following inline fuse and thermal breaker ratings apply to your product:

Inline fuse rating	Thermal breaker rating
• **12 V**: 1A	• **12 V**: 1A
• **24 V**: 500mA	• **24 V**: 500mA

Note:
The suitable fuse rating for the thermal breaker is dependent on the number of devices you are connecting. If in doubt, consult an authorized FLIR dealer.

12.5 Power distribution

Recommendations and best practice for the power connection of products supplied with a drain wire as part of the supplied power cable.


- The product is supplied with a power cable, either as a separate item or a captive cable permanently attached to the product. Only use the power cable supplied with the product. Do NOT use a power cable designed for, or supplied with, a different product.
- Refer to the *Power connection* section for more information on how to identify the wires in your product’s power cable, and where to connect them.
- See below for more information on implementation for some common power distribution scenarios:

Important:

• When planning and wiring, take into consideration other products in your system, some of which (e.g. sonar modules) may place large power demand peaks on the vessel’s electrical system, which may impact the voltage available to other products during the peaks.


• The information provided below is for guidance only, to help protect your product. It covers common vessel power arrangements, but does NOT cover every scenario. If you are unsure how to provide the correct level of protection, please consult an authorized dealer or a suitably qualified professional marine electrician.

Implementation — connection to distribution panel (Recommended)

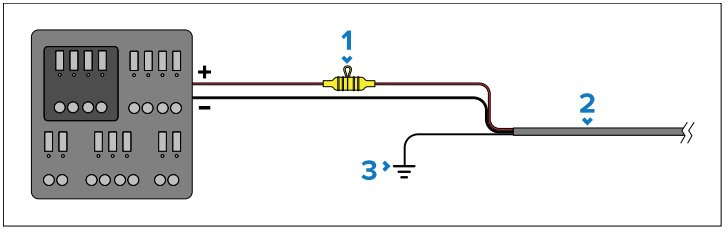

	Description
1	Waterproof fuse holder containing a suitably-rated inline fuse must be fitted. For suitable fuse rating, refer to: *Inline fuse and thermal breaker ratings*.
2	Product power cable.
3	Drain wire connection point.

- It is recommended that the supplied power cable is connected to a suitable breaker or switch on the vessel's distribution panel or factory-fitted power distribution point.
- The distribution point should be fed from the vessel's primary power source by 8 AWG (8.36 mm²) cable.
- Ideally, all equipment should be wired to individual suitably-rated thermal breakers or fuses, with appropriate circuit protection. Where this is not possible and more than 1 item of equipment shares a breaker, use individual inline fuses for each power circuit to provide the necessary protection.
- The power cable supplied with your product includes a drain wire, which must be connected to the vessel's common RF ground.

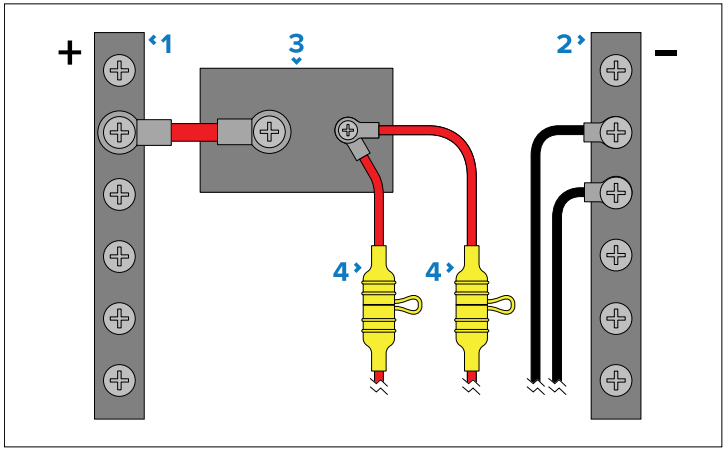


	Description
1	Positive (+) bar
2	Negative (-) bar

	Description
3	Circuit breaker
4	Waterproof fuse holder containing a suitably-rated inline fuse must be fitted. For suitable fuse rating, refer to: *Inline fuse and thermal breaker ratings*.

Important:
Observe the recommended fuse / breaker ratings provided in the product's documentation, however be aware that the suitable fuse / breaker rating is dependent on the number of devices being connected.

Implementation — direct connection to battery

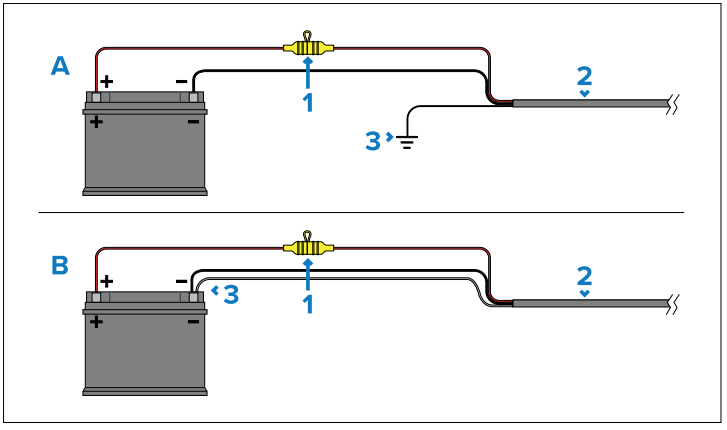

- Where connection to a power distribution panel is not possible, the power cable supplied with your product may be connected directly to the vessel's battery, via a suitably rated fuse or breaker.
- If the power cable is NOT supplied with a fitted inline fuse, you MUST fit a suitably rated fuse or breaker between the red wire and the battery's positive terminal.
- Refer to the inline fuse ratings provided in the product's documentation.
- If you need to extend the length of the power cable supplied with your product, ensure you observe the dedicated *Power cable extensions* advice provided in the product's documentation.

	Description
1	Waterproof fuse holder containing a suitably-rated inline fuse must be fitted. For suitable fuse rating, refer to: *Inline fuse and thermal breaker ratings*.
2	Product power cable.
3	Drain wire connection point.

Battery connection scenario A:
Suitable for a vessel with a common RF ground point. In this scenario, the power cable's drain wire should be connected to the vessel's common ground point.
Battery connection scenario B:
Suitable for a vessel without a common grounding point. In this case, the power cable's drain wire should be connected directly to the battery's negative terminal.

Grounding

Ensure that you observe any additional grounding advice provided in the product's documentation.

More information

It is recommended that best practice is observed in all vessel electrical installations, as detailed in the following standards:

- BMEA Code of Practice for Electrical and Electronic Installations in Boats
- NMEA 0400 Installation Standard
- ISO 13297: Small craft — Electrical systems — Alternating and direct current installations
- ISO 10133: Small craft — Electrical systems — Extra-low-voltage d.c. installations
- ABYC E-11 AC & DC Electrical Systems on Boats
- ABYC A-31 Battery chargers and Inverters
- ABYC TE-4 Lightning Protection

12.6 Power cable extension (12 / 24 V systems)

If you need to extend the length of the power cable supplied with your product, ensure you observe the following advice:

- The power cable for each unit in your system should be run as a separate, single length of 2-wire cable from the unit to the vessel's battery or distribution panel.
- Ensure that the extension cable is of a sufficient gauge for the supply voltage, the total current load of the device, and the length of the cable run — as the cable run length increases, the greater the voltage drop will be from one end of the power cable to the other.
- Refer to the following table for typical **minimum** power cable wire gauges:

Cable length in meters (feet)	Wire gauge in AWG (mm^2) for 12 V supply	Wire gauge in AWG (mm^2) for 24 V supply
<8 (<25)	16 (1.31 mm^2)	18 (0.82 mm^2)
16 (50)	14 (2.08 mm^2)	16 (1.31 mm^2)
24 (75)	12 (3.31 mm^2)	14 (2.08 mm^2)
>32 (>100)	10 (5.26 mm^2)	12 (3.31 mm^2)

Important:
Be aware that some products in your system (such as sonar modules) can create voltage peaks at certain times, which may impact the voltage available to other products during the peaks.

Important:
To ensure power cables (including any extension) are of a sufficient gauge, ensure that there is a continuous **minimum** voltage of **10.8 V dc** at the end of the cable where it enters the product's power connector, even with a fully flat battery at 11 V dc. (Do not assume that a flat battery is at 0 V dc. Due to the discharge profile and internal chemistry of batteries, the current drops much faster than the voltage. A "fully flat" battery still shows a positive voltage, even if it doesn't have enough current to power your device.)

12.7 Power cable drain wire connection

The power cable supplied with this product includes a dedicated drain wire for connection to a vessel's Radio Frequency (RF) ground point (if available), or the negative battery terminal.

The purpose of the drain wire is to drain excess voltage from the cable shield, giving it a path to safety. The drain wire protects the cable's inner signal conductors from electrical noise emitted by other cables and devices.

Although the drain wire is not intended to ground the product's internal circuits, it's important that the drain wire is connected to the vessel's common RF ground point, which should be used for all equipment in your system. If several items require grounding, the drain wires and dedicated ground connections (if available) of all equipment should first be connected to a single local point (e.g. within a distribution panel), and then this point connected via an appropriately-rated conductor to the vessel's RF common ground point. An RF ground point is typically a circuit with a very low-impedance signal at Radio Frequency, connected to the sea via an electrode immersed in the sea, or bonded to the inner side of the hull in an area that is underwater.

On vessels without an RF ground system, the drain wires and dedicated ground connections (if available) of all equipment should be connected directly to the vessel's negative battery terminal.

The dc power system should be either:

- Negative grounded ("bonded"), with the negative battery terminal connected to the vessel's RF ground.
- Floating, with neither battery terminal connected to the vessel's ground.

The preferred minimum requirement for the path to ground (bonded or non-bonded) is via a flat tinned copper braid, with a 30 A rating or greater. If this is not possible, an equivalent stranded wire conductor may be used, rated as follows:

- for runs of <1 m (3.3 ft), use 6 mm2 (10 AWG) or greater.
- for runs of >1 m (3.3 ft), use 8 mm2 (8 AWG) or greater.

In any grounding system, always keep the length of connecting braid or wires as short as possible.

CHAPTER 13: OPERATION (M460-SERIES / M560-SERIES)


CHAPTER CONTENTS

- 13.1 Controls overview — page 52
- 13.2 Powering on the unit — page 53
- 13.3 Startup wizard — page 53
- 13.4 Camera detection — page 55
- 13.5 Controlled camera — page 55
- 13.6 Main menu — page 56
- 13.7 JCU settings — page 58

13.1 Controls overview

Applicability: M460-Series / M560-Series

The JCU-4 buttons and their associated functions (while controlling an M460-Series / M560-Series camera) are described below.

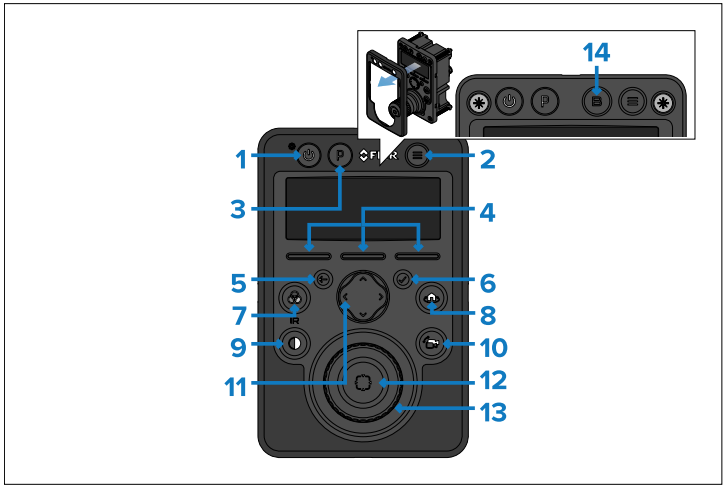

	Description
1	*[Power]* • With the JCU-4 powered off, press to power the unit on. • With the JCU-4 powered on, press to display the *[Main menu]* screen. • With the *[Main menu]* screen displayed, press to access the *[Brightness]* screen. • With the *[Brightness]* screen displayed, press to increase the JCU-4's brightness by 20%. • With the JCU-4 powered on, press and hold to power the unit off.
2	*[On-screen Display]* • (1) Press to show / hide the camera's *[On-screen Display]* menu on a networked video display or the camera's Web browser configuration interface.
3	*[Park]* • (1) Press to park the camera.
4	*[Softkey 1, Softkey 2, Softkey 3]* • Press to initiate the corresponding action displayed on-screen.
5	*[Back]* • With a (sub)menu displayed, press to return back to the previous screen.
6	*[Select]* • With a (sub)menu displayed, press to select the highlighted item.
7	*[IR Color]* • Press to cycle between infrared color palettes on the camera's thermal video feed. • Press and hold to invert the infrared color palette displayed on the camera's thermal video feed. • Press and hold, then hold the joystick upward to display the JCU-4 and camera's IP addresses.
8	*[Home]* • (1) Press to return the camera to the configured home position. • (1) Press and hold to save the current azimuth and elevation as the camera's home position.
9	*[IR Contrast]* • Press to cycle between infrared contrast palettes on the camera's thermal video feed. • Press and hold to display the *[Camera focus]* screen.
10	*[Active feed switch]* • Press to change which camera payload is being controlled by the JCU-4. • Press and hold to display the *[Select camera]* screen.

	Description
11	*[Navigation pad]* • Press to pan and tilt the camera. • With a (sub)menu displayed, press to change the highlighted menu option.
12	*[Video tracking]* • Press to display the *[Ready to Track]* screen.
13	*[Joystick]* • Twist to (un)zoom the camera's active payload. • Push up / down to tilt the camera. • Push left or right to rotate the camera.
14	*[Reboot (over Ethernet)]* • Press to reboot the JCU-4 (over Ethernet).

Note:
(1) For more information, refer to the documentation that is supplied with your compatible FLIR maritime camera:

• (71010) M460-Series Thermal Camera Operation Instructions.

• (71011) M560-Series Thermal Camera Operation Instructions.


Please ensure that you obtain the **latest version** of your documentation via the FLIR website: www.bit.ly/3Seupv7

13.2 Powering on the unit

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The JCU-4 can be turned on by pressing the *[Power]* button.

After the *[Power]* button has been pressed, the following screen will be displayed as your unit begins to power on:

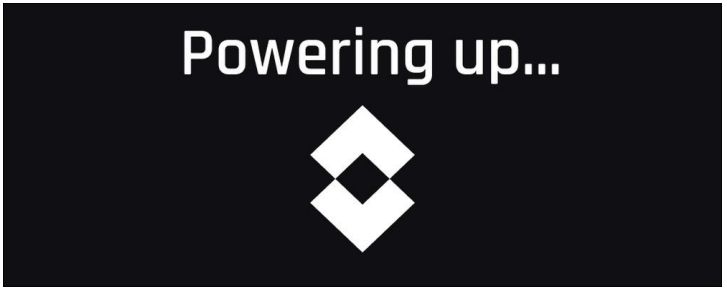

13.3 Startup wizard

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

If your unit is being switched on for the first time or if a factory reset has just occurred, you will be required to configure your unit via the startup wizard.


Note:
While proceeding through the startup wizard, the *[Back]* button can be selected at any time to return to the previous screen.

System selection

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

On the *[Select system]* startup wizard screen, you will be prompted to select the type of system that your JCU-4 is networked to.

The JCU-4 will be automatically assigned an IP address type according to the system type that you have selected.

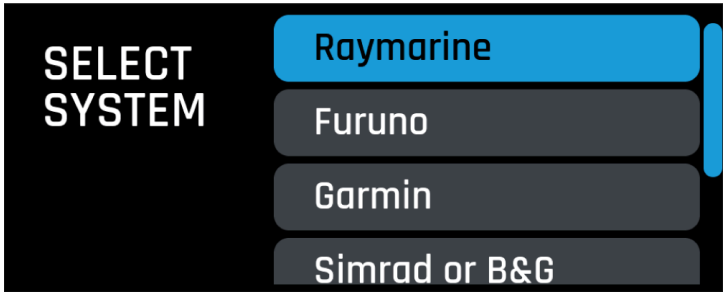

The following system options are available:

System	IP address type
• *[Raymarine]* • *[Garmin]* • *[Simrad or B&G]* • *[Lowrance]*	**Dynamic IP (DHCP):** DHCP (**D**ynamic **H**ost **C**ontrol **P**rotocol) is used to automatically assign IP addresses and other important IP-network parameters to devices on a network.
• *[Furuno]* • *[Other]*	**Static IP:** Networks that do NOT use DHCP or link local IP addressing require a **static IP** address to be permanently assigned to each connected device.

If the system option that you have selected is listed above as being assigned a **dynamic IP** address type, the startup wizard will complete and you will be automatically redirected onto the *[Controlled camera]* screen.

If the system option that you have selected is listed above as being assigned a **static IP** address type, you will instead be redirected onto the *[Enter IP address]* screen.

Assigning a static IP address

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The following steps provide instructions on how to assign the JCU-4 a static IP address via the *[Enter IP address]* screen.

Note:
Some IP networks require IP addresses to be within a specific range. When setting your IP address, ensure that it is within an allowed range as specified by your network administrator

Note:
IP addresses are self-allocated by certain Raymarine equipment in the following range: 198.18.0.32 to 198.18.3.254 (inclusive). On networks featuring Raymarine-branded IP devices, you must avoid placing any devices in this range using manual (static) IP addresses.

From the *[Enter IP address]* screen:

1. Use the *[Navigation up]* and *[Navigation down]* buttons to change the numerical value displayed in the highlighted field.
2. Once the value shown for the highlighted field is correct, use the *[Navigation left]* and *[Navigation right]* buttons to change which field is highlighted.
3. After you have entered a valid address, press the *[Next]* softkey button to proceed onto the *[Enter netmask]* screen.

Assigning a netmask

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The following steps provide instructions on how to assign the JCU-4 a netmask via the *[Enter netmask]* screen.

From the *[Enter netmask]* screen:

1. Optionally, press the *[Default]* softkey button to change the address shown on-screen to '255.255.255.0'.
2. Use the *[Navigation up]* and *[Navigation down]* buttons to change the numerical value displayed in the highlighted field.
3. Once the value shown for the highlighted field is correct, use the *[Navigation left]* and *[Navigation right]* buttons to change which field is highlighted.
4. After you have entered a valid address, press the *[Save]* softkey button.

13.4 Camera detection

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The JCU-4 will automatically attempt to search for compatible FLIR maritime cameras on the network once every 30 seconds.

Note:
If a compatible camera is connected to your network and cannot be automatically detected by your unit after a prolonged period, refer to the following section for troubleshooting information:
p.119 — System checks and troubleshooting

13.5 Controlled camera

Applicability: M460-Series / M560-Series

Once the start-up process has been completed, the following *[Controlled camera]* screen will be displayed.





From the *[Controlled camera]* screen, the following key information can be viewed and / or interacted with:

	Description
1	*[Camera name]* Indicates the camera which is currently being controlled.
2	*[Status icons]* Indicates which camera functions are currently enabled.
3	*[Active feed]* Indicates which camera payload is currently being controlled.
4	*[Shortcut key 1]* Corresponds to the shortcut action assigned via the *[Shortcut keys]* screen. Select the associated softkey button to initiate the assigned shortcut.
5	*[Shortcut key 2]* Corresponds to the shortcut action assigned via the *[Shortcut keys]* screen. Select the associated softkey button to initiate the assigned shortcut.
6	*[Shortcut key 3]* Corresponds to the shortcut action assigned via the *[Shortcut keys]* screen. Select the associated softkey button to initiate the assigned shortcut.

Status icons

Applicability: M460-Series / M560-Series


The following status icons can be monitored via the status area located on the right side of the *[Controlled cameras]* screen:

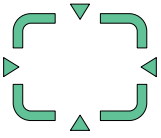Icon	Description
	*[Target classifier tracking system — Tracking object]* Indicates that the camera's target classifier tracking system is tracking a detected object.
	*[NMEA tracking — Radar target (TTM)]* Indicates that Radar target (TTM) tracking is enabled and that the camera's field of view can be directed by a selected radar target's position.
	*[Spotlight ON]* Indicates that the camera's spotlight is enabled

13.6 Main menu

Applicability: M400-Series / M460-Series / M500-Series / M560-Series

While viewing the *[Controlled camera]* screen, you can press the *[Power]* button to access the JCU-4's *[Main menu]* screen.

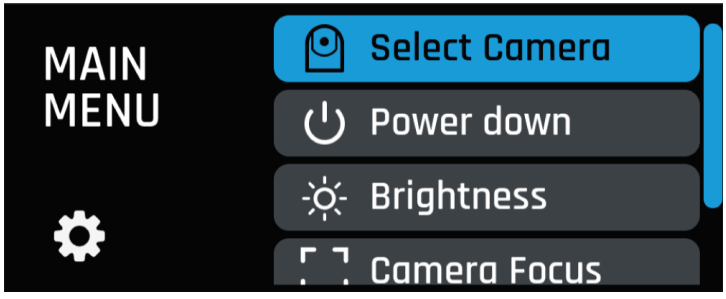

With the *[Main menu]* screen displayed, the following options are available:

Option	Description
[Select camera]	Select to change which camera is currently being controlled by the JCU-4.
[Power down]	Select to access power options for both the JCU-4 and the camera which is currently being controlled.
[Brightness]	Select to adjust the JCU-4's LCD brightness / button illumination and to also enable or disable *[Night]* mode.
[Camera focus]	Select to adjust the focus of the camera which is currently being controlled.
[JCU settings]	Select to access further configurable JCU-4 settings.


Select camera

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

You can change which compatible FLIR maritime camera the JCU-4 is currently controlling via the *[Select camera]* screen.

The *[Select camera]* screen can be accessed by:

- Navigating to: *[Controlled camera > Main menu > Select camera]*, OR;
- By press and holding the *[Active feed switch]* button.

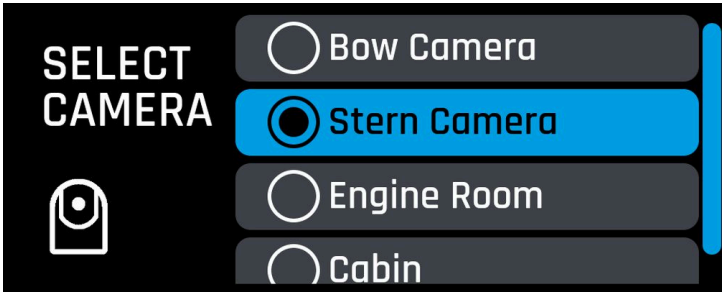


If a camera which you wish to control is not displayed, ensure that it has been selected via the *[Cameras]* configuration screen: *[Controlled camera > Main menu > JCU settings > Cameras]*.

Power down

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The JCU-4 and other compatible FLIR maritime cameras on your network can be remotely set to standby and / or restarted via the *[Power down]* screen.

The *[Power down]* screen can be accessed by navigating to: *[Controlled camera > Main menu > Power down]*.

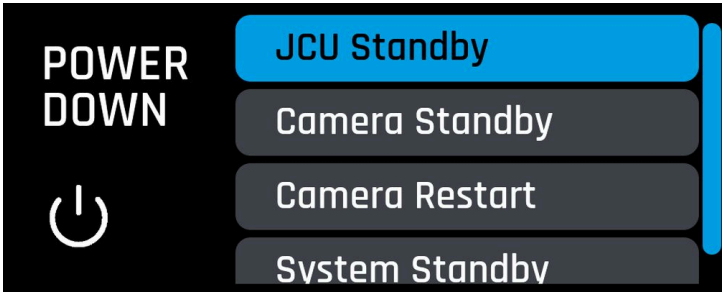

With the *[Power down]* screen displayed, the following options are available:

- *[JCU standby]* — Select to enter the JCU-4 into a standby state until operation is resumed.


- *[Camera standby]* — Select to enter the controlled camera into to a standby state until operation is resumed.
- *[Camera restart]* — Select to restart the controlled camera.
- *[System standby]* — Select to enter both the JCU-4 and the controlled camera into a standby state until operation is resumed.

Brightness

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

You can adjust the JCU-4's LCD brightness / button illumination and also enable or disable *[Night]* mode via the *[Brightness]* screen.

The *[Brightness]* screen can be accessed by navigating to: *[Controlled camera > Main menu > Brightness]*.

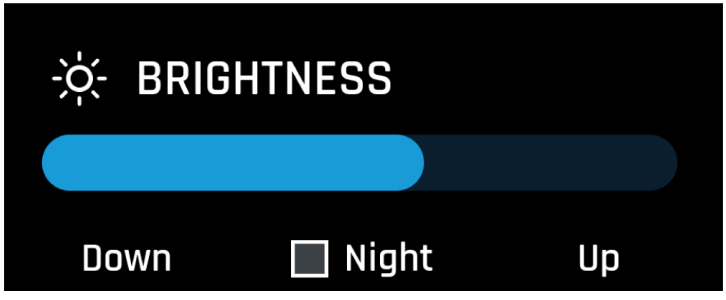


With the *[Brightness]* screen displayed, the following options are available:

- *[Down]* — Select to increase the LCD brightness and button illumination by 5%.
- *[Night]* — Select to either enable or disable *[Night]* mode.
- *[Up]* — Select to decrease the LCD brightness and button illumination by 5%.

Night mode

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The JCU-4's user interface and physical buttons can be configured to use a red color palette intended for night time use by selecting the *[Night]* mode option via the *[Brightness]* screen.

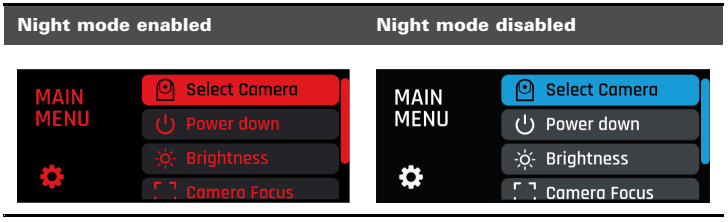

Important:
If you are using the *[Night]* mode color palette at night, be aware that your vision may be compromised when either disabling the *[Night]* mode or switching to a display screen with a higher level of brightness.


Camera focus

Applicability: M400-Series / M460-Series / M500-Series / M560-Series

The controlled camera's focus can be manually or automatically adjusted via the *[Camera focus]* screen.

The *[Camera focus]* screen can be accessed by:

- Navigating to: *[Controlled camera > Main menu > Camera focus]*
- Press and holding the *[IR Contrast]* button.

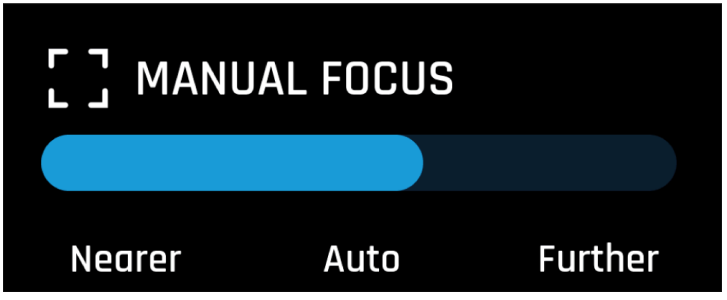

With the *[Camera focus]* screen displayed, the following options are available:

- *[Nearer]* — Select to adjust the camera's focus manually.
- *[Auto]* — Select to automatically adjust the camera's focus.


- *[Further]* — Select to adjust the camera's focus manually.

13.7 JCU settings

Applicability: M460-Series / M560-Series

Additional advanced settings can be accessed via the *[JCU settings]* menu.

The *[JCU settings]* menu can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings]*.

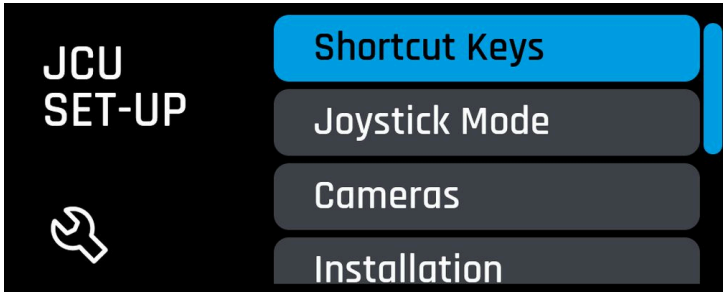

With the *[JCU settings]* menu displayed, the following options are available:

Option	Description
[Shortcut keys]	Select to configure which actions are assigned to the JCU-4's softkey buttons when viewing the *[Controlled camera]* screen.
[Joystick mode]	Select to configure which direction the camera tilts when the joystick is moved up and down.
[Cameras]	Select to configure which compatible FLIR maritime cameras detected on the network can be controlled by your JCU-4.
[Installation]	Select to reconfigure the JCU-4's IP network parameters which were set during the startup wizard.
[About]	Select to display additional information related to the JCU-4.
[Settings reset]	Select to perform a settings reset.
[Factory reset]	Select to perform a factory reset.

Shortcut keys

Applicability: M460-Series / M560-Series

You can assign different shortcut actions to the JCU-4's softkey buttons while controlling an M460-Series / M560-Series camera via the *[Shortcut keys]* screen.

The *[Shortcut keys]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Shortcut keys]*.



With the *[Shortcut keys]* screen displayed, selecting an assigned action will enable you to reconfigure it to one of the following options:

Option	Description
[BWC]	**Note:** This option is not supported by M460-Series / M560-Series cameras.
[Camera]	Changes the camera which is being controlled by the JCU-4 to the next available camera (cycling in alphabetical order).
[CTV]	(1) Enables / disables the camera's *[CTV]* (Color Thermal Vision) blending mode.
[Defog]	(1) Enables / disables the camera's visible light *[Defog]* video filter mode.
[FFC]	Initiates the camera's configured *[FFC]* (Flat Field Correction) mode. For more information, refer to: **Flat Field Correction (FFC)**

Option	Description
[Fire]	**Note:** This option is not supported by M460-Series / M560-Series cameras.
[Flash]	Enables / disables the camera's spotlight. When enabled, a flashing spotlight beam will appear at the center of the camera's field of view and the JCU-4's *[Spotlight on]* screen will be displayed.
[Focus]	Displays the JCU-4's *[Camera focus]* screen, which can be used to manually or automatically adjust the controlled camera's focus.
[Ice]	**Note:** This option is not supported by M460-Series / M560-Series cameras.
[InstAlert]	(1) Enables / disables the camera's *[InstAlert]* thermal imaging mode.
[Light]	Enables / disables the camera's spotlight. When enabled, a continuous spotlight beam will appear at the center of the camera's field of view and the JCU-4's *[Spotlight on]* screen will be displayed.
[MSX]	(1) Enables / disables the camera's *[MSX]* (Multi-Spectral Dynamic Imaging) blending mode.
(2) *[Range]*	Displays the JCU-4's *[Ready to Range]* screen, which can be used to trigger the camera's laser range finder (LRF). For more information, refer to: **Ready to range**
[RSD]	**Note:** This option is not supported by M460-Series / M560-Series cameras.
[Stab]	(1) Enables / disables the camera's *[Stabilization]* mode.
[Surveil]	(1) Enables / disables the camera's *[Surveillance scan]* mode.
[Track]	Displays the JCU-4's *[Ready to Track]* screen, which can be used to track an object detected by the camera's target classifier tracking system. For more information, refer to: **Ready to track**
[TTM]	(1) Enables / disables NMEA Radar target (TTM) tracking for the camera.
[None]	Removes the assigned action.

Any changes made will be reflected on the *[Controlled camera]* screen.

Note:

- (1) For more information, refer to the documentation that is supplied with your compatible FLIR maritime camera:
  - (71010) M460-Series Thermal Camera Operation Instructions.
  - (71011) M560-Series Thermal Camera Operation Instructions.

  Please ensure that you obtain the **latest version** of your documentation via the FLIR website: www.bit.ly/3Seupv7
- (2) This option is only available for camera variants which support a laser range finder (LRF).

Flat Field Correction (FFC)

Applicability: M460-Series / M560-Series

During an FFC calibration procedure, the camera uses a target surface with a consistent temperature to measure, detect and subsequently correct any potential issues experienced with the camera's thermal image.

An FFC calibration procedure can be initiated at any time via the camera's Web browser configuration interface, or a networked Joystick Control Unit (JCU) if you perceive that the quality of your camera's thermal image has degraded.

The type of FFC calibration procedure that is performed by your camera will vary depending on which *[FFC]* mode has been selected on your camera's Web browser configuration interface.

FFC modes

Applicability: M460-Series / M560-Series

For more information on the FFC modes that are available via your camera's Web browser configuration interface, refer to the documentation that is supplied with your compatible FLIR maritime camera:


- (71010) M460-Series Thermal Camera Operation Instructions.
- (71011) M560-Series Thermal Camera Operation Instructions.

Please ensure that you obtain the **latest version** of your documentation via the FLIR website: www.bit.ly/3Seupv7

Spotlight on

Applicability: M400-Series / M460-Series / M500-Series / M560-Series

Once your camera's spotlight has been enabled, the JCU-4 will automatically switch to display the *[Spotlight on]* screen.

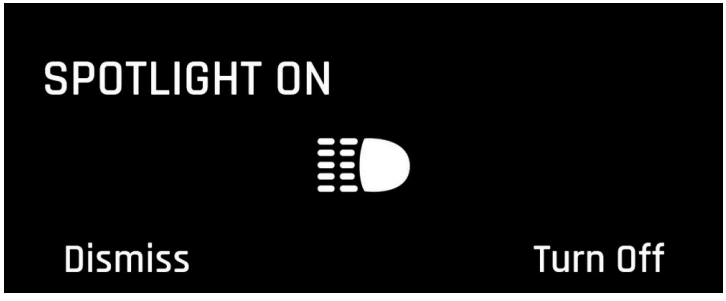

With the *[Spotlight on]* screen displayed, the following options are available:

- *[Dismiss]* — Select to return to the *[Controlled camera]* screen.
- *[Turn off]* — Select to disable the camera's spotlight and return to the *[Controlled camera]* screen.

Ready to range

Applicability: M460-LRF (30 Hz) / M560-LRF (30 Hz)

You can trigger the camera's laser range finder (LRF) to measure the distance between the camera and a position located at the center of the camera's field of view via the JCU-4's *[Ready to range]* screen.

The *[Ready to range]* screen can be accessed by first assigning the *[Range]* shortcut action to a softkey button, and then selecting *[Range]* via the *[Controlled camera]* screen. For more information how to assign a shortcut action, refer to:

- **p.58 — Shortcut keys**



Once the *[Ready to range]* screen is displayed, center the camera's field of view on the position you wish to measure the distance to, then press the *[Range]* softkey button to trigger the camera's LRF.

Alternatively, you can return to the *[Controlled camera]* screen by pressing the *[Cancel]* button.

After the distance has been successfully measured, a pop-up containing LRF information will appear on a networked video display. For more details, refer to the documentation that is supplied with your camera:

- (71010) M460-Series Thermal Camera Operation Instructions.
- (71011) M560-Series Thermal Camera Operation Instructions.

Please ensure that you obtain the **latest version** of your documentation via the FLIR website: www.bit.ly/3Seupv7

Ready to track


Applicability: M460-Series / M560-Series

You can track an object detected by the camera's target classifier tracking system via the JCU-4's *[Ready to track]* screen.

The *[Ready to Track]* screen can be accessed by:

- Pressing the JCU-4's *[Video tracking]* button. OR;
- Pressing the associated *[Track]* softkey button on the JCU-4's *[Controlled camera]* screen (this method requires the *[Track]* shortcut function to be assigned to a softkey button via the *[Shortcut keys]* screen).

Once either of the above buttons have been pressed, a crosshair will appear on the camera's live video feed and the following *[Ready to Track]* screen will be displayed on the JCU-4.

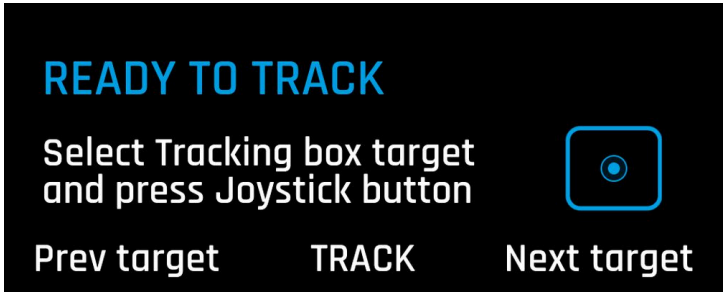

The crosshair shown on the live video feed can be moved to highlight a detected object using:

- The JCU-4's joystick. OR;
- The *[Prev target]* and *[Next target]* softkey buttons to cycle the crosshair's position between detected objects.


Once the detected object that you wish to track is highlighted, press the JCU-4's *[Track]* softkey button or the *[Video track]* button once again to initiate target tracking.

Joystick mode

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

You can configure the JCU-4's up and down joystick inputs to either tilt the camera in the same direction as the joystick or the opposite direction via the *[Joystick mode]* screen.

The *[Joystick mode]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Joystick mode]*.

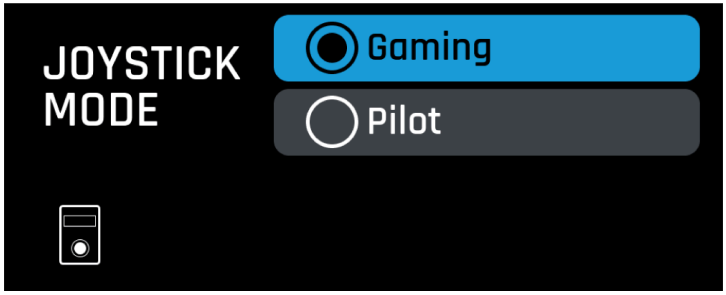

With the *[Joystick mode]* screen displayed, the following options are available:

- *[Gaming]* — Causes the camera to tilt upward when the joystick is pushed up and downward when the joystick is pushed down.
- *[Pilot]* — Causes the camera to tilt upward when the joystick is pushed down and downward when the joystick is pushed up.


The JCU-4 is set to *[Gaming]* mode by default.

Controllable cameras

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

On the *[Cameras]* screen you can select which compatible FLIR maritime camera(s) on the network can be controlled by your JCU-4.

The *[Cameras]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Cameras]*.

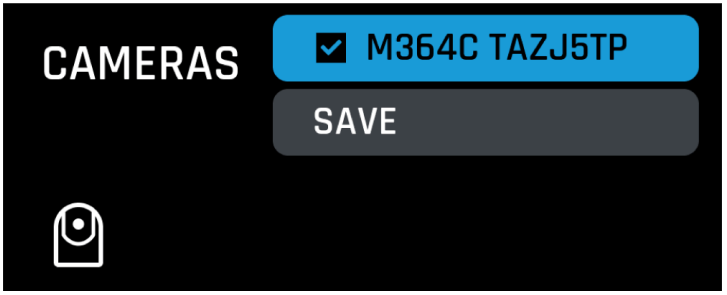

Once you have chosen the camera(s) that you wish to control using the JCU-4 and have selected *[Save]*, the chosen camera(s) will then appear on the *[Select camera]* screen.


Note:
The list of controllable cameras will dynamically update if a camera is either connected to or disconnected from the network. If a compatible FLIR maritime camera is connected to your network and cannot be automatically detected by the JCU-4 after a prolonged period, refer to the following section for troubleshooting information:
p.119 — System checks and troubleshooting

Installation

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

It is possible to reconfigure the settings which were selected during the startup wizard at any time via the *[Installation]* screen.

The *[Installation]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Installation]*.

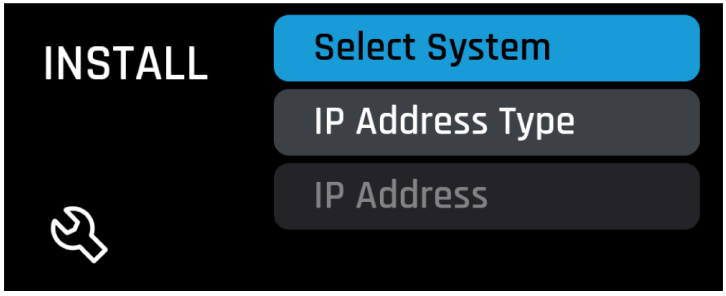

With the *[Installation]* screen displayed, the following options are available:

- *[Select system]* — Select to reconfigure the type of system that your JCU-4 is networked to.
- *[IP Address type]* — Select to reconfigure the assigned IP address type.
- (1) *[IP Address]* — Select to reconfigure the assigned static IP address and netmask.


Note:
(1) This menu option is only available if the JCU-4's assigned IP address type is set to *[Static IP]*.

About this device

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The *[About]* screen contains additional information related to the JCU-4.

The *[About]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > About]*.

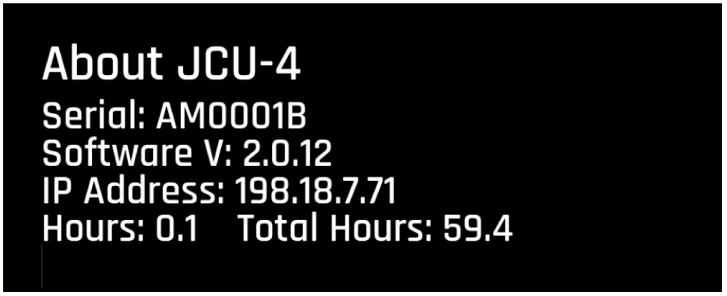

The following range of information can be found on the *[About]* screen:

- *[Serial]* — Provides the JCU-4's serial number.
- *[Software V]* — Provides the software version number that the JCU-4 is currently running.
- *[IP Address]* — Provides the JCU-4's IP address.
- *[Hours]* — Provides the number of hours that the JCU-4 has been in operation for this session.
- *[Total hours]* — Provides the total number of hours that the JCU-4 has been in operation for.

Settings reset

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

You can reset the JCU-4's configured user settings (excluding the assigned IP network parameters) via the *[Settings reset]* screen.

The *[Settings reset]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Settings reset]*.



With the *[Settings reset]* screen displayed, the following options are available:

- *[No]* — Select to cancel the reset process.
- *[Yes]* — Select to initiate the reset process. Once the JCU-4 has been reset to settings default, the unit will return back to the *[Controlled camera]* screen.

Factory reset


Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

If you wish to reset the JCU-4's configured user settings (including the assigned IP network parameters), or, if you are experiencing problems with your JCU-4 which cannot be resolved using the troubleshooting advice provided, you may need to reset the JCU-4 to factory default via the *[Factory reset]* screen.

Note:
If you are experiencing problems with your JCU-4 and have not yet followed the troubleshooting advice provided, refer to:

• **p.119 — System checks and troubleshooting**

The *[Factory reset]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Factory reset]*.

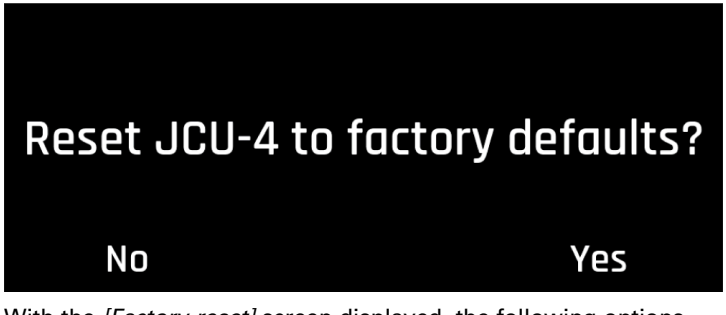

With the *[Factory reset]* screen displayed, the following options are available:

- *[No]* — Select to cancel the reset process.
- *[Yes]* — Select to initiate the reset process. Once the JCU-4 has been reset to factory default, the startup wizard will be automatically displayed on-screen.

CHAPTER 14: OPERATION (M400-SERIES / M500-SERIES)


CHAPTER CONTENTS

- 14.1 Controls overview — page 65
- 14.2 Powering on the unit — page 66
- 14.3 Startup wizard — page 66
- 14.4 Camera detection — page 68
- 14.5 Controlled camera — page 68
- 14.6 Main menu — page 69
- 14.7 JCU settings — page 71
- 14.8 Ready to track — page 74
- 14.9 Spotlight on — page 74
- 14.10 User programmable buttons (UPBs) — page 75

14.1 Controls overview

Applicability: M400-Series / M500-Series

The JCU-4 buttons and their associated functions (while controlling an M400-Series / M500-Series camera) are described below.

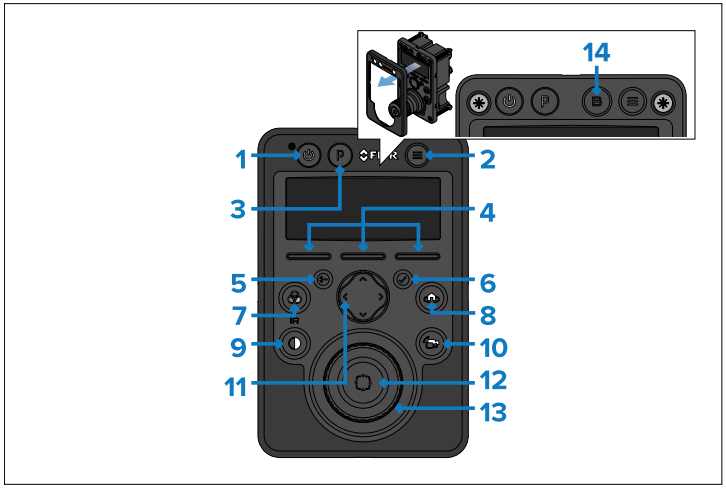

	Description
1	*[Power]* • With the JCU-4 powered off, press to power the unit on. • With the JCU-4 powered on, press to display the *[Main menu]* screen. • With the *[Main menu]* screen displayed, press to access the *[Brightness]* screen. • With the *[Brightness]* screen displayed, press to increase the JCU-4's brightness by 20%. • With the JCU-4 powered on, press and hold to power the unit off.
2	*[On-screen Display]* • (1) Press to show / hide the camera's *[On-screen Display]* menu on a networked video display.
3	*[Park]* • (1) Press to park the camera.
4	*[Softkey 1, Softkey 2, Softkey 3]* • Press to initiate the corresponding action displayed on-screen. • With the *[Controlled camera]* screen displayed, press to initiate the corresponding *[UPB 1 / UPB 2 / UPB 3]* action assigned via your FLIR maritime camera's Web browser user interface or *[On-Screen Display]* menu. • With the *[Controlled camera]* screen displayed, press and hold to show the on-screen display *[User-programmable buttons]* submenu on a networked video display.
5	*[Back]* • With a (sub)menu displayed, press to return back to the previous screen.
6	*[Select]* • With a (sub)menu displayed, press to select the highlighted item.
7	*[IR Color]* • Press to cycle between infrared color palettes on the camera's thermal video feed. • Press and hold to invert the infrared color palette displayed on the camera's thermal video feed. • Press and hold, then hold the joystick upward to display the JCU-4 and camera's IP addresses.
8	*[Home]* • (1) Press to return the camera to the configured home position. • (1) Press and hold to save the current azimuth and elevation as the camera's home position.

	Description
9	*[IR Contrast]* • Press to cycle between infrared contrast palettes on the camera's thermal video feed. • Press and hold to display the *[Camera focus]* screen.
10	*[Active feed switch]* • Press to change which camera payload is being controlled by the JCU-4. • Press and hold to display the *[Select camera]* screen.
11	*[Navigation pad]* • Press to pan and tilt the camera. • With a (sub)menu displayed, press to change the highlighted menu option.
12	*[Video tracking]* • **(M400XR / M500-Series only)** Press to display the *[Ready to Track]* screen.
13	*[Joystick]* • Twist to (un)zoom the camera's active payload. • Push up / down to tilt the camera. • Push left or right to rotate the camera.
14	*[Reboot (over Ethernet)]* • Press to reboot the JCU-4 (over Ethernet).

Note:
(1) For more information, refer to the documentation that is supplied with your compatible FLIR maritime camera:

• (432-0012-02-10) M400-Series Thermal Camera Operation Instructions.

• (432-0012-01-10) M500-Series Thermal Camera Operation Instructions.


Please ensure that you obtain the **latest version** of your documentation via the FLIR website: www.marine.flir.com

14.2 Powering on the unit

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The JCU-4 can be turned on by pressing the *[Power]* button.

After the *[Power]* button has been pressed, the following screen will be displayed as your unit begins to power on:

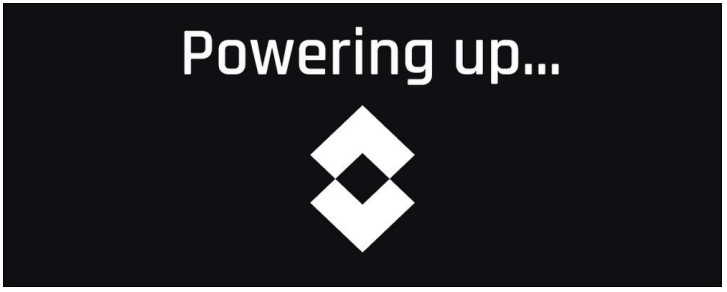

14.3 Startup wizard

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

If your unit is being switched on for the first time or if a factory reset has just occurred, you will be required to configure your unit via the startup wizard.


Note:
While proceeding through the startup wizard, the *[Back]* button can be selected at any time to return to the previous screen.

System selection

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

On the *[Select system]* startup wizard screen, you will be prompted to select the type of system that your JCU-4 is networked to.

The JCU-4 will be automatically assigned an IP address type according to the system type that you have selected.

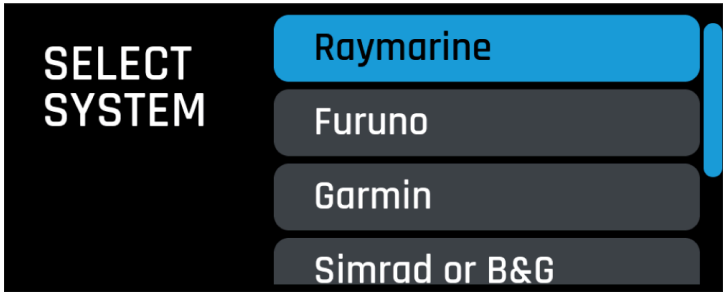

The following system options are available:

System	IP address type
• *[Raymarine]* • *[Garmin]* • *[Simrad or B&G]* • *[Lowrance]*	**Dynamic IP (DHCP):** DHCP (**D**ynamic **H**ost **C**ontrol **P**rotocol) is used to automatically assign IP addresses and other important IP-network parameters to devices on a network.
• *[Furuno]* • *[Other]*	**Static IP:** Networks that do NOT use DHCP or link local IP addressing require a **static IP** address to be permanently assigned to each connected device.

If the system option that you have selected is listed above as being assigned a **dynamic IP** address type, the startup wizard will complete and you will be automatically redirected onto the *[Controlled camera]* screen.

If the system option that you have selected is listed above as being assigned a **static IP** address type, you will instead be redirected onto the *[Enter IP address]* screen.

Assigning a static IP address

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The following steps provide instructions on how to assign the JCU-4 a static IP address via the *[Enter IP address]* screen.

Note:
Some IP networks require IP addresses to be within a specific range. When setting your IP address, ensure that it is within an allowed range as specified by your network administrator

Note:
IP addresses are self-allocated by certain Raymarine equipment in the following range: 198.18.0.32 to 198.18.3.254 (inclusive). On networks featuring Raymarine-branded IP devices, you must avoid placing any devices in this range using manual (static) IP addresses.

From the *[Enter IP address]* screen:

1. Use the *[Navigation up]* and *[Navigation down]* buttons to change the numerical value displayed in the highlighted field.
2. Once the value shown for the highlighted field is correct, use the *[Navigation left]* and *[Navigation right]* buttons to change which field is highlighted.
3. After you have entered a valid address, press the *[Next]* softkey button to proceed onto the *[Enter netmask]* screen.

Assigning a netmask

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The following steps provide instructions on how to assign the JCU-4 a netmask via the *[Enter netmask]* screen.

From the *[Enter netmask]* screen:

1. Optionally, press the *[Default]* softkey button to change the address shown on-screen to '255.255.255.0'.
2. Use the *[Navigation up]* and *[Navigation down]* buttons to change the numerical value displayed in the highlighted field.
3. Once the value shown for the highlighted field is correct, use the *[Navigation left]* and *[Navigation right]* buttons to change which field is highlighted.
4. After you have entered a valid address, press the *[Save]* softkey button.

14.4 Camera detection

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series


The JCU-4 will automatically attempt to search for compatible FLIR maritime cameras on the network once every 30 seconds.

Note:
If a compatible camera is connected to your network and cannot be automatically detected by your unit after a prolonged period, refer to the following section for troubleshooting information:
p.119 — System checks and troubleshooting

14.5 Controlled camera

Applicability: M300-Series / M400-Series / M500-Series

Once the start-up process has been completed, the following *[Controlled camera]* screen will be displayed.

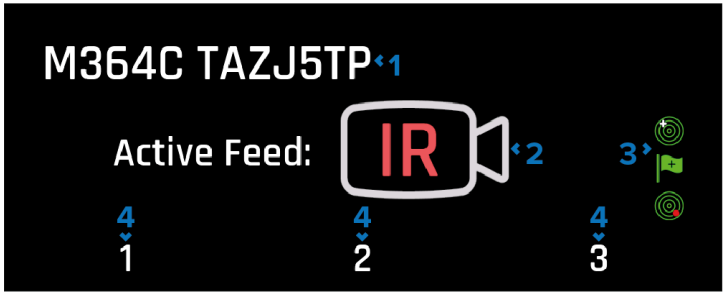



From the *[Controlled camera]* screen, the following key information can be viewed and / or interacted with:



	Description
1	*[Camera name]* Indicates the camera which is currently being controlled.
2	*[Active feed]* Indicates which camera payload is currently being controlled.
3	*[Status icons]* Indicates which camera functions are currently enabled.
4	*[User programmable button (UPB 1 / UPB 2 / UPB 3)]* Corresponds to the *[UPB 1 / UPB 2 / UPB 3]* action assigned on your FLIR maritime camera's Web browser user interface or *[On-Screen Display]* menu. While viewing the *[Controlled camera]* screen: • Pressing the associated softkey button will initiate the assigned action. • Press and holding the associated softkey button will show the on-screen display *[User-programmable buttons]* submenu on a networked video display.

Status icons

Applicability: M400-Series / M500-Series

The following status icons can be monitored via the status area located on the right side of the *[Controlled cameras]* screen:

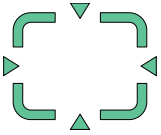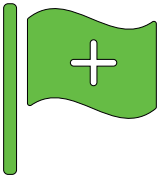Icon	Description
	(1) *[Video tracking]* Indicates that the camera is video tracking a detected target.
	*[NMEA tracking — Radar cursor (RSD)]* Indicates that Radar cursor (RSD) tracking is enabled and that the camera's field of view can be directed by the radar display's cursor.
	*[NMEA tracking — Next waypoint (BWC)]* Indicates that Next waypoint (RSD) tracking is enabled and that the camera's field of view can be directed by a selected waypoint's position.


Icon	Description
	*[NMEA tracking — Radar target (TTM)]* Indicates that Radar target (TTM) tracking is enabled and that the camera's field of view can be directed by a selected radar target's position.
	*[Spotlight ON]* Indicates that the camera's spotlight is enabled
	*[Spotlight ON — Flashing]* Indicates that the camera's spotlight is flashing
	*[Spotlight ON — SOS]* Indicates that the camera's spotlight is flashing SOS.

Note:
(1) This function is only supported by M400XR / M500-Series cameras.

14.6 Main menu

Applicability: M400-Series / M460-Series / M500-Series / M560-Series

While viewing the *[Controlled camera]* screen, you can press the *[Power]* button to access the JCU-4's *[Main menu]* screen.

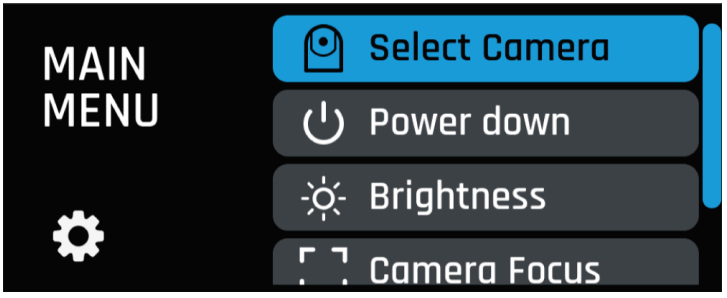

With the *[Main menu]* screen displayed, the following options are available:

Option	Description
[Select camera]	Select to change which camera is currently being controlled by the JCU-4.
[Power down]	Select to access power options for both the JCU-4 and the camera which is currently being controlled.
[Brightness]	Select to adjust the JCU-4's LCD brightness / button illumination and to also enable or disable *[Night]* mode.
[Camera focus]	Select to adjust the focus of the camera which is currently being controlled.
[JCU settings]	Select to access further configurable JCU-4 settings.


Select camera

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

You can change which compatible FLIR maritime camera the JCU-4 is currently controlling via the *[Select camera]* screen.

The *[Select camera]* screen can be accessed by:

- Navigating to: *[Controlled camera > Main menu > Select camera]*, OR;
- By press and holding the *[Active feed switch]* button.

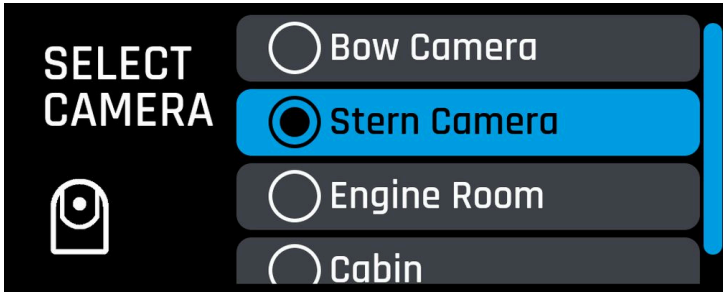


If a camera which you wish to control is not displayed, ensure that it has been selected via the *[Cameras]* configuration screen: *[Controlled camera > Main menu > JCU settings > Cameras]*.

Power down

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The JCU-4 and other compatible FLIR maritime cameras on your network can be remotely set to standby and / or restarted via the *[Power down]* screen.

The *[Power down]* screen can be accessed by navigating to: *[Controlled camera > Main menu > Power down]*.

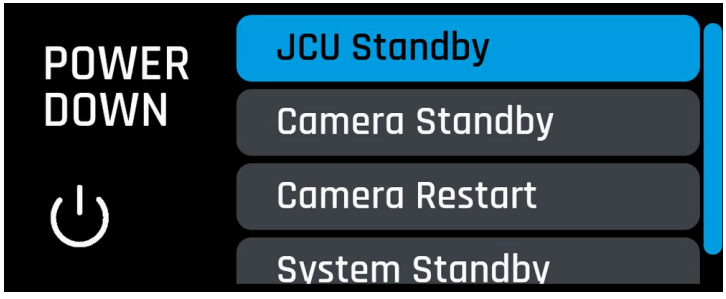

With the *[Power down]* screen displayed, the following options are available:


- *[JCU standby]* — Select to enter the JCU-4 into a standby state until operation is resumed.
- *[Camera standby]* — Select to enter the controlled camera into to a standby state until operation is resumed.
- *[Camera restart]* — Select to restart the controlled camera.
- *[System standby]* — Select to enter both the JCU-4 and the controlled camera into a standby state until operation is resumed.

Brightness

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

You can adjust the JCU-4's LCD brightness / button illumination and also enable or disable *[Night]* mode via the *[Brightness]* screen.

The *[Brightness]* screen can be accessed by navigating to: *[Controlled camera > Main menu > Brightness]*.

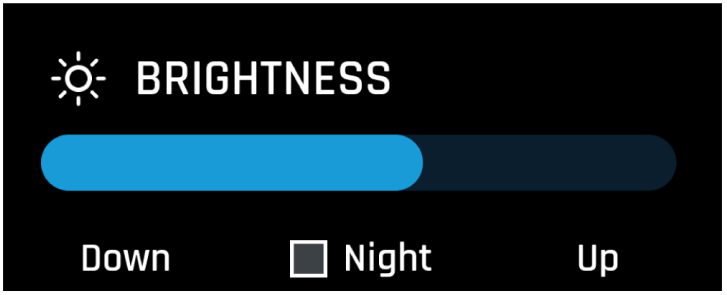

With the *[Brightness]* screen displayed, the following options are available:

- *[Down]* — Select to increase the LCD brightness and button illumination by 5%.
- *[Night]* — Select to either enable or disable *[Night]* mode.
- *[Up]* — Select to decrease the LCD brightness and button illumination by 5%.

Night mode

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The JCU-4's user interface and physical buttons can be configured to use a red color palette intended for night time use by selecting the *[Night]* mode option via the *[Brightness]* screen.

Night mode enabled	Night mode disabled



Important:
If you are using the *[Night]* mode color palette at night, be aware that your vision may be compromised when either disabling the *[Night]* mode or switching to a display screen with a higher level of brightness.


Camera focus

Applicability: M400-Series / M460-Series / M500-Series / M560-Series

The controlled camera's focus can be manually or automatically adjusted via the *[Camera focus]* screen.

The *[Camera focus]* screen can be accessed by:

- Navigating to: *[Controlled camera > Main menu > Camera focus]*
- Press and holding the *[IR Contrast]* button.

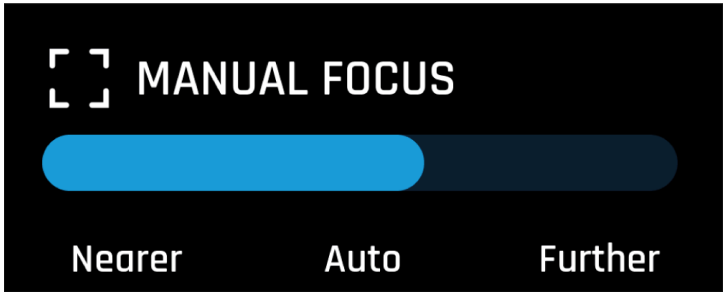

With the *[Camera focus]* screen displayed, the following options are available:


- *[Nearer]* — Select to adjust the camera's focus manually.
- *[Auto]* — Select to automatically adjust the camera's focus.
- *[Further]* — Select to adjust the camera's focus manually.

14.7 JCU settings

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M500-Series

Additional advanced settings can be accessed via the *[JCU settings]* menu.

The *[JCU settings]* menu can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings]*.

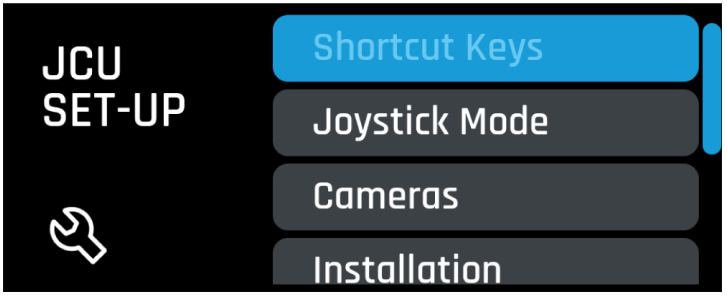

With the *[JCU settings]* menu displayed, the following options are available:

Option	Description
[Shortcut keys]	**Note:** This menu option is only available when the JCU-4 is controlling an M460-Series / M560-Series camera.
[Joystick mode]	Select to configure which direction the camera tilts when the joystick is moved up and down.
[Cameras]	Select to configure which compatible FLIR maritime cameras detected on the network can be controlled by your JCU-4.
[Installation]	Select to reconfigure the JCU-4's IP network parameters which were set during the startup wizard.
[About]	Select to display additional information related to the JCU-4.

Option	Description
[Settings reset]	Select to perform a settings reset.
[Factory reset]	Select to perform a factory reset.

Shortcut keys

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M500-Series


Note:
This menu option is only available when the JCU-4 is controlling an M460-Series / M560-Series camera.

Joystick mode

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

You can configure the JCU-4's up and down joystick inputs to either tilt the camera in the same direction as the joystick or the opposite direction via the *[Joystick mode]* screen.

The *[Joystick mode]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Joystick mode]*.

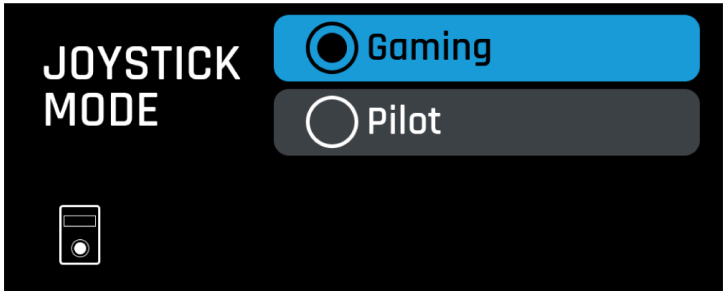

With the *[Joystick mode]* screen displayed, the following options are available:

- *[Gaming]* — Causes the camera to tilt upward when the joystick is pushed up and downward when the joystick is pushed down.
- *[Pilot]* — Causes the camera to tilt upward when the joystick is pushed down and downward when the joystick is pushed up.


The JCU-4 is set to *[Gaming]* mode by default.

Controllable cameras

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

On the *[Cameras]* screen you can select which compatible FLIR maritime camera(s) on the network can be controlled by your JCU-4.

The *[Cameras]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Cameras]*.

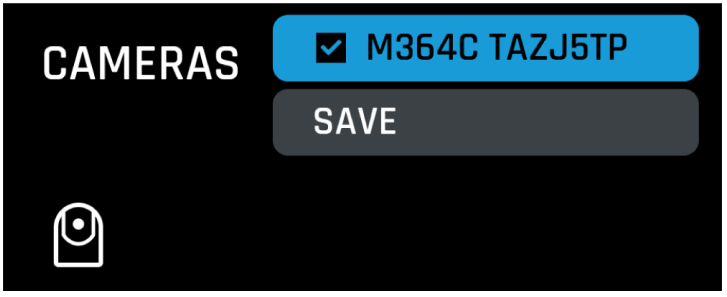

Once you have chosen the camera(s) that you wish to control using the JCU-4 and have selected *[Save]*, the chosen camera(s) will then appear on the *[Select camera]* screen.


Note:
The list of controllable cameras will dynamically update if a camera is either connected to or disconnected from the network. If a compatible FLIR maritime camera is connected to your network and cannot be automatically detected by the JCU-4 after a prolonged period, refer to the following section for troubleshooting information:
p.119 — System checks and troubleshooting

Installation

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

It is possible to reconfigure the settings which were selected during the startup wizard at any time via the *[Installation]* screen.

The *[Installation]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Installation]*.

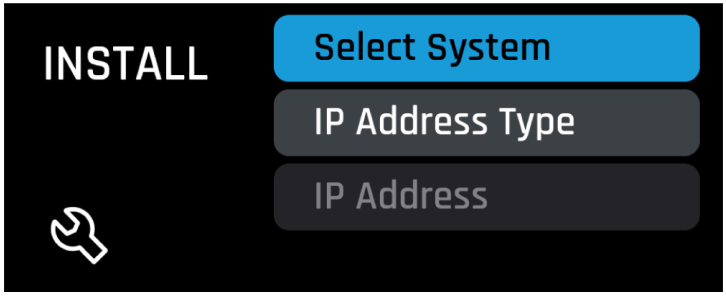

With the *[Installation]* screen displayed, the following options are available:

- *[Select system]* — Select to reconfigure the type of system that your JCU-4 is networked to.
- *[IP Address type]* — Select to reconfigure the assigned IP address type.
- (1) *[IP Address]* — Select to reconfigure the assigned static IP address and netmask.


Note:
(1) This menu option is only available if the JCU-4's assigned IP address type is set to *[Static IP]*.

About this device

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The *[About]* screen contains additional information related to the JCU-4.

The *[About]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > About]*.

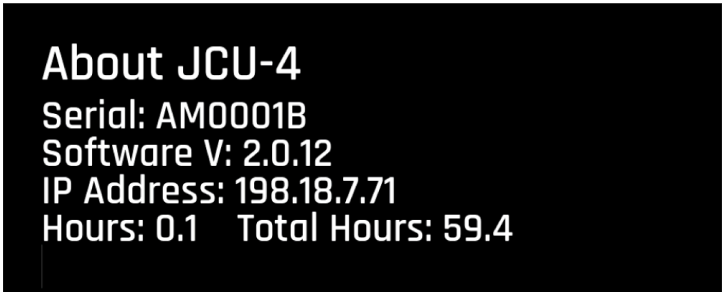

The following range of information can be found on the *[About]* screen:

- *[Serial]* — Provides the JCU-4's serial number.
- *[Software V]* — Provides the software version number that the JCU-4 is currently running.
- *[IP Address]* — Provides the JCU-4's IP address.
- *[Hours]* — Provides the number of hours that the JCU-4 has been in operation for this session.
- *[Total hours]* — Provides the total number of hours that the JCU-4 has been in operation for.

Settings reset

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

You can reset the JCU-4's configured user settings (excluding the assigned IP network parameters) via the *[Settings reset]* screen.

The *[Settings reset]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Settings reset]*.



With the *[Settings reset]* screen displayed, the following options are available:

- *[No]* — Select to cancel the reset process.
- *[Yes]* — Select to initiate the reset process. Once the JCU-4 has been reset to settings default, the unit will return back to the *[Controlled camera]* screen.

Factory reset


Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

If you wish to reset the JCU-4's configured user settings (including the assigned IP network parameters), or, if you are experiencing problems with your JCU-4 which cannot be resolved using the troubleshooting advice provided, you may need to reset the JCU-4 to factory default via the *[Factory reset]* screen.

Note:
If you are experiencing problems with your JCU-4 and have not yet followed the troubleshooting advice provided, refer to:

• **p.119 — System checks and troubleshooting**

The *[Factory reset]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Factory reset]*.

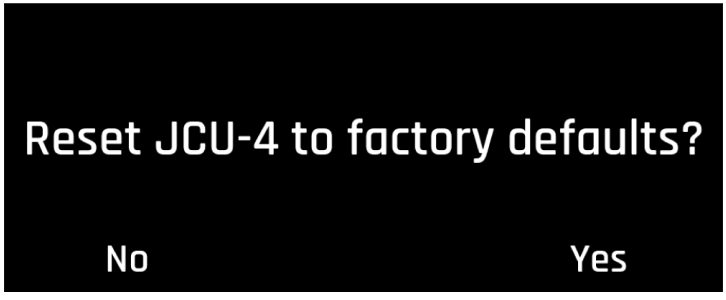

With the *[Factory reset]* screen displayed, the following options are available:

- *[No]* — Select to cancel the reset process.
- *[Yes]* — Select to initiate the reset process. Once the JCU-4 has been reset to factory default, the startup wizard will be automatically displayed on-screen.


14.8 Ready to track

Applicability: M400XR / M500-Series

You can track a target located within the camera's field of view via the JCU-4's *[Ready to track]* screen.

The *[Ready to Track]* screen can be accessed by pressing the JCU-4's *[Video tracking]* button.

Once the *[Video tracking]* button has been pressed, a tracking box will appear on the camera's live video feed and the following *[Ready to Track]* screen will be displayed on the JCU-4.

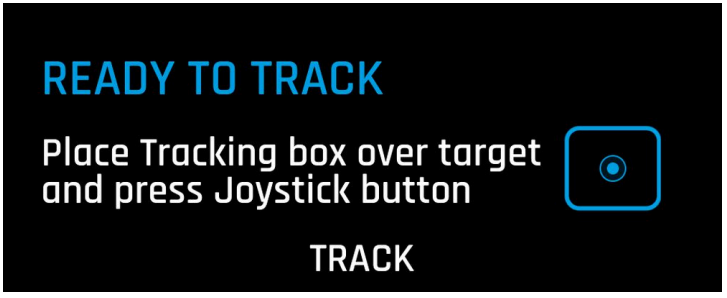


Manually center the tracking box over a target using the JCU-4's joystick.

Once the target that you wish to track is centered within the tracking box, press the JCU-4's *[Track]* softkey button or the *[Video track]* button once again to initiate target tracking.

14.9 Spotlight on

Applicability: M400-Series / M460-Series / M500-Series / M560-Series

Once your camera's spotlight has been enabled, the JCU-4 will automatically switch to display the *[Spotlight on]* screen.

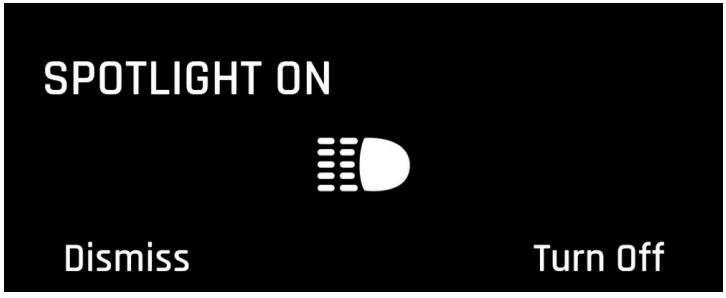

With the *[Spotlight on]* screen displayed, the following options are available:

- *[Dismiss]* — Select to return to the *[Controlled camera]* screen.
- *[Turn off]* — Select to disable the camera's spotlight and return to the *[Controlled camera]* screen.

14.10 User programmable buttons (UPBs)

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M500-Series

The JCU's User-programmable buttons (UPBs) can be configured from a compatible FLIR maritime camera's Web browser user interface and / or *[On-Screen Display]* menu.

You can assign a different action to each UPB (for example, "Park" or "Surveillance mode") on a per-camera basis.


Note:
UPB assignments apply to individual cameras rather than specific JCU units. This means that, if you are using a single JCU unit to control 2 FLIR maritime cameras, UPB number 1 could be configured to initiate a different action on each camera.

Programming UPBs via the Web interface

Applicability: M100-Series / M200-Series / M400-Series / M500-Series

To configure the JCU's user-programmable buttons (UPBs) using an M100-Series, M200-Series, M400-Series or M500-Series camera's Web browser user interface:

1. From the camera's Web browser user interface, select *[Setup]* on the top menu.
   The *[Setup]* menu is displayed.
2. From the left-hand panel, select *[JCU]*.
   The *[UPB Configuration]* panel is displayed:

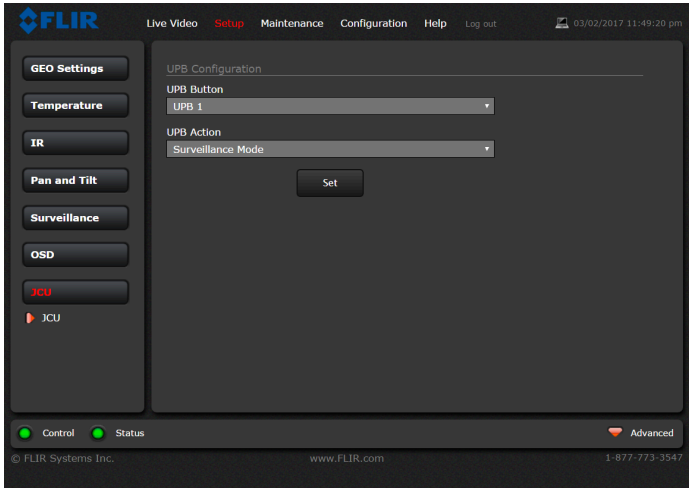

3. From the *[UPB Button]* list, select the button you wish to configure.
4. From the *[UPB Action]* list, choose the camera action you wish to associate with that UPB button.
5. Repeat steps 3 and 4 for each UPB you wish to configure.
6. Click *[Set]* to save the UPB Configuration.


Programming UPBs via the On-Screen Display (OSD) menu

Applicability: M300-Series / M400-Series / M500-Series

User-programmable buttons (UPBs) can also be assigned from the On Screen Display (OSD) menu when connected to a video display.

To configure the UPBs using the camera's *[OSD]* menu:

1. Press the *[Menu]* button.
   The *[OSD]* menu is displayed:

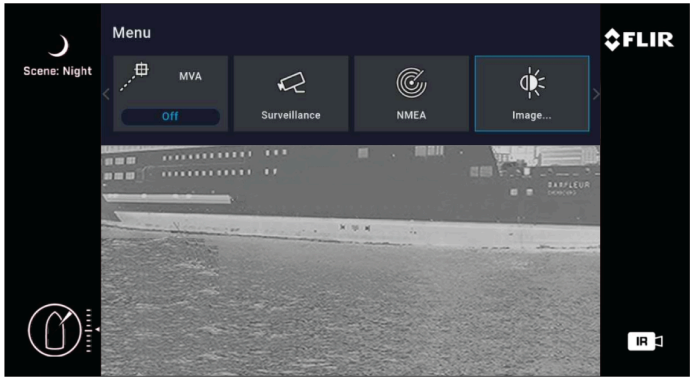

2. Scroll through the menu using the joystick, and select *[Settings]*.
   The *[Settings]* menu is displayed.
3. Select *[User Interface]*.
   The *[User Interface]* menu is displayed.
4. From the *[UPB Button]* list, select the button you wish to configure.
5. From the *[UPB Action]* list, choose the camera action you wish to associate with that UPB button.
6. Repeat steps 4 and 5 for each UPB you wish to configure.

CHAPTER 15: OPERATION (M300-SERIES)


CHAPTER CONTENTS

- 15.1 Controls overview — page 78
- 15.2 Powering on the unit — page 79
- 15.3 Startup wizard — page 79
- 15.4 Camera detection — page 81
- 15.5 Controlled camera — page 81
- 15.6 Main menu — page 82
- 15.7 JCU settings — page 83
- 15.8 User programmable buttons (UPBs) — page 87

15.1 Controls overview

Applicability: M300-Series

The JCU-4 buttons and their associated functions (while controlling an M300-Series camera) are described below.

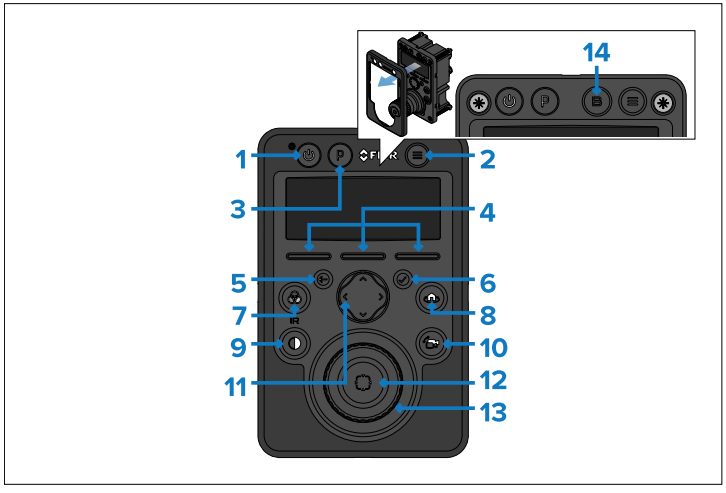

	Description
1	*[Power]* • With the JCU-4 powered off, press to power the unit on. • With the JCU-4 powered on, press to display the *[Main menu]* screen. • With the *[Main menu]* screen displayed, press to access the *[Brightness]* screen. • With the *[Brightness]* screen displayed, press to increase the JCU-4's brightness by 20%. • With the JCU-4 powered on, press and hold to power the unit off.
2	*[On-screen Display]* • (1) Press to show / hide the camera's *[On-screen Display]* menu on a networked video display.
3	*[Park]* • (1) Press to park the camera.
4	*[Softkey 1, Softkey 2, Softkey 3]* • Press to initiate the corresponding action displayed on-screen. • With the *[Controlled camera]* screen displayed, press to initiate the corresponding *[UPB 1 / UPB 2 / UPB 3]* action assigned via your FLIR maritime camera's Web browser user interface or *[On-Screen Display]* menu. • With the *[Controlled camera]* screen displayed, press and hold to show the on-screen display *[User-programmable buttons]* submenu on a networked video display.
5	*[Back]* • With a (sub)menu displayed, press to return back to the previous screen.
6	*[Select]* • With a (sub)menu displayed, press to select the highlighted item.
7	*[IR Color]* • Press to cycle between infrared color palettes on the camera's thermal video feed. • Press and hold to invert the infrared color palette displayed on the camera's thermal video feed. • Press and hold, then hold the joystick upward to display the JCU-4 and camera's IP addresses.
8	*[Home]* • (1) Press to return the camera to the configured home position. • (1) Press and hold to save the current azimuth and elevation as the camera's home position.

	Description
9	*[IR Contrast]* • Press to cycle between infrared contrast palettes on the camera's thermal video feed.
10	*[Active feed switch]* • **(Multi-payload cameras only)** Press to change which camera payload is being controlled by the JCU-4. • Press and hold to display the *[Select camera]* screen.
11	*[Navigation pad]* • Press to pan and tilt the camera. • With a (sub)menu displayed, press to change the highlighted menu option.
12	*[Video tracking]* **Note:** The function(s) associated with this button are not supported by M300-Series cameras.
13	*[Joystick]* • Twist to (un)zoom the camera's active payload. • Push up / down to tilt the camera. • Push left or right to rotate the camera.
14	*[Reboot (over Ethernet)]* • Press to reboot the JCU-4 (over Ethernet).

Note:
(1) For more information, refer to the documentation that is supplied with your compatible FLIR maritime camera:

• (71004) M300-Series Thermal Camera Installation and Operation Instructions.


Please ensure that you obtain the **latest version** of your documentation via the FLIR website: www.bit.ly/m300-docs

15.2 Powering on the unit

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The JCU-4 can be turned on by pressing the *[Power]* button.

After the *[Power]* button has been pressed, the following screen will be displayed as your unit begins to power on:

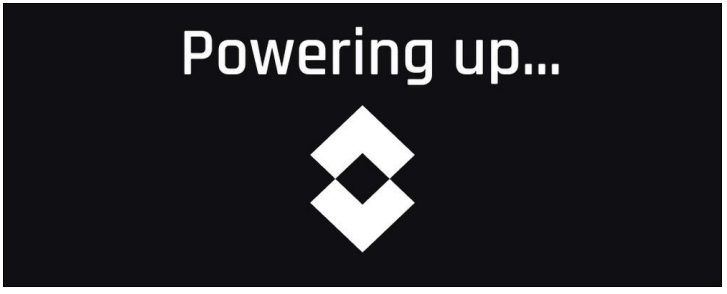

15.3 Startup wizard

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

If your unit is being switched on for the first time or if a factory reset has just occurred, you will be required to configure your unit via the startup wizard.


Note:
While proceeding through the startup wizard, the *[Back]* button can be selected at any time to return to the previous screen.

System selection

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

On the *[Select system]* startup wizard screen, you will be prompted to select the type of system that your JCU-4 is networked to.

The JCU-4 will be automatically assigned an IP address type according to the system type that you have selected.

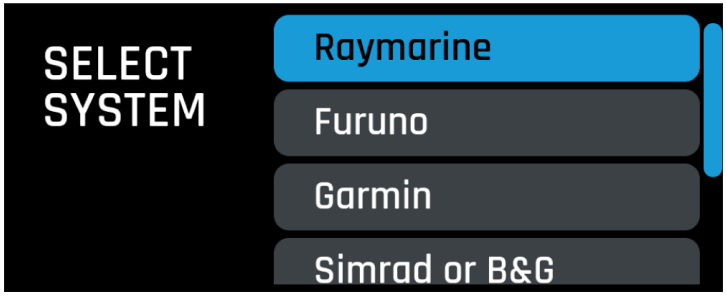

The following system options are available:

System	IP address type
• *[Raymarine]* • *[Garmin]* • *[Simrad or B&G]* • *[Lowrance]*	**Dynamic IP (DHCP):** DHCP (**D**ynamic **H**ost **C**ontrol **P**rotocol) is used to automatically assign IP addresses and other important IP-network parameters to devices on a network.
• *[Furuno]* • *[Other]*	**Static IP:** Networks that do NOT use DHCP or link local IP addressing require a **static IP** address to be permanently assigned to each connected device.

If the system option that you have selected is listed above as being assigned a **dynamic IP** address type, the startup wizard will complete and you will be automatically redirected onto the *[Controlled camera]* screen.

If the system option that you have selected is listed above as being assigned a **static IP** address type, you will instead be redirected onto the *[Enter IP address]* screen.

Assigning a static IP address

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The following steps provide instructions on how to assign the JCU-4 a static IP address via the *[Enter IP address]* screen.

Note:
Some IP networks require IP addresses to be within a specific range. When setting your IP address, ensure that it is within an allowed range as specified by your network administrator

Note:
IP addresses are self-allocated by certain Raymarine equipment in the following range: 198.18.0.32 to 198.18.3.254 (inclusive). On networks featuring Raymarine-branded IP devices, you must avoid placing any devices in this range using manual (static) IP addresses.

From the *[Enter IP address]* screen:

1. Use the *[Navigation up]* and *[Navigation down]* buttons to change the numerical value displayed in the highlighted field.
2. Once the value shown for the highlighted field is correct, use the *[Navigation left]* and *[Navigation right]* buttons to change which field is highlighted.
3. After you have entered a valid address, press the *[Next]* softkey button to proceed onto the *[Enter netmask]* screen.

Assigning a netmask

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The following steps provide instructions on how to assign the JCU-4 a netmask via the *[Enter netmask]* screen.

From the *[Enter netmask]* screen:

1. Optionally, press the *[Default]* softkey button to change the address shown on-screen to '255.255.255.0'.
2. Use the *[Navigation up]* and *[Navigation down]* buttons to change the numerical value displayed in the highlighted field.
3. Once the value shown for the highlighted field is correct, use the *[Navigation left]* and *[Navigation right]* buttons to change which field is highlighted.
4. After you have entered a valid address, press the *[Save]* softkey button.

15.4 Camera detection

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series


The JCU-4 will automatically attempt to search for compatible FLIR maritime cameras on the network once every 30 seconds.

Note:
If a compatible camera is connected to your network and cannot be automatically detected by your unit after a prolonged period, refer to the following section for troubleshooting information:
p.119 — System checks and troubleshooting

15.5 Controlled camera

Applicability: M300-Series / M400-Series / M500-Series

Once the start-up process has been completed, the following *[Controlled camera]* screen will be displayed.

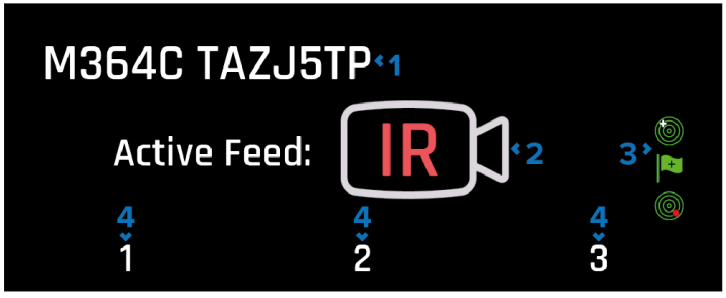


From the *[Controlled camera]* screen, the following key information can be viewed and / or interacted with:

	Description
1	*[Camera name]* Indicates the camera which is currently being controlled.
2	*[Active feed]* Indicates which camera payload is currently being controlled.
3	*[Status icons]* Indicates which camera functions are currently enabled.
4	*[User programmable button (UPB 1 / UPB 2 / UPB 3)]* Corresponds to the *[UPB 1 / UPB 2 / UPB 3]* action assigned on your FLIR maritime camera's Web browser user interface or *[On-Screen Display]* menu. While viewing the *[Controlled camera]* screen: • Pressing the associated softkey button will initiate the assigned action. • Press and holding the associated softkey button will show the on-screen display *[User-programmable buttons]* submenu on a networked video display.

Status icons

Applicability: M300-Series


The following status icons can be monitored via the status area located on the right side of the *[Controlled cameras]* screen:

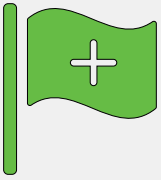Icon	Description
	*[NMEA tracking — Radar cursor (RSD)]* Indicates that Radar cursor (RSD) tracking is enabled and that the camera's field of view can be directed by the radar display's cursor.
	*[NMEA tracking — Next waypoint (BWC)]* Indicates that Next waypoint (RSD) tracking is enabled and that the camera's field of view can be directed by a selected waypoint's position.
	*[NMEA tracking — Radar target (TTM)]* Indicates that Radar target (TTM) tracking is enabled and that the camera's field of view can be directed by a selected radar target's position.

15.6 Main menu

Applicability: MD-Series / M100-Series / M200-Series / M300-Series

While viewing the *[Controlled camera]* screen, you can press the *[Power]* button to access the JCU-4's *[Main menu]* screen.

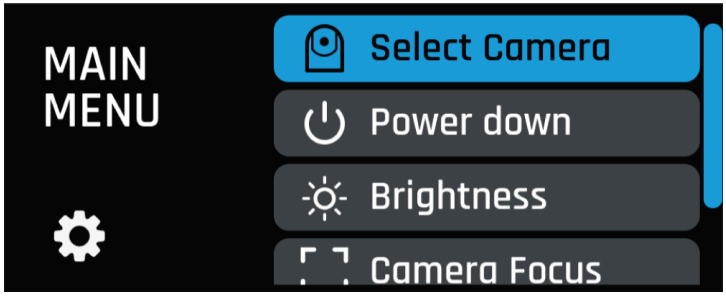

With the *[Main menu]* screen displayed, the following options are available:

Option	Description
[Select camera]	Select to change the which camera is currently being controlled by the JCU-4.
[Power down]	Select to access power options for both the JCU-4 and the camera which is currently being controlled.
[Brightness]	Select to adjust the JCU-4's LCD brightness / button illumination and to also enable or disable *[Night]* mode.
[Camera focus]	**Note:** This function is only supported by M400-Series / M460-Series / M500-Series / M560-Series cameras.
[JCU settings]	Select to access further configurable JCU-4 settings.


Select camera

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

You can change which compatible FLIR maritime camera the JCU-4 is currently controlling via the *[Select camera]* screen.

The *[Select camera]* screen can be accessed by:

- Navigating to: *[Controlled camera > Main menu > Select camera]*, OR;
- By press and holding the *[Active feed switch]* button.

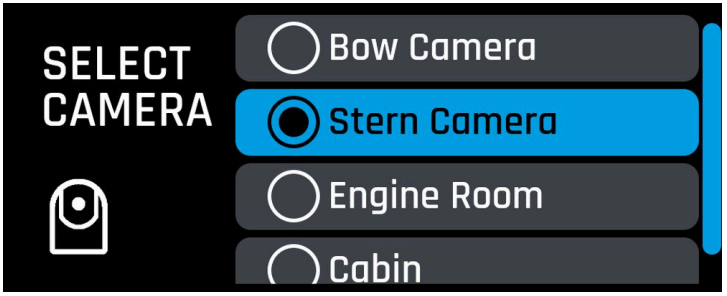


If a camera which you wish to control is not displayed, ensure that it has been selected via the *[Cameras]* configuration screen: *[Controlled camera > Main menu > JCU settings > Cameras]*.

Power down

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The JCU-4 and other compatible FLIR maritime cameras on your network can be remotely set to standby and / or restarted via the *[Power down]* screen.

The *[Power down]* screen can be accessed by navigating to: *[Controlled camera > Main menu > Power down]*.

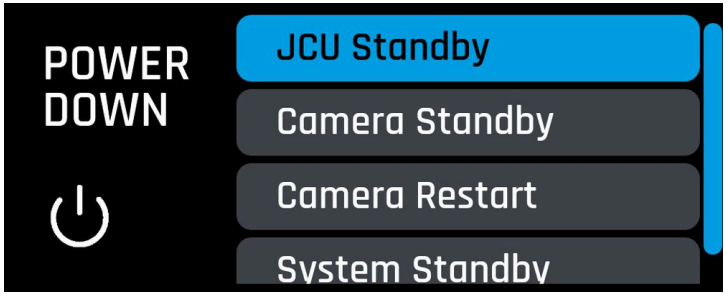

With the *[Power down]* screen displayed, the following options are available:


- *[JCU standby]* — Select to enter the JCU-4 into a standby state until operation is resumed.
- *[Camera standby]* — Select to enter the controlled camera into to a standby state until operation is resumed.
- *[Camera restart]* — Select to restart the controlled camera.
- *[System standby]* — Select to enter both the JCU-4 and the controlled camera into a standby state until operation is resumed.

Brightness

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

You can adjust the JCU-4's LCD brightness / button illumination and also enable or disable *[Night]* mode via the *[Brightness]* screen.

The *[Brightness]* screen can be accessed by navigating to: *[Controlled camera > Main menu > Brightness]*.

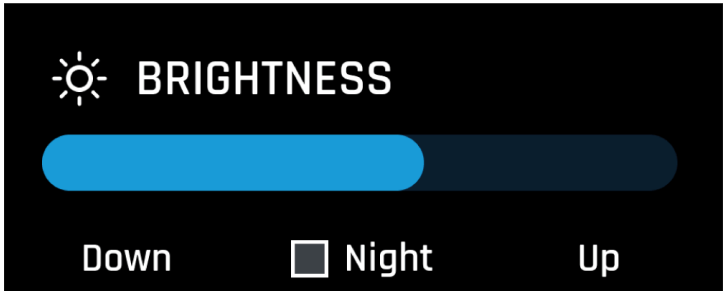



With the *[Brightness]* screen displayed, the following options are available:

- *[Down]* — Select to increase the LCD brightness and button illumination by 5%.
- *[Night]* — Select to either enable or disable *[Night]* mode.
- *[Up]* — Select to decrease the LCD brightness and button illumination by 5%.

Night mode

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The JCU-4's user interface and physical buttons can be configured to use a red color palette intended for night time use by selecting the *[Night]* mode option via the *[Brightness]* screen.

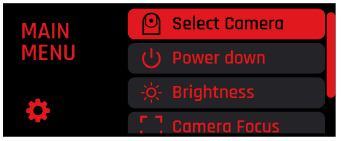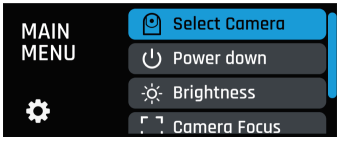Night mode enabled	Night mode disabled
	

Important:
If you are using the *[Night]* mode color palette at night, be aware that your vision may be compromised when either disabling the *[Night]* mode or switching to a display screen with a higher level of brightness.

Camera focus

Applicability: MD-Series / M100-Series / M200-Series / M300-Series


Note:
This function is only supported by M400-Series / M460-Series / M500-Series / M560-Series cameras.

15.7 JCU settings

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M500-Series

Additional advanced settings can be accessed via the *[JCU settings]* menu.

The *[JCU settings]* menu can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings]*.

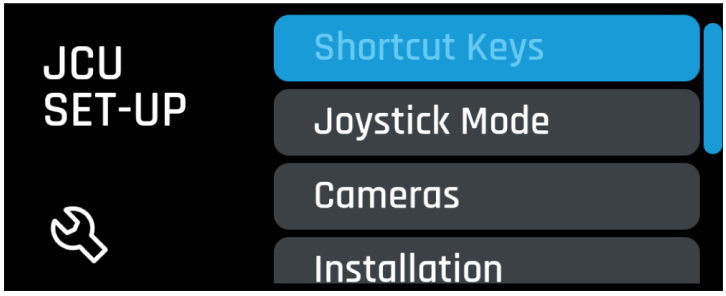

With the *[JCU settings]* menu displayed, the following options are available:

Option	Description
[Shortcut keys]	**Note:** This menu option is only available when the JCU-4 is controlling an M460-Series / M560-Series camera.
[Joystick mode]	Select to configure which direction the camera tilts when the joystick is moved up and down.
[Cameras]	Select to configure which compatible FLIR maritime cameras detected on the network can be controlled by your JCU-4.
[Installation]	Select to reconfigure the JCU-4's IP network parameters which were set during the startup wizard.
[About]	Select to display additional information related to the JCU-4.
[Settings reset]	Select to perform a settings reset.
[Factory reset]	Select to perform a factory reset.

Shortcut keys

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M500-Series


Note:
This menu option is only available when the JCU-4 is controlling an M460-Series / M560-Series camera.

Joystick mode

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

You can configure the JCU-4's up and down joystick inputs to either tilt the camera in the same direction as the joystick or the opposite direction via the *[Joystick mode]* screen.

The *[Joystick mode]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Joystick mode]*.

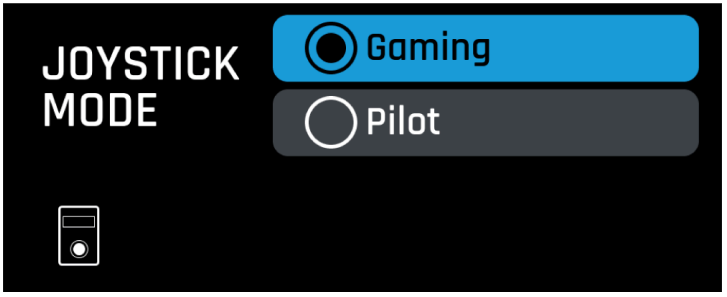

With the *[Joystick mode]* screen displayed, the following options are available:

- *[Gaming]* — Causes the camera to tilt upward when the joystick is pushed up and downward when the joystick is pushed down.
- *[Pilot]* — Causes the camera to tilt upward when the joystick is pushed down and downward when the joystick is pushed up.


The JCU-4 is set to *[Gaming]* mode by default.

Controllable cameras

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

On the *[Cameras]* screen you can select which compatible FLIR maritime camera(s) on the network can be controlled by your JCU-4.

The *[Cameras]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Cameras]*.

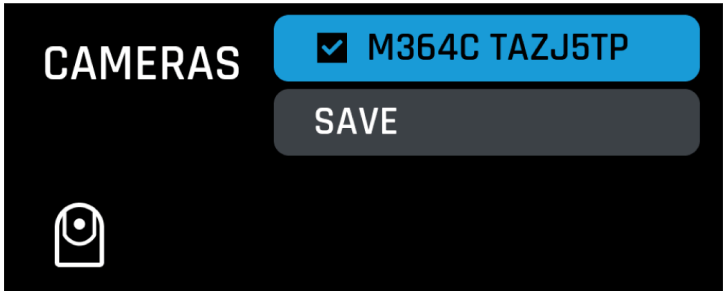

Once you have chosen the camera(s) that you wish to control using the JCU-4 and have selected *[Save]*, the chosen camera(s) will then appear on the *[Select camera]* screen.


Note:
The list of controllable cameras will dynamically update if a camera is either connected to or disconnected from the network. If a compatible FLIR maritime camera is connected to your network and cannot be automatically detected by the JCU-4 after a prolonged period, refer to the following section for troubleshooting information:
p.119 — System checks and troubleshooting

Installation

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

It is possible to reconfigure the settings which were selected during the startup wizard at any time via the *[Installation]* screen.

The *[Installation]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Installation]*.

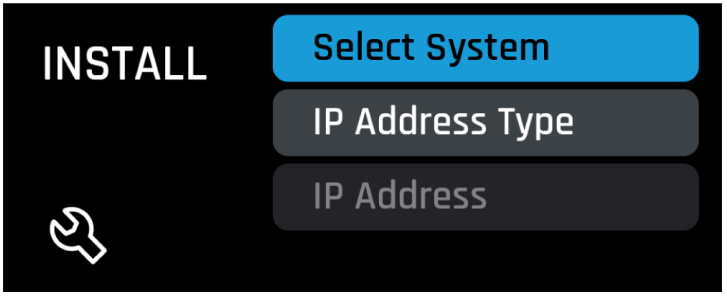

With the *[Installation]* screen displayed, the following options are available:

- *[Select system]* — Select to reconfigure the type of system that your JCU-4 is networked to.
- *[IP Address type]* — Select to reconfigure the assigned IP address type.
- (1) *[IP Address]* — Select to reconfigure the assigned static IP address and netmask.


Note:
(1) This menu option is only available if the JCU-4's assigned IP address type is set to *[Static IP]*.

About this device

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The *[About]* screen contains additional information related to the JCU-4.

The *[About]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > About]*.

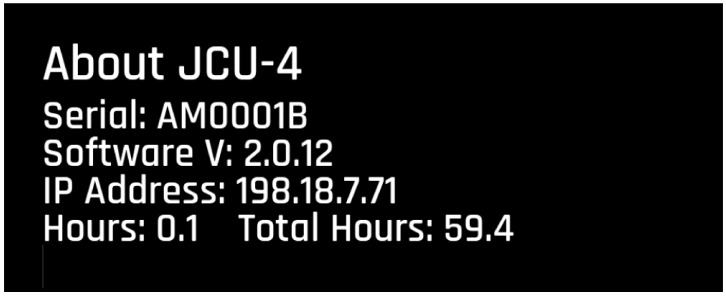

The following range of information can be found on the *[About]* screen:

- *[Serial]* — Provides the JCU-4's serial number.
- *[Software V]* — Provides the software version number that the JCU-4 is currently running.
- *[IP Address]* — Provides the JCU-4's IP address.
- *[Hours]* — Provides the number of hours that the JCU-4 has been in operation for this session.
- *[Total hours]* — Provides the total number of hours that the JCU-4 has been in operation for.

Settings reset

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

You can reset the JCU-4's configured user settings (excluding the assigned IP network parameters) via the *[Settings reset]* screen.

The *[Settings reset]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Settings reset]*.



With the *[Settings reset]* screen displayed, the following options are available:

- *[No]* — Select to cancel the reset process.
- *[Yes]* — Select to initiate the reset process. Once the JCU-4 has been reset to settings default, the unit will return back to the *[Controlled camera]* screen.

Factory reset


Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

If you wish to reset the JCU-4's configured user settings (including the assigned IP network parameters), or, if you are experiencing problems with your JCU-4 which cannot be resolved using the troubleshooting advice provided, you may need to reset the JCU-4 to factory default via the *[Factory reset]* screen.

Note:
If you are experiencing problems with your JCU-4 and have not yet followed the troubleshooting advice provided, refer to:

• **p.119 — System checks and troubleshooting**

The *[Factory reset]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Factory reset]*.

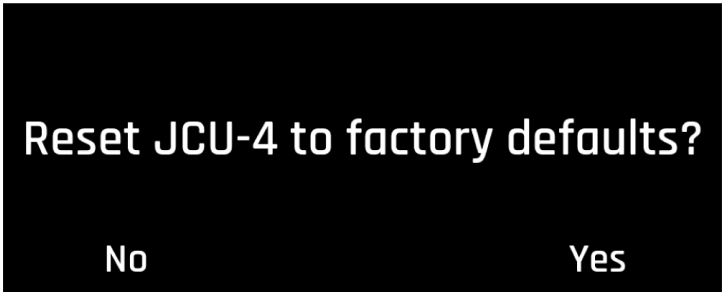

With the *[Factory reset]* screen displayed, the following options are available:

- *[No]* — Select to cancel the reset process.
- *[Yes]* — Select to initiate the reset process. Once the JCU-4 has been reset to factory default, the startup wizard will be automatically displayed on-screen.

15.8 User programmable buttons (UPBs)

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M500-Series

The JCU's User-programmable buttons (UPBs) can be configured from a compatible FLIR maritime camera's Web browser user interface and / or *[On-Screen Display]* menu.

You can assign a different action to each UPB (for example, "Park" or "Surveillance mode") on a per-camera basis.

Note:
UPB assignments apply to individual cameras rather than specific JCU units. This means that, if you are using a single JCU unit to control 2 FLIR maritime cameras, UPB number 1 could be configured to initiate a different action on each camera.

Programming UPBs via the Web interface


Applicability: M300-Series

To configure the JCU's user-programmable buttons (UPBs) using an M300-Series camera's Web browser user interface:

1. From the camera's Web browser user interface, select *[System Settings]* at the bottom left of the menu.

   The camera's settings page is displayed.
2. From the options displayed at the top, select *[JCU]*.

   The *[JCU]* setting page is displayed:

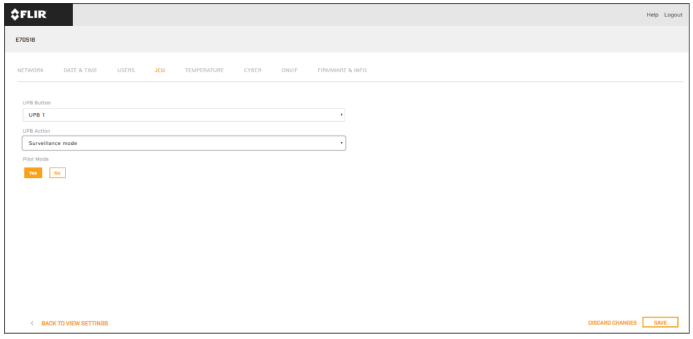

3. From the *[UPB Button]* list, select the button you wish to configure.
4. From the *[UPB Action]* list, choose the camera action you wish to associate with that UPB button.
5. Repeat steps 3 and 4 for each UPB you wish to configure.
6. Select *[Save]* to save the UPB Configuration.

Programming UPBs via the On-Screen Display (OSD) menu


Applicability: M300-Series / M400-Series / M500-Series

User-programmable buttons (UPBs) can also be assigned from the On Screen Display (OSD) menu when connected to a video display.

To configure the UPBs using the camera's *[OSD]* menu:

1. Press the *[Menu]* button.

   The *[OSD]* menu is displayed:

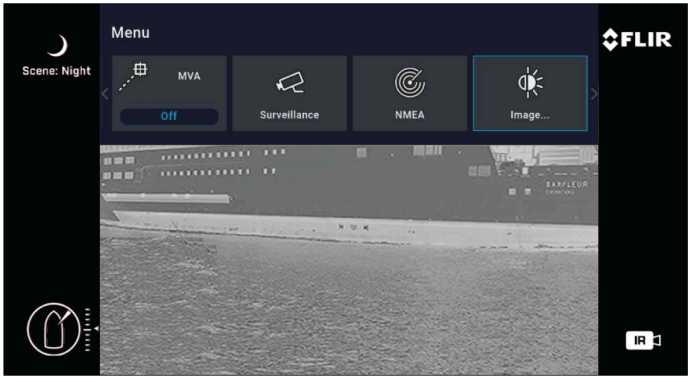

2. Scroll through the menu using the joystick, and select *[Settings]*.

   The *[Settings]* menu is displayed.
3. Select *[User Interface]*.

   The *[User Interface]* menu is displayed.
4. From the *[UPB Button]* list, select the button you wish to configure.
5. From the *[UPB Action]* list, choose the camera action you wish to associate with that UPB button.
6. Repeat steps 4 and 5 for each UPB you wish to configure.

CHAPTER 16: OPERATION (M100-SERIES / M200-SERIES)


CHAPTER CONTENTS

- 16.1 Controls overview — page 89
- 16.2 Powering on the unit — page 90
- 16.3 Startup wizard — page 91
- 16.4 Camera detection — page 92
- 16.5 Controlled camera — page 92
- 16.6 Main menu — page 92
- 16.7 JCU settings — page 94
- 16.8 User programmable buttons (UPBs) — page 97

16.1 Controls overview

Applicability: M100-Series / M200-Series

The JCU-4 buttons and their associated functions (while controlling an M100-Series / M200-Series camera) are described below.

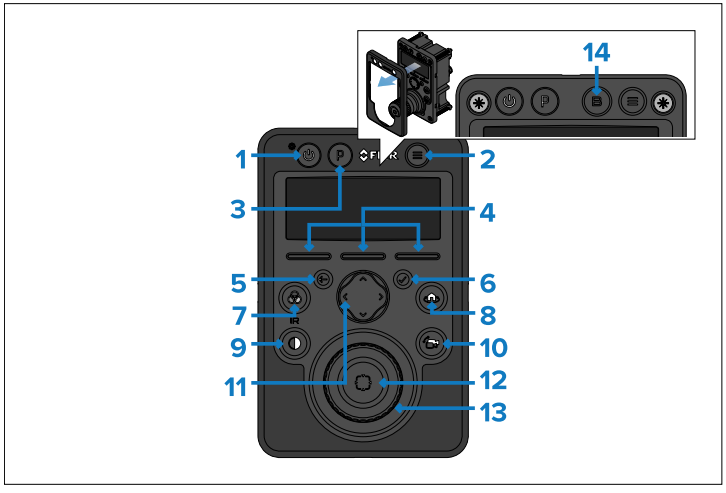

	Description
1	*[Power]* • With the JCU-4 powered off, press to power the unit on. • With the JCU-4 powered on, press to display the *[Main menu]* screen. • With the *[Main menu]* screen displayed, press to access the *[Brightness]* screen. • With the *[Brightness]* screen displayed, press to increase the JCU-4's brightness by 20%. • With the JCU-4 powered on, press and hold to power the unit off.
2	*[On-screen Display]* **Note:** The function(s) associated with this button are not supported by M100-Series / M200-Series cameras.
3	*[Park]* • **(1)** Press to park the camera.
4	*[Softkey 1, Softkey 2, Softkey 3]* • Press to initiate the corresponding action displayed on-screen. • With the *[Controlled camera]* screen displayed, press to initiate the corresponding *[UPB 1 / UPB 2 / UPB 3]* action assigned via your FLIR maritime camera's Web browser user interface.
5	*[Back]* • With a (sub)menu displayed, press to return back to the previous screen.
6	*[Select]* • With a (sub)menu displayed, press to select the highlighted item.

	Description
7	*[IR Color]* • Press to cycle between infrared color palettes on the controlled camera's thermal video feed. • Press and hold to invert the infrared color palette displayed on the controlled camera's thermal video feed. • Press and hold, then hold the joystick upward to display the JCU-4 and camera's IP addresses.
8	*[Home]* • (1) Press to return the camera to the configured home position. • (1) Press and hold to save the current azimuth and elevation as the camera's home position.
9	*[IR Contrast]* • Press to cycle between infrared contrast palettes on the camera's thermal video feed.
10	*[Active feed switch]* • Press and hold to display the *[Select camera]* screen.
11	*[Navigation pad]* • Press to pan and tilt the camera. • With a (sub)menu displayed, press to change the highlighted menu option.
12	*[Video tracking]* **Note:** The function(s) associated with this button are not supported by M100-Series / M200-Series cameras.

	Description
13	*[Joystick]* • Twist to (un)zoom the camera's thermal payload. • Push up / down to tilt the camera. • Push left or right to rotate the camera.
14	*[Reboot (over Ethernet)]* • Press to reboot the JCU-4 (over Ethernet).

Note:
(1) For more information, refer to the documentation that is supplied with your compatible FLIR maritime camera:

• (71001) M100-Series / M200-Series Thermal Camera Installation and Operation Instructions.


Please ensure that you obtain the **latest version** of your documentation via the FLIR website: www.bit.ly/m100-m200-manual

16.2 Powering on the unit

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The JCU-4 can be turned on by pressing the *[Power]* button.

After the *[Power]* button has been pressed, the following screen will be displayed as your unit begins to power on:

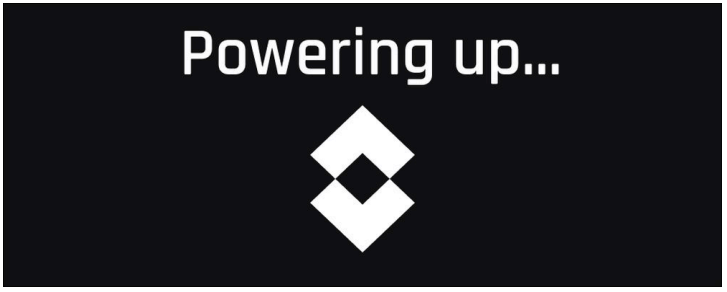

16.3 Startup wizard

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

If your unit is being switched on for the first time or if a factory reset has just occurred, you will be required to configure your unit via the startup wizard.


Note:
While proceeding through the startup wizard, the *[Back]* button can be selected at any time to return to the previous screen.

System selection

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

On the *[Select system]* startup wizard screen, you will be prompted to select the type of system that your JCU-4 is networked to.

The JCU-4 will be automatically assigned an IP address type according to the system type that you have selected.

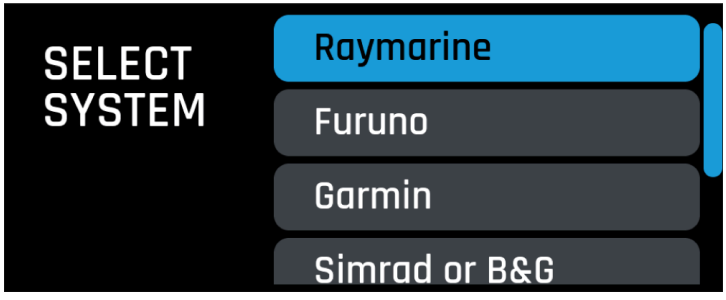

The following system options are available:

System	IP address type
• *[Raymarine]* • *[Garmin]* • *[Simrad or B&G]* • *[Lowrance]*	**Dynamic IP (DHCP):** DHCP (**D**ynamic **H**ost **C**ontrol **P**rotocol) is used to automatically assign IP addresses and other important IP-network parameters to devices on a network.
• *[Furuno]* • *[Other]*	**Static IP:** Networks that do NOT use DHCP or link local IP addressing require a **static IP** address to be permanently assigned to each connected device.

If the system option that you have selected is listed above as being assigned a **dynamic IP** address type, the startup wizard will complete and you will be automatically redirected onto the *[Controlled camera]* screen.

If the system option that you have selected is listed above as being assigned a **static IP** address type, you will instead be redirected onto the *[Enter IP address]* screen.

Assigning a static IP address

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The following steps provide instructions on how to assign the JCU-4 a static IP address via the *[Enter IP address]* screen.

Note:
Some IP networks require IP addresses to be within a specific range. When setting your IP address, ensure that it is within an allowed range as specified by your network administrator

Note:
IP addresses are self-allocated by certain Raymarine equipment in the following range: 198.18.0.32 to 198.18.3.254 (inclusive). On networks featuring Raymarine-branded IP devices, you must avoid placing any devices in this range using manual (static) IP addresses.

From the *[Enter IP address]* screen:

1. Use the *[Navigation up]* and *[Navigation down]* buttons to change the numerical value displayed in the highlighted field.

2. Once the value shown for the highlighted field is correct, use the *[Navigation left]* and *[Navigation right]* buttons to change which field is highlighted.
3. After you have entered a valid address, press the *[Next]* softkey button to proceed onto the *[Enter netmask]* screen.

Assigning a netmask

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The following steps provide instructions on how to assign the JCU-4 a netmask via the *[Enter netmask]* screen.

From the *[Enter netmask]* screen:

1. Optionally, press the *[Default]* softkey button to change the address shown on-screen to '255.255.255.0'.
2. Use the *[Navigation up]* and *[Navigation down]* buttons to change the numerical value displayed in the highlighted field.
3. Once the value shown for the highlighted field is correct, use the *[Navigation left]* and *[Navigation right]* buttons to change which field is highlighted.
4. After you have entered a valid address, press the *[Save]* softkey button.

16.4 Camera detection

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The JCU-4 will automatically attempt to search for compatible FLIR maritime cameras on the network once every 30 seconds.

Note:
If a compatible camera is connected to your network and cannot be automatically detected by your unit after a prolonged period, refer to the following section for troubleshooting information:
p.119 — System checks and troubleshooting

16.5 Controlled camera

Applicability: M100-Series / M200-Series

Once the start-up process has been completed, the following *[Controlled camera]* screen will be displayed.




From the *[Controlled camera]* screen, the following key information can be viewed and / or interacted with:

	Description
1	*[Camera name]* Indicates the camera which is currently being controlled.
2	*[Active feed]* Indicates which camera payload is currently being controlled.
3	*[User programmable button (UPB 1 / UPB 2 / UPB 3)]* Corresponds to the *[UPB 1 / UPB 2 / UPB 3]* action assigned on your FLIR maritime camera's Web browser user interface. While viewing the *[Controlled camera]* screen: • Pressing the associated softkey button will initiate the assigned action. • Press and holding the associated softkey button will show the on-screen display *[User-programmable buttons]* submenu on a networked video display.

16.6 Main menu

Applicability: MD-Series / M100-Series / M200-Series / M300-Series

While viewing the *[Controlled camera]* screen, you can press the *[Power]* button to access the JCU-4's *[Main menu]* screen.

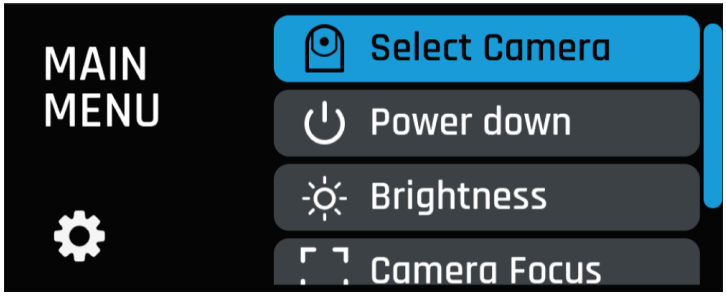

With the *[Main menu]* screen displayed, the following options are available:

Option	Description
[Select camera]	Select to change the which camera is currently being controlled by the JCU-4.
[Power down]	Select to access power options for both the JCU-4 and the camera which is currently being controlled.
[Brightness]	Select to adjust the JCU-4's LCD brightness / button illumination and to also enable or disable *[Night]* mode.
[Camera focus]	**Note:** This function is only supported by M400-Series / M460-Series / M500-Series / M560-Series cameras.
[JCU settings]	Select to access further configurable JCU-4 settings.


Select camera

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

You can change which compatible FLIR maritime camera the JCU-4 is currently controlling via the *[Select camera]* screen.

The *[Select camera]* screen can be accessed by:

- Navigating to: *[Controlled camera > Main menu > Select camera]*, OR;
- By press and holding the *[Active feed switch]* button.

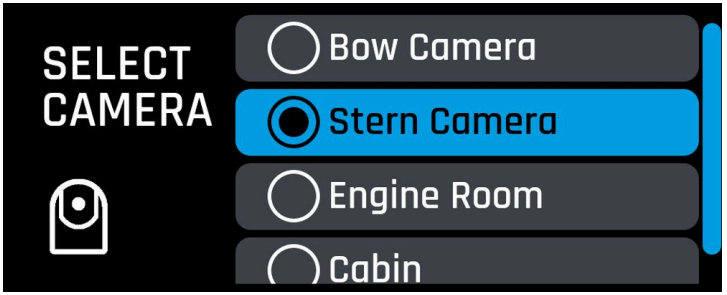


If a camera which you wish to control is not displayed, ensure that it has been selected via the *[Cameras]* configuration screen: *[Controlled camera > Main menu > JCU settings > Cameras]*.

Power down

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The JCU-4 and other compatible FLIR maritime cameras on your network can be remotely set to standby and / or restarted via the *[Power down]* screen.

The *[Power down]* screen can be accessed by navigating to: *[Controlled camera > Main menu > Power down]*.

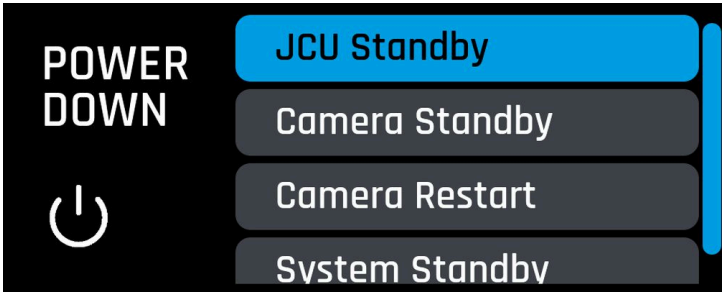

With the *[Power down]* screen displayed, the following options are available:

- *[JCU standby]* — Select to enter the JCU-4 into a standby state until operation is resumed.
- *[Camera standby]* — Select to enter the controlled camera into to a standby state until operation is resumed.


- *[Camera restart]* — Select to restart the controlled camera.
- *[System standby]* — Select to enter both the JCU-4 and the controlled camera into a standby state until operation is resumed.

Brightness

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

You can adjust the JCU-4's LCD brightness / button illumination and also enable or disable *[Night]* mode via the *[Brightness]* screen.

The *[Brightness]* screen can be accessed by navigating to: *[Controlled camera > Main menu > Brightness]*.

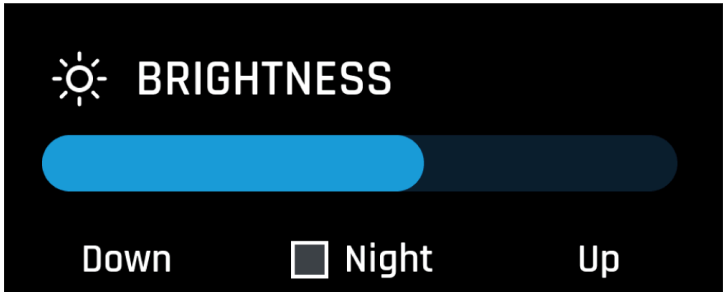



With the *[Brightness]* screen displayed, the following options are available:

- *[Down]* — Select to increase the LCD brightness and button illumination by 5%.
- *[Night]* — Select to either enable or disable *[Night]* mode.
- *[Up]* — Select to decrease the LCD brightness and button illumination by 5%.

Night mode

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The JCU-4's user interface and physical buttons can be configured to use a red color palette intended for night time use by selecting the *[Night]* mode option via the *[Brightness]* screen.

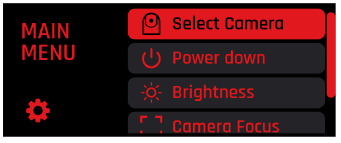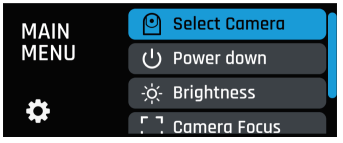Night mode enabled	Night mode disabled
	

Important:
If you are using the *[Night]* mode color palette at night, be aware that your vision may be compromised when either disabling the *[Night]* mode or switching to a display screen with a higher level of brightness.

Camera focus

Applicability: MD-Series / M100-Series / M200-Series / M300-Series


Note:
This function is only supported by M400-Series / M460-Series / M500-Series / M560-Series cameras.

16.7 JCU settings

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M500-Series

Additional advanced settings can be accessed via the *[JCU settings]* menu.

The *[JCU settings]* menu can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings]*.

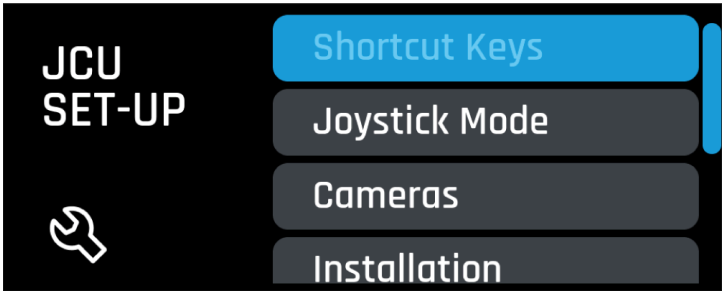

With the *[JCU settings]* menu displayed, the following options are available:

Option	Description
[Shortcut keys]	**Note:** This menu option is only available when the JCU-4 is controlling an M460-Series / M560-Series camera.
[Joystick mode]	Select to configure which direction the camera tilts when the joystick is moved up and down.
[Cameras]	Select to configure which compatible FLIR maritime cameras detected on the network can be controlled by your JCU-4.
[Installation]	Select to reconfigure the JCU-4's IP network parameters which were set during the startup wizard.
[About]	Select to display additional information related to the JCU-4.
[Settings reset]	Select to perform a settings reset.
[Factory reset]	Select to perform a factory reset.

Shortcut keys

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M500-Series


Note:
This menu option is only available when the JCU-4 is controlling an M460-Series / M560-Series camera.

Joystick mode

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

You can configure the JCU-4's up and down joystick inputs to either tilt the camera in the same direction as the joystick or the opposite direction via the *[Joystick mode]* screen.

The *[Joystick mode]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Joystick mode]*.

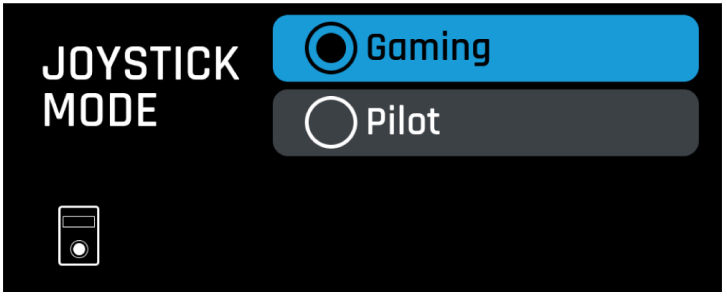

With the *[Joystick mode]* screen displayed, the following options are available:

- *[Gaming]* — Causes the camera to tilt upward when the joystick is pushed up and downward when the joystick is pushed down.
- *[Pilot]* — Causes the camera to tilt upward when the joystick is pushed down and downward when the joystick is pushed up.


The JCU-4 is set to *[Gaming]* mode by default.

Controllable cameras

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

On the *[Cameras]* screen you can select which compatible FLIR maritime camera(s) on the network can be controlled by your JCU-4.

The *[Cameras]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Cameras]*.

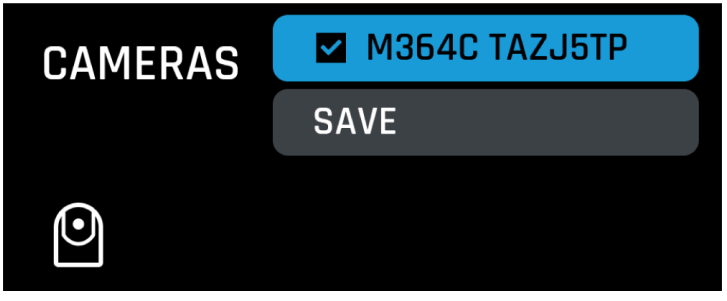

Once you have chosen the camera(s) that you wish to control using the JCU-4 and have selected *[Save]*, the chosen camera(s) will then appear on the *[Select camera]* screen.


Note:
The list of controllable cameras will dynamically update if a camera is either connected to or disconnected from the network. If a compatible FLIR maritime camera is connected to your network and cannot be automatically detected by the JCU-4 after a prolonged period, refer to the following section for troubleshooting information:
p.119 — System checks and troubleshooting

Installation

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

It is possible to reconfigure the settings which were selected during the startup wizard at any time via the *[Installation]* screen.

The *[Installation]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Installation]*.

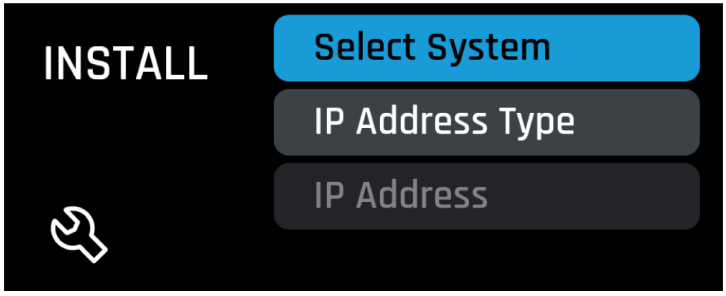

With the *[Installation]* screen displayed, the following options are available:

- *[Select system]* — Select to reconfigure the type of system that your JCU-4 is networked to.
- *[IP Address type]* — Select to reconfigure the assigned IP address type.
- (1) *[IP Address]* — Select to reconfigure the assigned static IP address and netmask.


Note:
(1) This menu option is only available if the JCU-4's assigned IP address type is set to *[Static IP]*.

About this device

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The *[About]* screen contains additional information related to the JCU-4.

The *[About]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > About]*.

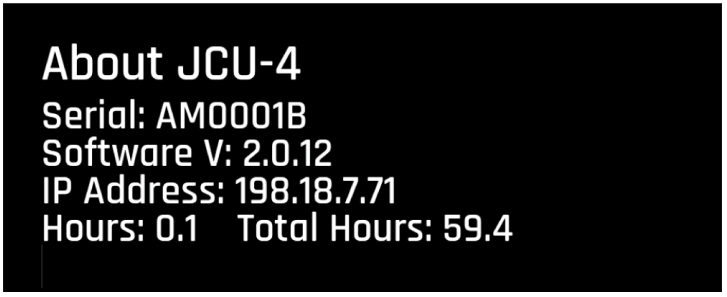

The following range of information can be found on the *[About]* screen:

- *[Serial]* — Provides the JCU-4's serial number.
- *[Software V]* — Provides the software version number that the JCU-4 is currently running.
- *[IP Address]* — Provides the JCU-4's IP address.
- *[Hours]* — Provides the number of hours that the JCU-4 has been in operation for this session.
- *[Total hours]* — Provides the total number of hours that the JCU-4 has been in operation for.

Settings reset

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

You can reset the JCU-4's configured user settings (excluding the assigned IP network parameters) via the *[Settings reset]* screen.

The *[Settings reset]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Settings reset]*.



With the *[Settings reset]* screen displayed, the following options are available:

- *[No]* — Select to cancel the reset process.
- *[Yes]* — Select to initiate the reset process. Once the JCU-4 has been reset to settings default, the unit will return back to the *[Controlled camera]* screen.

Factory reset


Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

If you wish to reset the JCU-4's configured user settings (including the assigned IP network parameters), or, if you are experiencing problems with your JCU-4 which cannot be resolved using the troubleshooting advice provided, you may need to reset the JCU-4 to factory default via the *[Factory reset]* screen.

Note:
If you are experiencing problems with your JCU-4 and have not yet followed the troubleshooting advice provided, refer to:

• **p.119 — System checks and troubleshooting**

The *[Factory reset]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Factory reset]*.

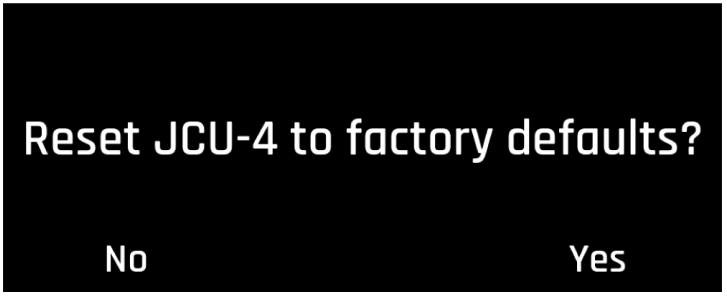

With the *[Factory reset]* screen displayed, the following options are available:

- *[No]* — Select to cancel the reset process.
- *[Yes]* — Select to initiate the reset process. Once the JCU-4 has been reset to factory default, the startup wizard will be automatically displayed on-screen.

16.8 User programmable buttons (UPBs)

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M500-Series

The JCU's User-programmable buttons (UPBs) can be configured from a compatible FLIR maritime camera's Web browser user interface and / or *[On-Screen Display]* menu.

You can assign a different action to each UPB (for example, "Park" or "Surveillance mode") on a per-camera basis.

Note:
UPB assignments apply to individual cameras rather than specific JCU units. This means that, if you are using a single JCU unit to control 2 FLIR maritime cameras, UPB number 1 could be configured to initiate a different action on each camera.

Programming UPBs via the Web interface


Applicability: M100-Series / M200-Series / M400-Series / M500-Series

To configure the JCU's user-programmable buttons (UPBs) using an M100-Series, M200-Series, M400-Series or M500-Series camera's Web browser user interface:

1. From the camera's Web browser user interface, select *[Setup]* on the top menu.

   The *[Setup]* menu is displayed.
2. From the left-hand panel, select *[JCU]*.

   The *[UPB Configuration]* panel is displayed:

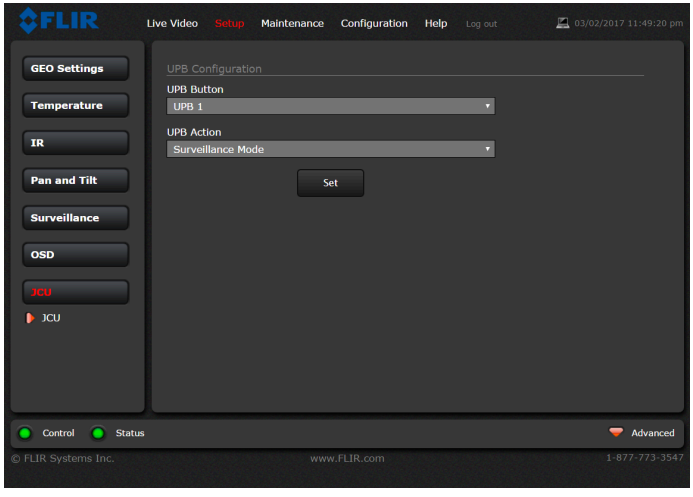

3. From the *[UPB Button]* list, select the button you wish to configure.
4. From the *[UPB Action]* list, choose the camera action you wish to associate with that UPB button.
5. Repeat steps 3 and 4 for each UPB you wish to configure.
6. Click *[Set]* to save the UPB Configuration.

CHAPTER 17: OPERATION (MD-SERIES)


CHAPTER CONTENTS

- 17.1 Controls overview — page 100
- 17.2 Powering on the unit — page 101
- 17.3 Startup wizard — page 101
- 17.4 Camera detection — page 103
- 17.5 Controlled camera — page 103
- 17.6 Main menu — page 103
- 17.7 JCU settings — page 105
- 17.8 User programmable buttons (UPBs) — page 108

17.1 Controls overview

Applicability: MD-Series

The JCU-4 buttons and their associated functions (while controlling an MD-Series camera) are described below.

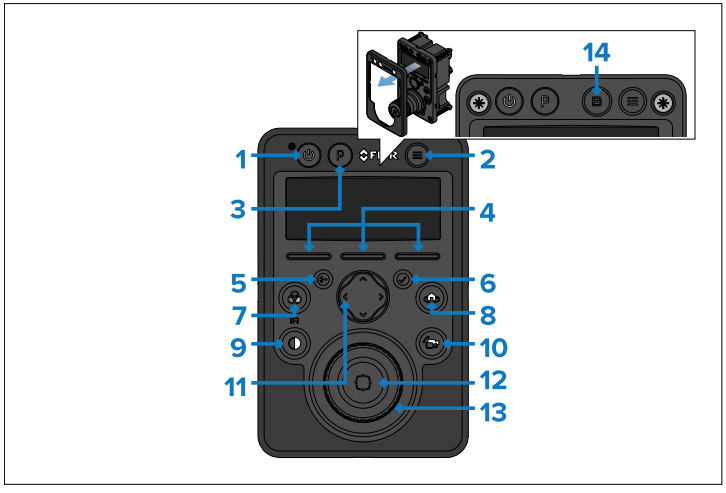

	Description
1	*[Power]* • With the JCU-4 powered off, press to power the unit on. • With the JCU-4 powered on, press to display the *[Main menu]* screen. • With the *[Main menu]* screen displayed, press to access the *[Brightness]* screen. • With the *[Brightness]* screen displayed, press to increase the JCU-4's brightness by 20%. • With the JCU-4 powered on, press and hold to power the unit off.
2	*[On-screen Display]* • (1) Press to show / hide the camera's *[On-screen Display]* menu on a networked video display.
3	*[Park]* **Note:** The function(s) associated with this button are not supported by MD-Series cameras.
4	*[Softkey 1, Softkey 2, Softkey 3]* • Press to initiate the corresponding action displayed on-screen. • With the *[Controlled camera]* screen displayed, press the *[Softkey 1]* button to initiate the corresponding *[User Programmable Button]* action assigned via your camera's *[On-Screen Display]* menu. • With the *[Controlled camera]* screen displayed, press and hold the *[Softkey 1]* button to display the camera's *[On-screen Display]* menu on a networked video display. • With the *[Controlled camera]* screen displayed, press the *[Softkey 2]* button to initiate *[Rear-view mode]*, which horizontally flips the camera's video feed image.
5	*[Back]* • With a (sub)menu displayed, press to return back to the previous screen.
6	*[Select]* • With a (sub)menu displayed, press to select the highlighted item.
7	*[IR Color]* • Press to cycle between infrared color palettes on the camera's thermal video feed. • Press and hold, then hold the joystick upward to display the JCU-4 and controlled camera's IP addresses.
8	*[Home]* **Note:** The function(s) associated with this button are not supported by MD-Series cameras.

	Description
9	*[IR Contrast]* • Press to cycle between infrared contrast palettes on the camera's thermal video feed. • Press and hold to display the *[Camera focus]* screen.
10	*[Active feed switch]* • Press and hold to display the *[Select camera]* screen.
11	*[Navigation pad]* • With a (sub)menu displayed, press to change the highlighted menu option.
12	*[Video tracking]* **Note:** The function(s) associated with this button are not supported by MD-Series cameras.
13	*[Joystick]* • Twist to (un)zoom the camera's thermal payload.
14	*[Reboot (over Ethernet)]* • Press to reboot the JCU-4 (over Ethernet).

Note:
(1) For more information, refer to the documentation that is supplied with your compatible FLIR maritime camera:

• (432-0010-00-10) MD-Series Thermal Camera Operation Instructions.


Please ensure that you obtain the **latest version** of your documentation via the FLIR website: www.marine.flir.com

17.2 Powering on the unit

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The JCU-4 can be turned on by pressing the *[Power]* button.

After the *[Power]* button has been pressed, the following screen will be displayed as your unit begins to power on:

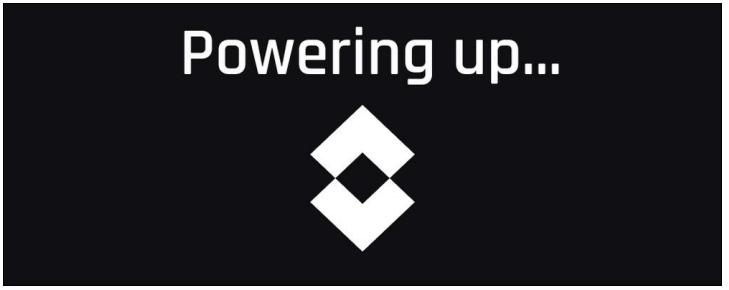

17.3 Startup wizard

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

If your unit is being switched on for the first time or if a factory reset has just occurred, you will be required to configure your unit via the startup wizard.


Note:
While proceeding through the startup wizard, the *[Back]* button can be selected at any time to return to the previous screen.

System selection

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

On the *[Select system]* startup wizard screen, you will be prompted to select the type of system that your JCU-4 is networked to.

The JCU-4 will be automatically assigned an IP address type according to the system type that you have selected.

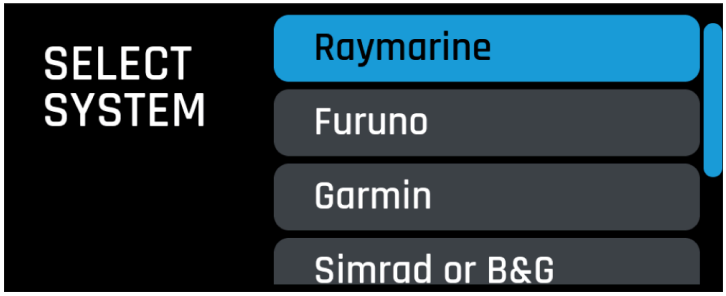

The following system options are available:

System	IP address type
• *[Raymarine]* • *[Garmin]* • *[Simrad or B&G]* • *[Lowrance]*	**Dynamic IP (DHCP):** DHCP (**D**ynamic **H**ost **C**ontrol **P**rotocol) is used to automatically assign IP addresses and other important IP-network parameters to devices on a network.
• *[Furuno]* • *[Other]*	**Static IP:** Networks that do NOT use DHCP or link local IP addressing require a **static IP** address to be permanently assigned to each connected device.

If the system option that you have selected is listed above as being assigned a **dynamic IP** address type, the startup wizard will complete and you will be automatically redirected onto the *[Controlled camera]* screen.

If the system option that you have selected is listed above as being assigned a **static IP** address type, you will instead be redirected onto the *[Enter IP address]* screen.

Assigning a static IP address

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The following steps provide instructions on how to assign the JCU-4 a static IP address via the *[Enter IP address]* screen.

Note:
Some IP networks require IP addresses to be within a specific range. When setting your IP address, ensure that it is within an allowed range as specified by your network administrator

Note:
IP addresses are self-allocated by certain Raymarine equipment in the following range: 198.18.0.32 to 198.18.3.254 (inclusive). On networks featuring Raymarine-branded IP devices, you must avoid placing any devices in this range using manual (static) IP addresses.

From the *[Enter IP address]* screen:

1. Use the *[Navigation up]* and *[Navigation down]* buttons to change the numerical value displayed in the highlighted field.
2. Once the value shown for the highlighted field is correct, use the *[Navigation left]* and *[Navigation right]* buttons to change which field is highlighted.
3. After you have entered a valid address, press the *[Next]* softkey button to proceed onto the *[Enter netmask]* screen.

Assigning a netmask

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The following steps provide instructions on how to assign the JCU-4 a netmask via the *[Enter netmask]* screen.

From the *[Enter netmask]* screen:

1. Optionally, press the *[Default]* softkey button to change the address shown on-screen to '255.255.255.0'.
2. Use the *[Navigation up]* and *[Navigation down]* buttons to change the numerical value displayed in the highlighted field.
3. Once the value shown for the highlighted field is correct, use the *[Navigation left]* and *[Navigation right]* buttons to change which field is highlighted.
4. After you have entered a valid address, press the *[Save]* softkey button.

17.4 Camera detection

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series


The JCU-4 will automatically attempt to search for compatible FLIR maritime cameras on the network once every 30 seconds.

Note:
If a compatible camera is connected to your network and cannot be automatically detected by your unit after a prolonged period, refer to the following section for troubleshooting information:
p.119 — System checks and troubleshooting

17.5 Controlled camera

Applicability: MD-Series

Once the start-up process has been completed, the following *[Controlled camera]* screen will be displayed.

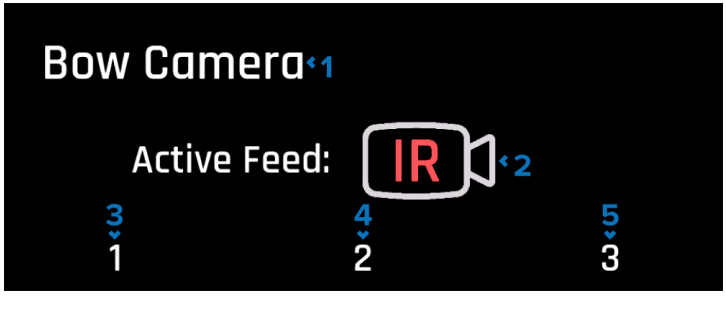


From the *[Controlled camera]* screen, the following key information can be viewed and / or interacted with:

	Description
1	*[Camera name]* Indicates the camera which is currently being controlled.
2	*[Active feed]* Indicates which camera payload is currently being controlled.
3	*[User programmable button (UPB)]* Corresponds to the *[User Programmable Button]* action assigned via your MD-Series camera's *[On-Screen Display]* menu. While viewing the *[Controlled camera]* screen: • Pressing the associated softkey button will initiate the assigned action. • Press and holding the associated softkey button will display the camera's *[On-Screen Display]* menu on a networked video display.
4	*[Rear-view mode]* Pressing the associated softkey button will horizontally flip the camera's video feed image.
5	**Note:** This option is not supported by MD-Series cameras.

17.6 Main menu

Applicability: MD-Series / M100-Series / M200-Series / M300-Series

While viewing the *[Controlled camera]* screen, you can press the *[Power]* button to access the JCU-4's *[Main menu]* screen.

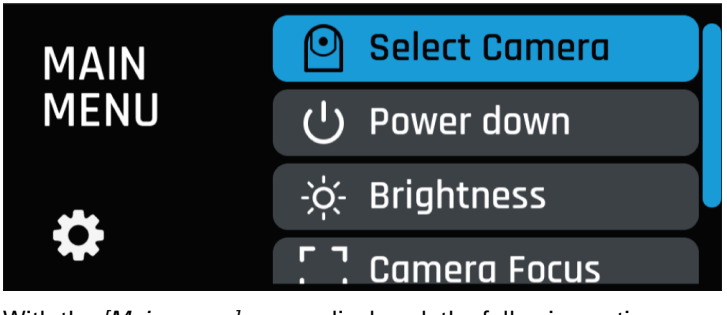

With the *[Main menu]* screen displayed, the following options are available:

Option	Description
[Select camera]	Select to change the which camera is currently being controlled by the JCU-4.
[Power down]	Select to access power options for both the JCU-4 and the camera which is currently being controlled.
[Brightness]	Select to adjust the JCU-4's LCD brightness / button illumination and to also enable or disable *[Night]* mode.
[Camera focus]	**Note:** This function is only supported by M400-Series / M460-Series / M500-Series / M560-Series cameras.
[JCU settings]	Select to access further configurable JCU-4 settings.


Select camera

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

You can change which compatible FLIR maritime camera the JCU-4 is currently controlling via the *[Select camera]* screen.

The *[Select camera]* screen can be accessed by:

- Navigating to: *[Controlled camera > Main menu > Select camera]*, OR;
- By press and holding the *[Active feed switch]* button.

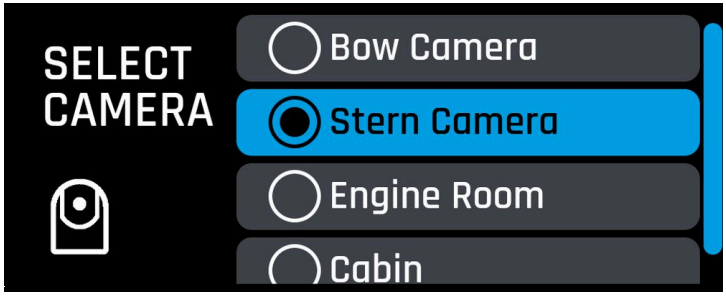


If a camera which you wish to control is not displayed, ensure that it has been selected via the *[Cameras]* configuration screen: *[Controlled camera > Main menu > JCU settings > Cameras]*.

Power down

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The JCU-4 and other compatible FLIR maritime cameras on your network can be remotely set to standby and / or restarted via the *[Power down]* screen.

The *[Power down]* screen can be accessed by navigating to: *[Controlled camera > Main menu > Power down]*.

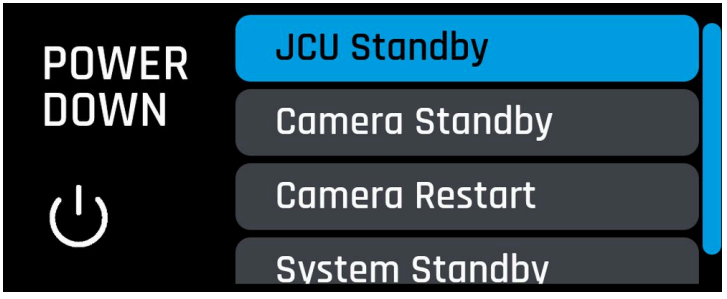

With the *[Power down]* screen displayed, the following options are available:


- *[JCU standby]* — Select to enter the JCU-4 into a standby state until operation is resumed.
- *[Camera standby]* — Select to enter the controlled camera into to a standby state until operation is resumed.
- *[Camera restart]* — Select to restart the controlled camera.
- *[System standby]* — Select to enter both the JCU-4 and the controlled camera into a standby state until operation is resumed.

Brightness

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

You can adjust the JCU-4's LCD brightness / button illumination and also enable or disable *[Night]* mode via the *[Brightness]* screen.

The *[Brightness]* screen can be accessed by navigating to: *[Controlled camera > Main menu > Brightness]*.

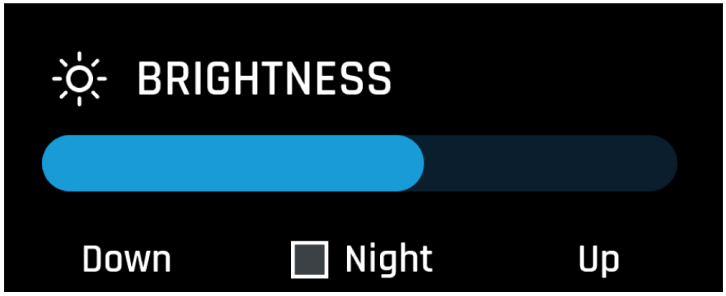



With the *[Brightness]* screen displayed, the following options are available:

- *[Down]* — Select to increase the LCD brightness and button illumination by 5%.
- *[Night]* — Select to either enable or disable *[Night]* mode.
- *[Up]* — Select to decrease the LCD brightness and button illumination by 5%.

Night mode

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The JCU-4's user interface and physical buttons can be configured to use a red color palette intended for night time use by selecting the *[Night]* mode option via the *[Brightness]* screen.

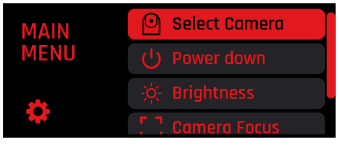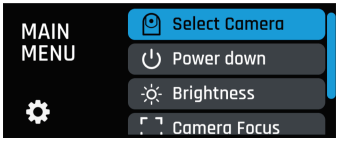Night mode enabled	Night mode disabled
	

Important:
If you are using the *[Night]* mode color palette at night, be aware that your vision may be compromised when either disabling the *[Night]* mode or switching to a display screen with a higher level of brightness.

Camera focus

Applicability: MD-Series / M100-Series / M200-Series / M300-Series


Note:
This function is only supported by M400-Series / M460-Series / M500-Series / M560-Series cameras.

17.7 JCU settings

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M500-Series

Additional advanced settings can be accessed via the *[JCU settings]* menu.

The *[JCU settings]* menu can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings]*.

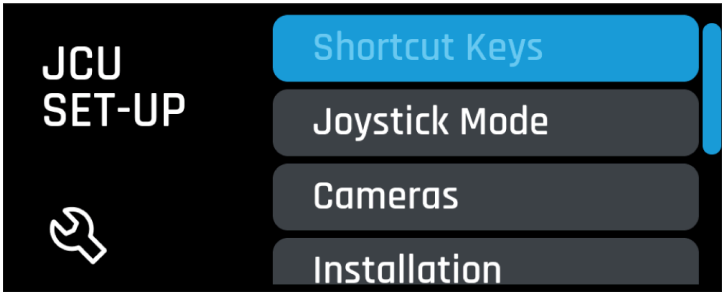

With the *[JCU settings]* menu displayed, the following options are available:

Option	Description
[Shortcut keys]	**Note:** This menu option is only available when the JCU-4 is controlling an M460-Series / M560-Series camera.
[Joystick mode]	Select to configure which direction the camera tilts when the joystick is moved up and down.

Option	Description
[Cameras]	Select to configure which compatible FLIR maritime cameras detected on the network can be controlled by your JCU-4.
[Installation]	Select to reconfigure the JCU-4's IP network parameters which were set during the startup wizard.
[About]	Select to display additional information related to the JCU-4.
[Settings reset]	Select to perform a settings reset.
[Factory reset]	Select to perform a factory reset.

Shortcut keys

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M500-Series

Note:
This menu option is only available when the JCU-4 is controlling an M460-Series / M560-Series camera.

Joystick mode

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

You can configure the JCU-4's up and down joystick inputs to either tilt the camera in the same direction as the joystick or the opposite direction via the *[Joystick mode]* screen.

The *[Joystick mode]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Joystick mode]*.



With the *[Joystick mode]* screen displayed, the following options are available:

- *[Gaming]* — Causes the camera to tilt upward when the joystick is pushed up and downward when the joystick is pushed down.
- *[Pilot]* — Causes the camera to tilt upward when the joystick is pushed down and downward when the joystick is pushed up.


The JCU-4 is set to *[Gaming]* mode by default.

Controllable cameras

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

On the *[Cameras]* screen you can select which compatible FLIR maritime camera(s) on the network can be controlled by your JCU-4.

The *[Cameras]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Cameras]*.

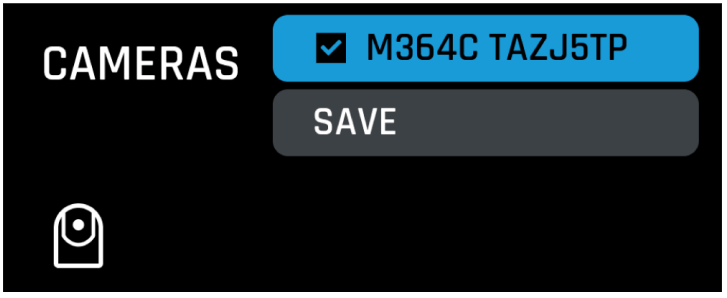

Once you have chosen the camera(s) that you wish to control using the JCU-4 and have selected *[Save]*, the chosen camera(s) will then appear on the *[Select camera]* screen.


Note:
The list of controllable cameras will dynamically update if a camera is either connected to or disconnected from the network. If a compatible FLIR maritime camera is connected to your network and cannot be automatically detected by the JCU-4 after a prolonged period, refer to the following section for troubleshooting information:
p.119 — System checks and troubleshooting

Installation

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

It is possible to reconfigure the settings which were selected during the startup wizard at any time via the *[Installation]* screen.

The *[Installation]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Installation]*.

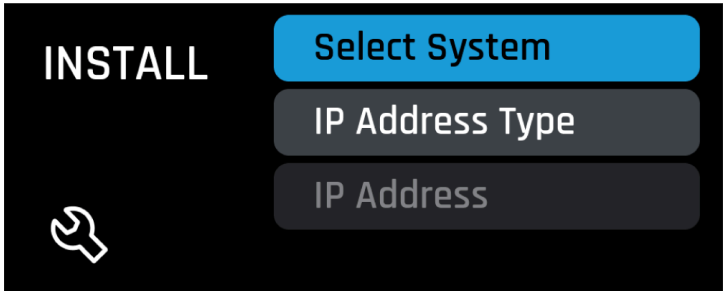

With the *[Installation]* screen displayed, the following options are available:

- *[Select system]* — Select to reconfigure the type of system that your JCU-4 is networked to.
- *[IP Address type]* — Select to reconfigure the assigned IP address type.
- (1) *[IP Address]* — Select to reconfigure the assigned static IP address and netmask.


Note:
(1) This menu option is only available if the JCU-4's assigned IP address type is set to *[Static IP]*.

About this device

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

The *[About]* screen contains additional information related to the JCU-4.

The *[About]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > About]*.

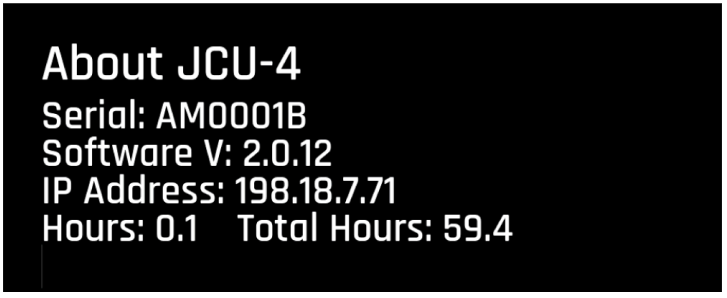

The following range of information can be found on the *[About]* screen:

- *[Serial]* — Provides the JCU-4's serial number.
- *[Software V]* — Provides the software version number that the JCU-4 is currently running.
- *[IP Address]* — Provides the JCU-4's IP address.
- *[Hours]* — Provides the number of hours that the JCU-4 has been in operation for this session.
- *[Total hours]* — Provides the total number of hours that the JCU-4 has been in operation for.

Settings reset

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

You can reset the JCU-4's configured user settings (excluding the assigned IP network parameters) via the *[Settings reset]* screen.

The *[Settings reset]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Settings reset]*.



With the *[Settings reset]* screen displayed, the following options are available:

- *[No]* — Select to cancel the reset process.
- *[Yes]* — Select to initiate the reset process. Once the JCU-4 has been reset to settings default, the unit will return back to the *[Controlled camera]* screen.

Factory reset


Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M460-Series / M500-Series / M560-Series

If you wish to reset the JCU-4's configured user settings (including the assigned IP network parameters), or, if you are experiencing problems with your JCU-4 which cannot be resolved using the troubleshooting advice provided, you may need to reset the JCU-4 to factory default via the *[Factory reset]* screen.

Note:
If you are experiencing problems with your JCU-4 and have not yet followed the troubleshooting advice provided, refer to:

• **p.119 — System checks and troubleshooting**

The *[Factory reset]* screen can be accessed by navigating to: *[Controlled camera > Main menu > JCU settings > Factory reset]*.

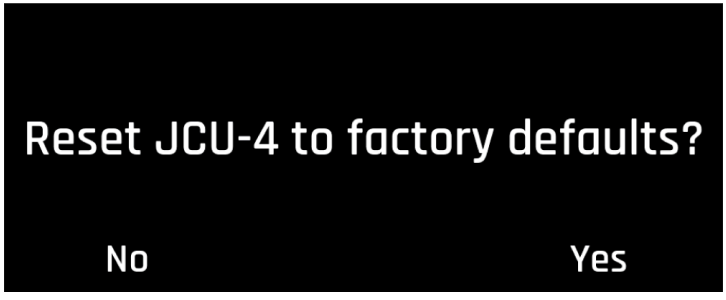

With the *[Factory reset]* screen displayed, the following options are available:

- *[No]* — Select to cancel the reset process.
- *[Yes]* — Select to initiate the reset process. Once the JCU-4 has been reset to factory default, the startup wizard will be automatically displayed on-screen.

17.8 User programmable buttons (UPBs)

Applicability: MD-Series / M100-Series / M200-Series / M300-Series / M400-Series / M500-Series

The JCU's User-programmable buttons (UPBs) can be configured from a compatible FLIR maritime camera's Web browser user interface and / or *[On-Screen Display]* menu.

You can assign a different action to each UPB (for example, "Park" or "Surveillance mode") on a per-camera basis.

Note:
UPB assignments apply to individual cameras rather than specific JCU units. This means that, if you are using a single JCU unit to control 2 FLIR maritime cameras, UPB number 1 could be configured to initiate a different action on each camera.

Programming UPBs via the On-Screen Display (OSD) menu

Applicability: MD-Series

A single user-programmable button (UPB) action can be assigned to the JCU's *[Softkey 1]* button using the MD-Series camera's *[On-Screen Display]* menu.

To assign a UPB action using the camera's *[On-Screen Display]* menu:

1. Press the JCU-4's *[On-screen Display]* button.
   Once selected, the camera's *[On-Screen Display]* menu will appear on your networked video display:



2. Select the *[User Programmable Button]* option.

   Once selected, the *[User Programmable Button]* sub-menu is displayed.

3. From the *[User Programmable Button]* sub-menu, select the camera action that you wish to assign to the JCU-4's *[Softkey 1]* button.

   Once chosen, the assigned action will be highlighted in a black font.

CHAPTER 18: CONFIGURATION VIA WEB INTERFACE

CHAPTER CONTENTS

- 18.1 Web browser user interface overview — page 111
- 18.2 Logging in to the Web browser user interface — page 111
- 18.3 Web browser user interface — page 112

18.1 Web browser user interface overview

This section describes how to use a Web browser to communicate with and configure your JCU-4.

The JCU-4 is a network device that communicates over an Ethernet network using Internet Protocol (IP). Using a Web browser, you can perform software updates and configure your unit's network configuration settings.

Note:

- Changes to configuration settings should only be made by someone who has expertise with JCU-4 devices and a thorough understanding of how each setting will affect the JCU-4. Haphazard changes can lead to potential problems.
- You can use various types of IP-networked devices to interact with the JCU-4 Web interface (such as a laptop, PC or tablet). The device must be connected to the same network as the JCU-4 (or connected directly).

18.2 Logging in to the Web browser user interface

You can log in to the JCU-4's Web interface using the login details provided on the serial number label located on the rear of your unit and / or in the product box:




To log in:

1. Go to the JCU-4's Web page by:
   - Entering the JCU-4's IP address directly into the address bar of your Web browser, OR:
   - Double-clicking the JCU-4 device listed in "Network" in Windows Explorer.

Note:
For more information on how to discover the JCU-4's IP address, refer to: **p.112 — IP address discovery**

The login screen is displayed:

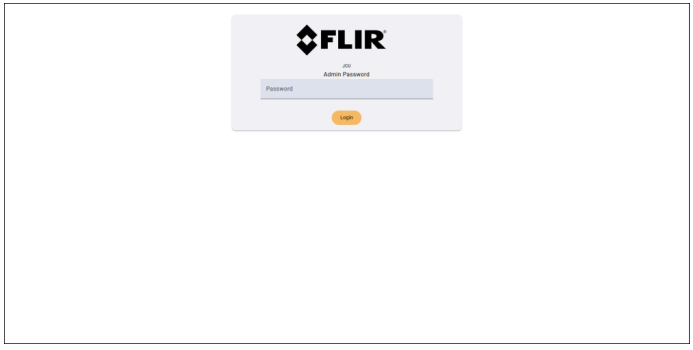

2. Enter the password referenced above, then select *[Login]*.

IP address discovery

Before you can access the JCU-4's Web interface page(s), you may first need to know the JCU-4's IP address.

The JCU-4's IP address can be obtained by:

- Navigating to the *[About]* screen: *[Controlled camera > Main menu > JCU settings > About]*. OR;
- Press and holding the *[IR Color]* button down, then holding the joystick upward to display the JCU-4 and controlled camera's IP address.

18.3 Web browser user interface


The Web browser user interface is split into the following 3 pages, which can be accessed at any time using the sidebar menu located on the left side of your screen:

1. **p.112 — Product information page**
2. **p.113 — Setup page**
3. **p.116 — Diagnostics page**

The available Web browser user interface menu options are subject to change depending upon which software version your device is running. Ensure that your device is running the latest software by visiting the Raymarine / FLIR maritime website: www.raymarine.com/software

Product information page

Once you have successfully logged into the Web interface the *[Product information]* page will be displayed, where additional information for your unit can be found.

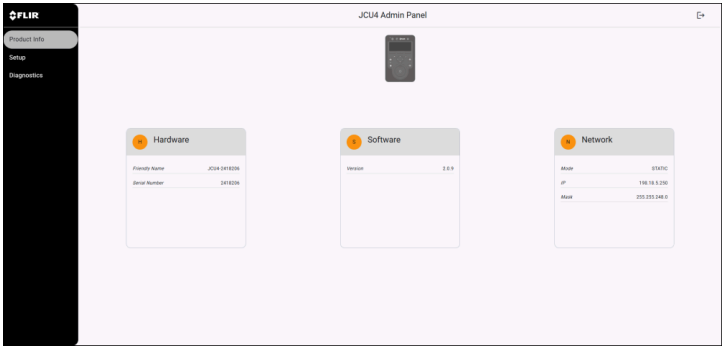

The following information is displayed on the *[Product information]* page.

Hardware:

Item	Description
[Friendly Name]	Provides a description of the network name assigned to the JCU-4.
[Serial Number]	Provides the JCU-4's serial number.

Software:

Item	Description
[Version]	Provides the JCU-4's current software version number.

Network:

Item	Description
[Mode] / [IP] / [Mask]	Provides a description of the JCU-4's configured IP-network parameters.

Setup page


The *[Setup]* page provides access to a series of menus and associated configuration settings which impact how your unit operates and connects to other devices in your system.

From the *[Setup]* page, the following menus can be accessed:

1. **Network menu**
2. **Joystick menu**
3. **Softkey menu**
4. **System menu**

Network menu

The *[Network]* menu contains configuration options related to your unit's IP-network parameters.

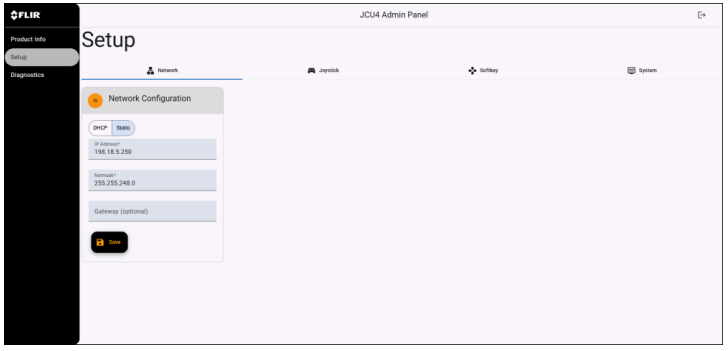


The following options can be found under the *[Network]* menu.

Option	Description
[DHCP]	Select to automatically assign the JCU-4's IP-network parameters via DHCP (Dynamic Host Configuration Protocol). By default, the JCU-4 is set to use DHCP.
[Static]	Select to manually assign a static IP address to the JCU-4.
[IP Address]	Select to manually configure the JCU-4's IP address. This setting is only available if the JCU-4's IP address type is set to *[Static]*.
[Netmask]	Select to manually configure the JCU-4's Netmask address. This setting is only available if the JCU-4's IP address type is set to *[Static]*.
[Gateway (optional)]	Select to manually configure the JCU-4's Gateway address. This setting is only available if the JCU-4's IP address type is set to *[Static]*.
[Save]	Select to save the current setting configuration. Once the *[Save]* button has been selected, the JCU-4 must be rebooted via the *[Reboot]* popup in order to initiate any changes created.

Joystick menu

The *[Joystick]* menu contains configuration options which enable you to change the JCU-4's up and down joystick inputs to either tilt the camera in the same direction as the joystick or the opposite direction.

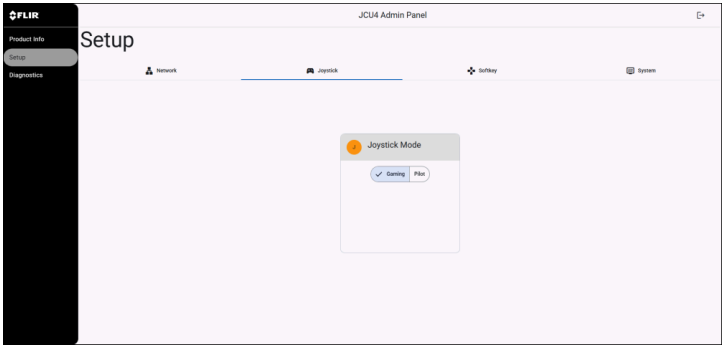


The following options can be found under the *[Joystick]* menu.

Option	Description
[Gaming]	Causes the camera to tilt upward when the joystick is pushed up and downward when the joystick is pushed down.
[Pilot]	Causes the camera to tilt upward when the joystick is pushed down and downward when the joystick is pushed up.

Softkey menu

The *[Softkey]* menu contains configuration options which enable you to assign different shortcut actions to the JCU-4's softkey buttons while controlling an M460-Series / M560-Series camera.

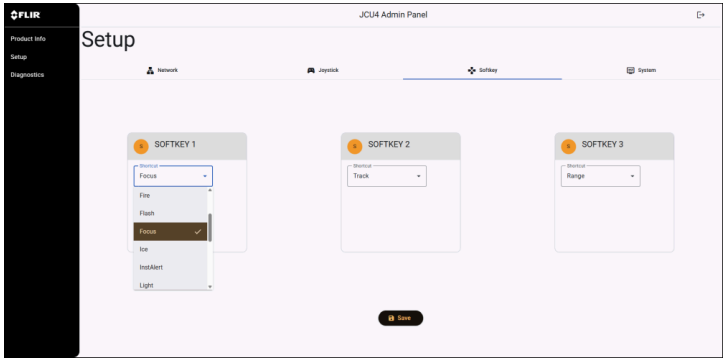

The following options can be found under the *[Softkey]* menu when selecting an assigned shortcut action:

Option	Description
[BWC]	**Note:** This option is not supported by M460-Series / M560-Series cameras.
[Camera]	Changes the camera which is being controlled by the JCU-4 to the next available camera (cycling in alphabetical order).
[CTV]	(1) Enables / disables the camera's *[CTV]* (Color Thermal Vision) blending mode.
[Defog]	(1) Enables / disables the camera's visible light *[Defog]* video filter mode.
[FFC]	Initiates the camera's configured *[FFC]* (Flat Field Correction) mode. For more information, refer to: **Flat Field Correction (FFC)**
[Fire]	**Note:** This option is not supported by M460-Series / M560-Series cameras.
[Flash]	Enables / disables the camera's spotlight. When enabled, a flashing spotlight beam will appear at the center of the camera's field of view and the JCU-4's *[Spotlight on]* screen will be displayed.
[Focus]	Displays the JCU-4's *[Camera focus]* screen, which can be used to manually or automatically adjust the controlled camera's focus.
[Ice]	**Note:** This option is not supported by M460-Series / M560-Series cameras.
[InstAlert]	(1) Enables / disables the camera's *[InstAlert]* thermal imaging mode.
[Light]	Enables / disables the camera's spotlight. When enabled, a continuous spotlight beam will appear at the center of the camera's field of view and the JCU-4's *[Spotlight on]* screen will be displayed.
[MSX]	(1) Enables / disables the camera's *[MSX]* (Multi-Spectral Dynamic Imaging) blending mode.
(2) *[Range]*	Displays the JCU-4's *[Ready to Range]* screen, which can be used to trigger the camera's laser range finder (LRF). For more information, refer to: **Ready to range**
[RSD]	**Note:** This option is not supported by M460-Series / M560-Series cameras.

Option	Description
[Stab]	(1) Enables / disables the camera's *[Stabilization]* mode.
[Surveil]	(1) Enables / disables the camera's *[Surveillance scan]* mode.
[Track]	Displays the JCU-4's *[Ready to Track]* screen, which can be used to track an object detected by the camera's target classifier tracking system. For more information, refer to: **Ready to track**
[TTM]	(1) Enables / disables NMEA Radar target (TTM) tracking for the camera.
[None]	Removes the assigned action.

Any changes made will be reflected on the *[Controlled camera]* screen.


Note:

- (1) For more information, refer to the documentation that is supplied with your compatible FLIR maritime camera:
  - (71010) M460-Series Thermal Camera Operation Instructions.
  - (71011) M560-Series Thermal Camera Operation Instructions.

  Please ensure that you obtain the **latest version** of your documentation via the FLIR website: www.bit.ly/3Seupv7
- (2) This option is only available for camera variants which support a laser range finder (LRF).

System menu

The *[System]* menu contains configuration options which enable you to perform an update, or reset your unit to factory default settings.

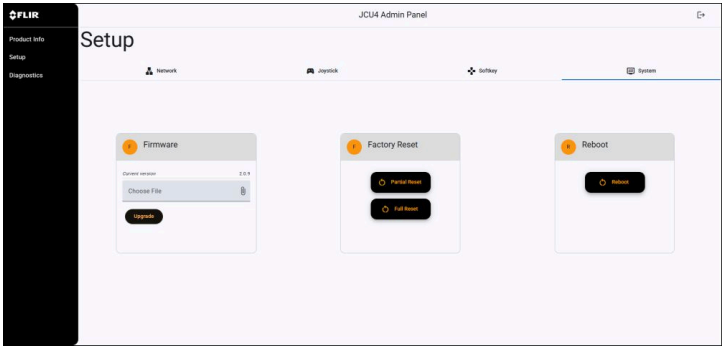

The following options can be found in the *[System]* menu.

Firmware:

Option	Description
[Choose file]	Select to navigate your operating system's file explorer and choose a file containing the updated JCU-4 firmware.
[Upgrade]	Select to initiate an update once a corresponding file has been chosen.

Factory Reset:


Option	Description
[Partial reset]	Select to reset all configuration settings (excluding assigned IP network parameters) to factory default.
[Full reset]	Select to reset all configuration settings (including assigned IP network parameters) to factory default.

Reboot:

Option	Description
[Reboot]	Select to initiate a reboot (device restart).

Diagnostics page

The *[Diagnostics]* page contains event log information which can be used by FLIR technical support to help diagnose and troubleshoot issues experienced with your unit.

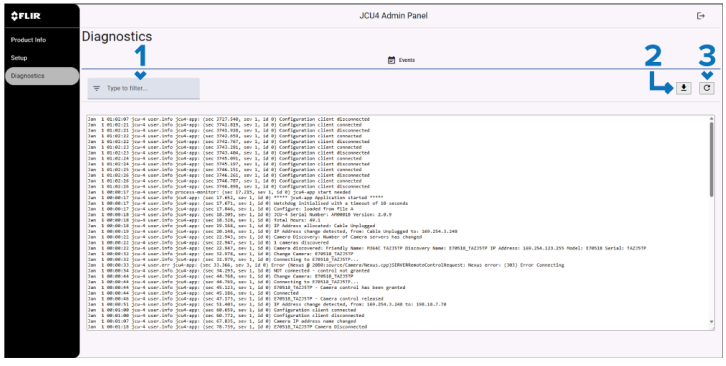

The following options can be found under the *[Diagnostics]* page.

	Description
1	*[Type to filter]* Select to enter a term and manually filter the range of event log information displayed.
2	*[Download]* Select to download the event log information to your device's internal storage.
3	*[Refresh]* Select to refresh the event log information displayed.

CHAPTER 19: MAINTENANCE

CHAPTER CONTENTS

- 19.1 Service and maintenance — page 118
- 19.2 Routine equipment checks — page 118
- 19.3 Cleaning the unit — page 118

19.1 Service and maintenance

This product contains no user serviceable components. Please refer all maintenance and repair to authorized FLIR dealers. Unauthorized repair may affect your warranty.

19.2 Routine equipment checks

It is recommended that you perform the following routine checks, on a regular basis, to ensure the correct and reliable operation of your equipment:

- Examine all cables for signs of damage or wear and tear.
- Check that all cables are securely connected.

19.3 Cleaning the unit

The remote should only be cleaned with the battery cover closed.

1. Power the unit off.
2. Wipe the unit's enclosure with a clean, lint-free microfibre cloth.
3. If necessary, use a mild detergent to remove grease marks from the unit's enclosure.
4. Rinse the screen with fresh water to remove all dirt particles and salt deposits.
5. Allow the screen to dry naturally.
6. If any smears remain, very gently wipe the screen with a clean, lint free microfibre cloth.

CHAPTER 20: SYSTEM CHECKS AND TROUBLESHOOTING

CHAPTER CONTENTS

- 20.1 Troubleshooting — page 120
- 20.2 PoE power connection troubleshooting — page 120
- 20.3 Non-PoE power connection troubleshooting — page 121
- 20.4 System data troubleshooting — page 122
- 20.5 Miscellaneous troubleshooting — page 122

20.1 Troubleshooting

The troubleshooting section provides possible causes and the corrective action required for common problems that are associated with the installation and operation of your product.

Before packing and shipping, all FLIR products are subjected to comprehensive testing and quality assurance programs. If you do experience problems with your product, this section will help you to diagnose and correct problems to restore normal operation.

If after referring to this section you are still having problems with your product, please refer to the *Technical support* section of this manual for useful links and FLIR technical support contact details.

20.2 PoE power connection troubleshooting

Before troubleshooting problems with your PoE (Power over Ethernet) power connection, ensure that you have read and followed the power connection guidance provided and performed a power cycle/reboot of the device. The troubleshooting information below can be used if you are experiencing problems when powering your product via PoE.

Product does not turn on or keeps turning off:

Possible causes	Possible solutions
Blown fuse / tripped breaker:	1. Check the condition of your relevant fuses, breakers and connections, and replace if necessary. 2. If the fuse keeps blowing check for cable damage, broken connector pins or incorrect wiring between your unit, the PSE (Power Sourcing Equipment) and the power source providing power to the PSE.
Poor / damaged / insecure power supply cable / connections:	1. Check to ensure that all connections (e.g. between your unit, the PSE (Power Sourcing Equipment) and the power source providing power to the PSE) are secure, clean and free from corrosion. Replace if necessary. 2. Ensure that the power cable connector is correctly orientated, fully inserted and in the locked position. 3. With the unit turned on, try flexing the power cable connector to see if this causes the unit to restart or lose power. Replace if necessary. 4. With the product under load, using a multi-meter, check for high voltage drop across all connectors / fuses etc, and replace if necessary.

Possible causes	Possible solutions
Incorrect power connection:	1. Check to ensure that connections between your unit, the PSE (Power Sourcing Equipment) and the power source providing power to the PSE are correct.
Power source insufficient:	1. Any device supplying PoE (Power over Ethernet) to the JCU-4 must output a nominal supply voltage of 44 V to 57 V dc.

20.3 Non-PoE power connection troubleshooting

Before troubleshooting problems with your non-PoE (non-Power over Ethernet) power connection, ensure that you have read and followed the power connection guidance provided and performed a power cycle/reboot of the device. The troubleshooting information below can be used if you are experiencing problems when powering your product via non-PoE.

Product does not turn on or keeps turning off:

Possible causes	Possible solutions
Blown fuse / tripped breaker:	1. Check the condition of your relevant fuses, breakers and connections, and replace if necessary. 2. If the fuse keeps blowing check for cable damage, broken connector pins or incorrect wiring.
Poor / damaged / insecure power supply cable / connections:	1. Check the vessel's battery voltage and the condition of the battery terminals and power supply cables, ensuring connections are secure, clean and free from corrosion. Replace if necessary. 2. Check the power cable and your power supply connection for signs of damage or corrosion, and replace if necessary. 3. Ensure that the power cable connector is correctly orientated, fully inserted and in the locked position. 4. With the unit turned on, try flexing the power cable connector to see if this causes the unit to restart or lose power. Replace if necessary. 5. With the product under load, using a multi-meter, check for high voltage drop across all connectors / fuses etc, and replace if necessary.
Incorrect power connection:	1. The power supply may be wired incorrectly, ensure the installation instructions have been followed.
Power source insufficient:	1. Check that your power supply (battery or distribution panel) is providing a minimum of 8 V to the unit.

20.4 System data troubleshooting

Networked camera(s) not available on your joystick controller(s):

Possible causes	Possible solutions
Connection problem:	1. Check that the FLIR maritime camera(s) are correctly powered and operational. 2. Check that the controller(s) and FLIR maritime camera(s) are correctly connected to the same network. 3. Check the relevant product and or network cabling and connections for signs of damage or corrosion, and replace if necessary. 4. If applicable, check the status of your Ethernet network switch.
Software mismatch between equipment may prevent communication:	1. Ensure that all products have the latest software installed.
IP network parameter configured incorrectly:	1. If the JCU-4 has been configured to use a *[Static]* IP address, ensure that you have correctly configured your IP-network parameter settings (e.g. *[IP address]* and *[Netmask]* and *[Gateway]* settings) via the Web browser user interface. For more information, refer to: **p.112 — Web browser user interface**

20.5 Miscellaneous troubleshooting

Erratic or unresponsive controls:

Possible causes	Possible solutions
Connection problem:	1. Check that the FLIR maritime camera(s) are correctly powered and operational. 2. Check that the controller(s) and FLIR maritime camera(s) are correctly connected to the same network. 3. Check the relevant product and or network cabling and connections for signs of damage or corrosion, and replace if necessary. 4. If applicable, check the status of your Ethernet network switch.
Control conflict (e.g. caused by multiple users at different stations):	1. Ensure that no other controllers are in use at the same time.
Problem with the controller:	1. Check cabling between the controller and the Power Sourcing Equipment (e.g. PoE Injector / PoE network switch). 2. If available, check any other controllers that have been connected to your system. If the other controllers are operating as intended, this will eliminate the possibility of a more fundamental camera fault.

LCD is too bright or dark:

Possible causes	Possible solutions
Brightness level is set too high or low:	1. Change the current LCD brightness and button illumination via the *[Brightness]* menu.

CHAPTER 21: SUPPORT AND SERVICING

CHAPTER CONTENTS

- 21.1 FLIR Maritime technical support and servicing — page 124

21.1 FLIR Maritime technical support and servicing

FLIR provides a comprehensive product support service, as well as warranty, service, and repairs. You can access these services using the contact details provided below.

Product information

For the latest support information, go to: https://maritime-support.flir.com
If you need to request service or support, please have the following information to hand:

- Product name.
- Product identity.
- Serial number.
- Software application version.
- System diagrams.

You can obtain this product information using the menus available when using your product.

Warranty policy and registration

Visit the Raymarine website to **read the latest warranty policy**, and **register** your product's warranty online: www.bit.ly/rym-warranty

Servicing and contact information

FLIR and Raymarine offer dedicated service departments for servicing and repairs. Contact details:

Region	Contact details
United Kingdom (UK), EMEA, and Asia Pacific:	**Telephone:** +44 (0)1329 246 932 **Address:** Marine House, Cartwright Drive, Fareham, PO15 5RJ, UK. www.bit.ly/rym-service
United States (US):	**Telephone:** Tel: +1 (603) 324 7900 (Toll-free: +800 539 5539) **Address:** 110 Lowell Road, Hudson, NH 03051, USA. www.bit.ly/rym-service

CHAPTER 22: TECHNICAL SPECIFICATION

CHAPTER CONTENTS

- 22.1 Physical specification — page 126
- 22.2 Power specification — page 126
- 22.3 Network specification — page 126
- 22.4 Display specification — page 126
- 22.5 Environmental specification — page 126
- 22.6 Conformance specification — page 126

22.1 Physical specification

Specification	
Width:	93.66 mm (3.69 in)
Height:	146.66 mm (5.77 in)
Depth:	63.36 mm (2.49 in)
Depth (including joystick):	113.30 mm (4.46 in)

22.2 Power specification

Specification	
PoE class:	Class 2
Nominal supply voltage:	• PoE: 48 V dc • Alternate power: 12 V / 24 V dc
Operating voltage range:	• PoE: 44 V to 57 V dc • Alternate power: 8 V to 32 V dc
Power consumption:	5 W Max with full keypad illumination.
IEEE Standard:	IEEE 802.3af

22.3 Network specification

Specification	
Network connection ports:	• 1x 10/100/1000 Mbits/s RayNet (Ethernet) • 1x 10/100/1000 Mbits/s PoE RayNet (Ethernet)

22.4 Display specification

Specification	
LCD Size:	2.9″
LCD Type:	IPS TFT LCD
Active area:	26.51 mm x 67.68 mm
Brightness / Luminance:	600 nits / 600 cd/m^2
Viewing angles:	80 + / 80 +
Resolution:	376 (H) x 960 (W) pixels (RBG)
Contrast ratio:	1:1500

22.5 Environmental specification

Specification	
Operating temperature:	-25 °C to +55 °C (-13 °F to 131 °F)
Storage temperature:	-30 °C to +70 °C (-22 °F to 158 °F)
Relative humidity:	Maximum 93% @ + 40 °C (104 °F)
Waterproof rating:	IPx6

22.6 Conformance specification

Specification	
Europe, UK, Australia & New Zealand:	• IEC/EN 60945:2002 • IEC/EN 62368-1:2020
USA:	FCC CFR 47, Part 15B
Canada:	ICES-003, RSS-GEN, Issue 5
Ethernet / PoE:	• IEEE 802.3 • IEEE 802.3af


CHAPTER 23: SPARES AND ACCESSORIES

CHAPTER CONTENTS

- 23.1 Spares and accessories — page 128
- 23.2 FLIR networking accessories — page 129
- 23.3 RayNet to RayNet cables and connectors — page 131
- 23.4 RayNet to RJ45, and RJ45 (SeaTalk HS) adapter cables — page 133


23.1 Spares and accessories

The following spares and accessories are available for your product:

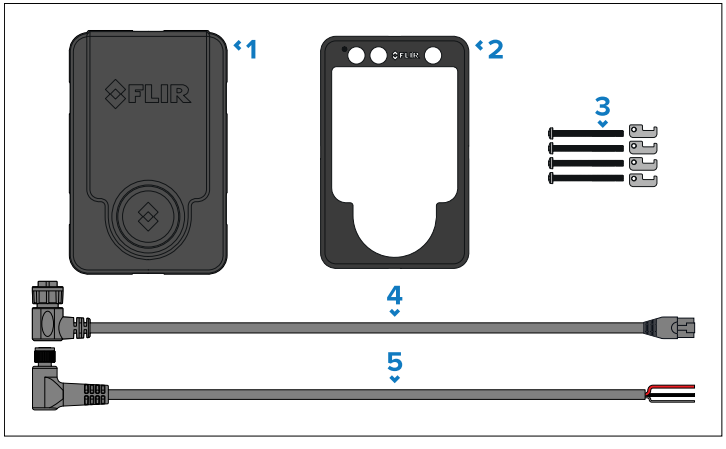

	Part	Description
1	**A80748**	JCU-4 weatherproof cover.
2	**R70979**	JCU-4 front fascia / cover.
3	**A80749**	JCU-4 mounting kit.
4	**A80756**	JCU-4 Right-angled RayNet (Ethernet) to RJ45 adapter cable, 3 m (9.8 ft).
5	**A80757**	JCU-4 Right-angled 3-pin power cable, 3 m (9.8 ft).


23.2 FLIR networking accessories

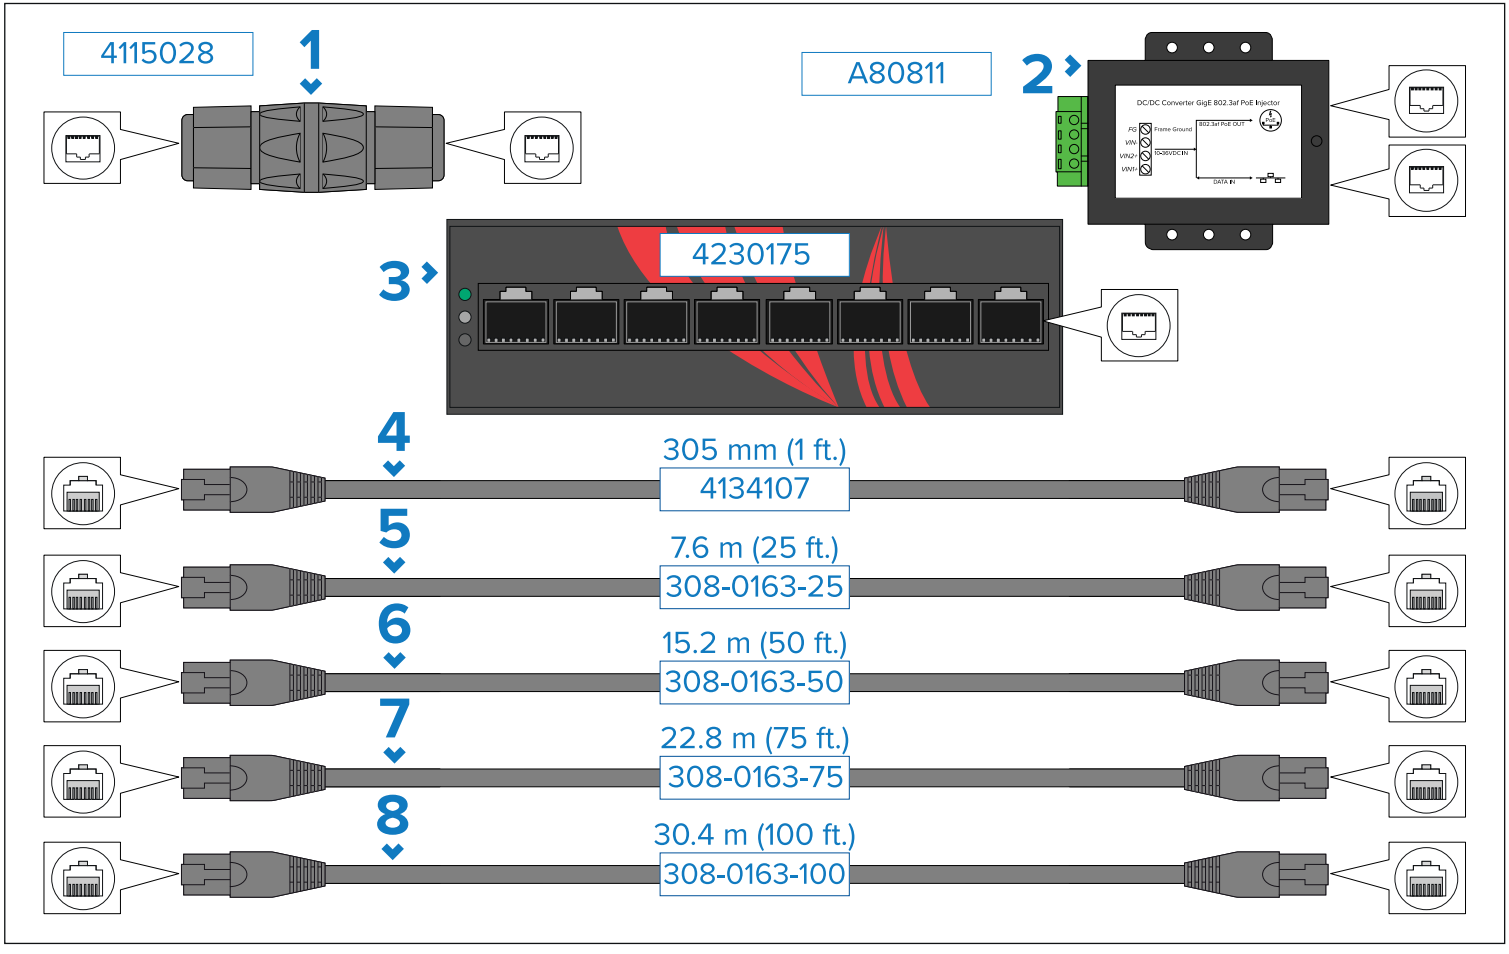

1. RJ45 coupler, for joining 2 separate RJ45 network cables together to achieve longer cable runs.
2. PoE Injector (2nd Generation; 5 Gbit). Supplies power to a non-PoE network connection. Typical use is for powering a JCU-Series controller connected to a non-PoE network switch.
3. PoE 8-port Gigabit Network Switch.
4. 305 mm (1 ft.) RJ45-to-RJ45 Ethernet cable, double shielded with LSZH low interference jacket.
5. 7.6 m (25 ft.) RJ45-to-RJ45 Ethernet cable, double shielded with LSZH low interference jacket.
6. 15.2 m (50 ft.) RJ45-to-RJ45 Ethernet cable, double shielded with LSZH low interference jacket.

7. 22.8 m (75 ft.) RJ45-to-RJ45 Ethernet cable, double shielded with LSZH low interference jacket.
8. 30.4 m (100 ft.) RJ45-to-RJ45 Ethernet cable, double shielded with LSZH low interference jacket.


23.3 RayNet to RayNet cables and connectors

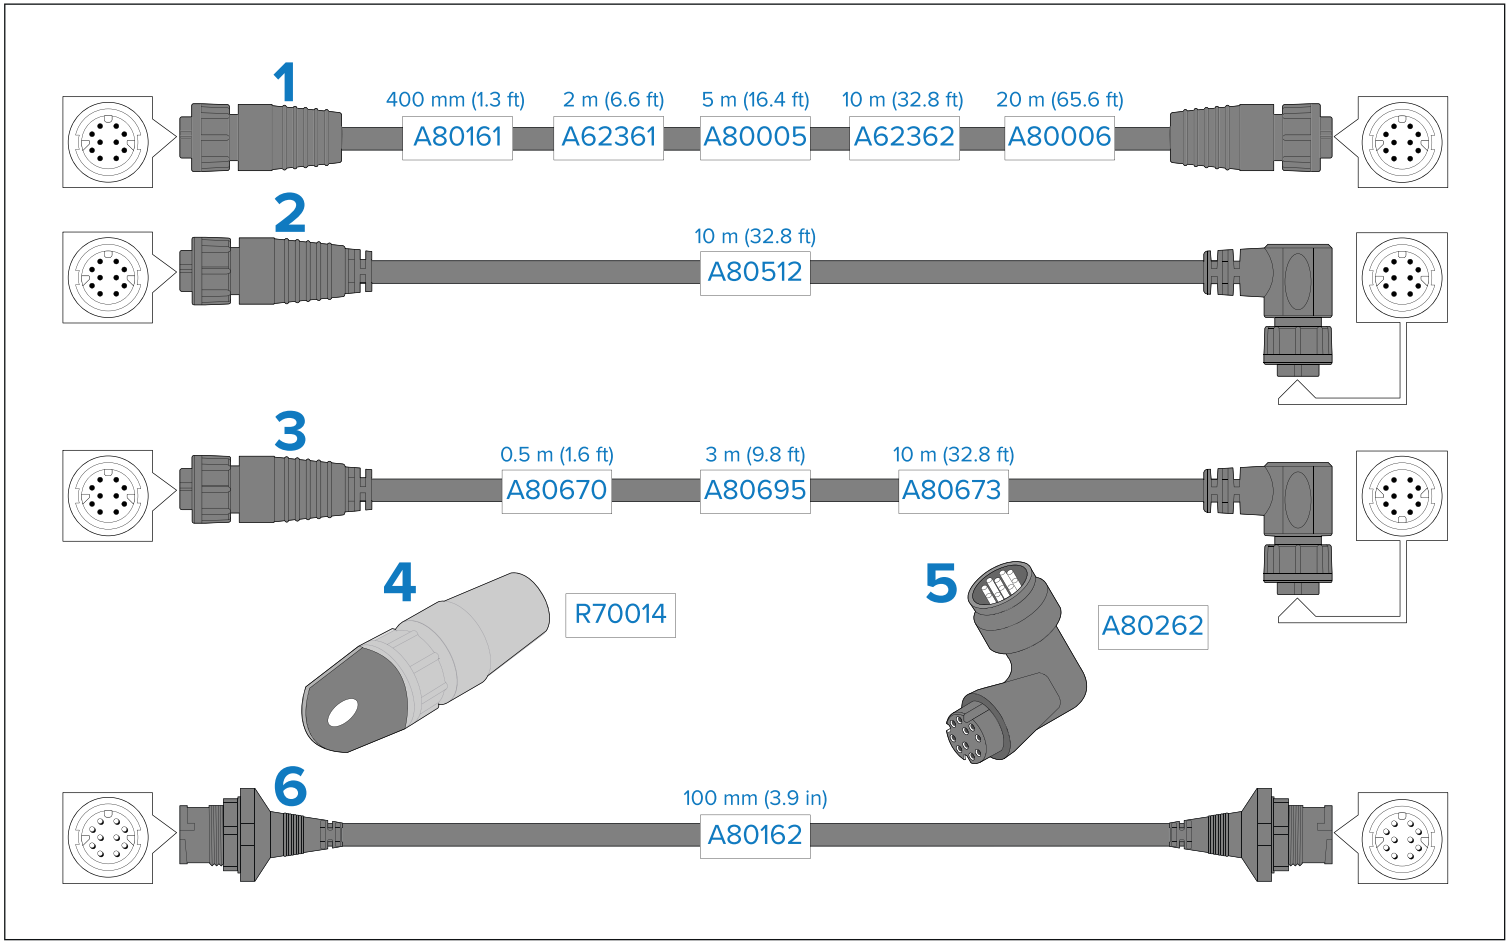

1. Standard RayNet connection cable with a RayNet (female) socket on both ends.
2. Right-angle RayNet connection cable with a straight RayNet (female) socket on one end, and a right-angle RayNet (female) socket on the other end. Suitable for connecting at 90° (right angle) to a device, for installations where space is limited.
3. Right-angle RayNet connection cable with a straight RayNet (female) socket on one end, and a right-angle RayNet (female) socket on the other end. Available as an alternative to the (A80512) accessory cable, for installations which require an alternate cable routing direction.
4. RayNet cable puller (5 pack).

5. RayNet to RayNet right-angle coupler / adapter. Suitable for connecting RayNet cables at 90° (right angle) to devices, for installations where space is limited.
6. Adapter cable with a RayNet (male) plug on both ends. Suitable for joining (female) RayNet cables together for longer cable runs.

23.4 RayNet to RJ45, and RJ45 (SeaTalk HS) adapter cables

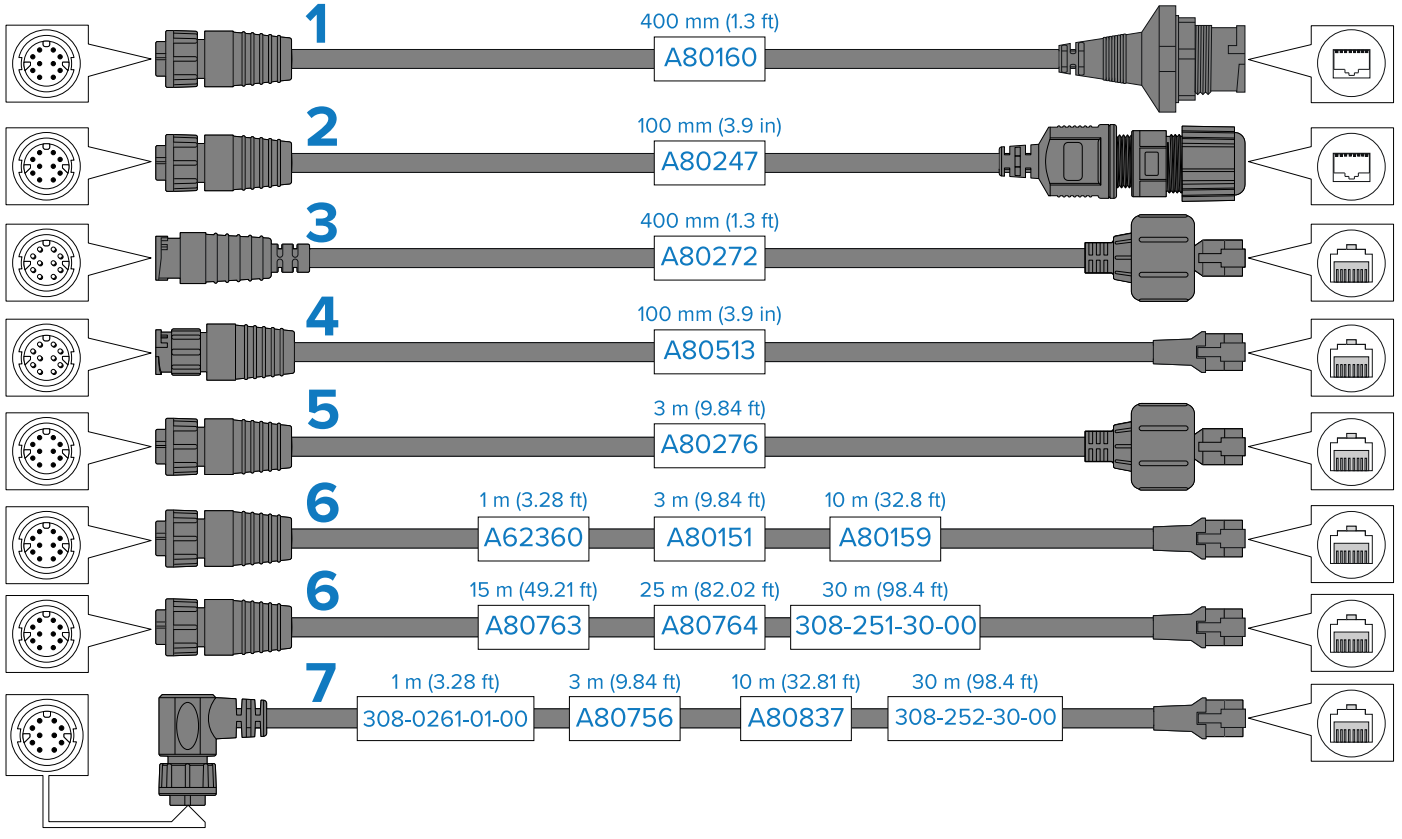

1. Adapter cable with a RayNet (female) socket on one end, and a waterproof (female) RJ45 (SeaTalk HS) socket on the other end, accepting the following cables with an RJ45 (SeaTalk HS) waterproof locking (male) plug:
   - A62245 (1.5 m).
   - A62246 (15 m).
2. Adapter cable with a RayNet (female) socket on one end, and a waterproof (female) RJ45 (SeaTalk HS) socket on the other end, along with a locking gland for a watertight fit.
3. Adapter cable with a RayNet (male) plug on one end, and an RJ45 (SeaTalk HS) waterproof (male) plug on the other end.

4. Adapter cable with a RayNet (male) plug on one end, and an RJ45 (male) plug on the other end.
5. Adapter cable with a RayNet (female) socket on one end, and an RJ45 (SeaTalk HS) waterproof (male) plug on the other end.
6. Adapter cable with a RayNet (female) socket on one end, and an RJ45 (male) plug on the other end.
7. Adapter cable with a right-angled RayNet (female) socket on one end, and an RJ45 (male) plug on the other end.

Appendix A Software release history

The list below is a cumulative list of the new features introduced in subsequent releases of the JCU-4 software, since the initial release (v1.0.12).

This list includes *new features* only. It does NOT include software maintenance items, such as bug fixes or performance improvements.
To download the software, and view the complete list of all software updates, including new features, bug fixes, and performance improvements, visit:

JCU-4 software download link
www.bit.ly/jcu4-download

JCU-4, v1.0.15 new features:
(Software release date: *August 2025*)

- Maintenance release.

JCU-4, v1.0.12 new features:
(Software release date: *April 2025*)

- Initial public release.

Index

A

About this device 62, 73, 85, 96, 107
Accessories
  Network adapter cables 133
  Network cables 131
  Networking 129
  RayNet cables 131
Applicable products 15
Assigning a netmask 54, 67, 80, 92, 102
Assigning a static IP address 54, 67, 80, 91, 102

B

Box contents 25
Brightness 57, 70, 83, 94, 104

C

Cable
  Bend radius 37
  Protection 37–38
  Routing 37
  Security 37
  Strain relief 37
Cables
  Extension 41, 44
  Network 41, 44
Cabling
  Circuit isolation 37
Camera detection 55, 68, 81, 92, 103
Circuit isolation 37
Cleaning
  Screen 118
Compass safe distance 31
Compatible maritime cameras 22
Configuration
  Web browser user interface 112
    Diagnostics 116
    Log in 111
    Overview 111
    Product information 112
    Setup 113
    Joystick 113
    Network 113
    Softkey 114
    System 115
Connecting cables 38
Connections
  Bare-ended wires 38
  Battery 48
  Distribution panel 48
  Grounding 50
  Wire 38
Connections overview 40
Contact details 124
Controllable cameras 61, 72, 85, 95, 106

D

Declaration of Conformity 12
Dimensions 28

E

Electromagnetic Compatibility 12, 30
EMC, *See* Electromagnetic Compatibility

F

Factory reset 63, 74, 86, 97, 108
Front cover fitting 35
Front cover removal 33
Fuse ratings 47
Fuse requirement 25, 46

I

Inline fuse 25, 46–47
Inline fuse rating 47
Installation
  Best practice 49
  Front cover fitting 35
  Front cover removal 33
  Mounting options 33

Retrofit mount 33
Retrofit mounting 34
Surface mount 33
Surface mounting 34
Interference 31
See also Compass safe distance

J

Joystick mode 61, 72, 84, 95, 106

L

Location requirements 30
General 30

M

Maintenance 11, 118
Mounting
Front cover fitting 35
Front cover removal 33
Mounting options 33
Retrofit mount 33
Retrofit mounting 34
Surface mount 33
Surface mounting 34

N

Network
cables 133
Cables 129
PoE 129
Switch 129
Network cable extension 41, 44
Network connections
Connections overview 40
System overview (example only) 22, 41
New features 135
Night mode 57, 70, 83, 94, 105

O

Operation
About this device 62, 73, 85, 96, 107
Brightness 57, 70, 83, 94, 104
Night mode 57, 70, 83, 94, 105
Camera detection 55, 68, 81, 92, 103
Controllable cameras 61, 72, 85, 95, 106
Factory reset 63, 74, 86, 97, 108
Installation 62, 72, 85, 96, 107
Joystick mode 61, 72, 84, 95, 106
Power down 56, 70, 82, 93, 104
Powering on the unit 53, 66, 79, 90, 101
Select camera 56, 69, 82, 93, 104
Settings reset 62, 73, 86, 96, 107
Startup wizard 53, 66, 79, 91, 101
Assigning a netmask 54, 67, 80, 92, 102
Assigning a static IP address 54, 67, 80, 91, 102
System selection 53, 66, 79, 91, 101
User-programmable buttons (UPBs) 75, 87, 97, 108
Operation (M100-Series / M200-Series)
Controlled camera 92
Controls overview 89
Operation (M300-Series)
Assigning user-programmable buttons (via Web interface) 87
Controls overview 78
Status icons 81
Operation (M400-Series / M500-Series)
Controls overview 65
Status icons 68
Operation (M400XR / M500-Series)
Ready to track 74
Operation (M460-Series / M560-Series)
Controlled camera 55
Controls overview 52
JCU settings 58
Ready to track 60
Shortcut keys 58
Status icons 55
Operation (MD-Series)
Assigning user-programmable buttons (via OSD menu) 108
Controlled camera 103
Controls overview 100

P

Parts supplied 25
Power
  Battery connection 48
  Cable extension 49
  Connection to battery 49
  Connection to distribution panel 48
  Distribution 47
  Distribution panel 48
  Fuses 25, 46–47
  Grounding 49
  Sharing a breaker 48
Power cable extension 49
Power connections
  Connections overview 40
  Direct power connection 46
  Multiple power sources 40, 43, 46
  Power options 40, 43, 46
  Power over Ethernet (PoE) 43
  Power Sourcing Equipment (PSE) 43
    PoE injector connection 44
    PoE network switch connection 43
Power down 56, 70, 82, 93, 104
Power over Ethernet (PoE) 43
Powering on the unit 53, 66, 79, 90, 101
Printed manual 15
Product dimensions 28
Product documentation
  Applicable documents 15
  Related documents 15
Product overview 21
Product recycling (WEEE) 13
Product support 124

R

RayNet
  cables 131, 133
Ready to track (M400XR / M500-Series) 74
Ready to track (M460-Series / M560-Series) 60
Required additional components 21
Retrofit mount 33
Retrofit mounting 34
RJ45
  cables 133
Routine checks 118

S

SeaTalkhs
  cables 133
Select camera 56, 69, 82, 93, 104
Service Center 124
Servicing 11, 118
Settings reset 62, 73, 86, 96, 107
Software release history 135
Software Release Summary 18
Software version 16
Spares 128
Startup wizard 53, 66, 79, 91, 101
Suppression ferrites 12, 31
    See also EMC
Surface mount 33
Surface mounting 34
System overview (example only) 22, 41
System selection 53, 66, 79, 91, 101

T

Technical specification
  Conformance specification 126
  Display specification 126
  Environmental specification 126
  Network specification 126
  Physical specification 126
  Power specification 126
Technical support 124
Thermal breaker 47
Thermal breaker rating 47
Tools required 33
Troubleshooting 120

U

User-programmable buttons (UPBs) 75, 87, 97, 108

V

Ventilation 30

W

Warranty 124
Web browser user interface
  Diagnostics 116
  Log in 111
  Overview 111
  Product information 112
  Setup 113
    Joystick 113
    Network 113
    Softkey 114
    System 115
WEEE Directive 13
What's in the box 25